



Operating Instructions
confocalDT 2421/2422

- | | | | | |
|-----------|----------------|----------------|-------------------|-------------------------|
| IFC2421 | IFS2402-0,4 | IFS2403-0,4 | IFS2404-2 | IFS2406-2,5/Vac(003) |
| IFC2422 | IFS2402-1,5 | IFS2403-1,5 | IFS2404-2(001) | IFS2406/90-2,5/Vac(001) |
| IFC2421MP | IFS2402/90-1,5 | IFS2403/90-1,5 | IFS2404/90-2 | IFS2406-3 |
| IFC2422MP | IFS2402-4 | IFS2403-4 | IFS2404/90-2(001) | IFS2406-10 |
| | IFS2402/90-4 | IFS2403/90-4 | IFS2405-0,3 | IFS2407-0,1 |
| | IFS2402-10 | IFS2403-10 | IFS2405-1 | IFS2407-0,1(001) |
| | IFS2402/90-10 | IFS2403/90-10 | IFS2405-3 | IFS2407/90-0,3 |
| | | | IFS2405-6 | IFS2407-3 |
| | | | IFS2405-10 | |
| | | | IFS2405-28 | |
| | | | IFS2405-30 | |

Confocal chromatic distance and thickness measurement

MICRO-EPSILON
MESSTECHNIK
GmbH & Co. KG
Koenigbacher Str. 15

94496 Ortenburg / Germany

Tel. +49 (0) 8542 / 168-0
Fax +49 (0) 8542 / 168-90
e-mail info@micro-epsilon.com
www.micro-epsilon.com

confocalDT 2421
confocalDT 2422



EtherCAT® is registered trademark and patented technology,
licensed by Beckhoff Automation GmbH, Germany.

Contents

| | | |
|-----------|---|-----------|
| 1. | Safety | 9 |
| 1.1 | Symbols Used | 9 |
| 1.2 | Warnings | 9 |
| 1.3 | Notes on CE Marking | 9 |
| 1.4 | Intended Use | 10 |
| 1.5 | Proper Environment..... | 10 |
| 2. | Functional Principle, Technical Data | 11 |
| 2.1 | Short Description | 11 |
| 2.2 | Measuring Principle | 11 |
| 2.3 | Glossary | 12 |
| 2.4 | Operating Modes | 12 |
| 2.5 | Sensors | 12 |
| 2.6 | Technical Data | 13 |
| 3. | Delivery | 17 |
| 3.1 | Unpacking, Included in Delivery..... | 17 |
| 3.2 | Storage | 17 |
| 4. | Installation | 18 |
| 4.1 | Controller IFC2421/2422 | 18 |
| 4.2 | Controller Operating Elements..... | 19 |
| 4.3 | Controller LEDs..... | 19 |
| 4.4 | Electrical Connections Controller..... | 20 |
| 4.4.1 | Handling of Pluggable Screw Terminals | 20 |
| 4.4.2 | Grounding, Shielding | 20 |
| 4.4.3 | Supply Voltage (Power)..... | 20 |
| 4.4.4 | RS422 | 20 |
| 4.4.5 | Ethernet, EtherCAT | 21 |
| 4.4.6 | Analog Output | 21 |
| 4.4.7 | Switching Outputs (Digital I/O)..... | 22 |
| 4.4.8 | Synchronization (Inputs/Outputs) | 23 |
| 4.4.9 | Triggering..... | 24 |
| 4.4.10 | Encoder Inputs | 25 |
| 4.5 | Sensor Cable, Optical Fiber | 26 |
| 4.6 | Sensors..... | 28 |
| 4.6.1 | Dimensions IFS2402 Sensors | 28 |
| 4.6.2 | Dimensions IFS2403 Sensors | 29 |
| 4.6.3 | Dimensions IFS2404 Sensors | 30 |
| 4.6.4 | Dimensions IFS2405 Sensors | 31 |
| 4.6.5 | Dimensions IFS2406 Sensors | 32 |
| 4.6.6 | Dimensions IFS2407 Sensors | 33 |
| 4.6.7 | Start of Measuring Range..... | 35 |
| 4.6.8 | Mounting, Installation Bracket..... | 36 |
| 4.6.8.1 | General..... | 36 |
| 4.6.8.2 | IFS2402 Sensors..... | 36 |
| 4.6.8.3 | IFS2403 Sensors..... | 36 |
| 4.6.8.4 | IFS2405, IFS2406 and IFS2407 Sensors..... | 37 |
| 4.6.8.5 | IFS2404 and IFS2407 Sensors | 38 |
| 5. | Operation | 39 |
| 5.1 | Commissioning..... | 39 |
| 5.2 | Operation Using Ethernet..... | 39 |
| 5.2.1 | Requirements | 39 |
| 5.2.2 | Access via Web Interface | 40 |
| 5.3 | Select a Sensor..... | 41 |
| 5.4 | Button Multifunction..... | 42 |
| 5.5 | Dark Reference | 42 |
| 5.6 | Place Target | 43 |
| 5.7 | Measurement Configuration | 44 |
| 5.8 | Video Signal..... | 45 |
| 5.9 | Signal Quality | 47 |
| 5.10 | Distance Measurement..... | 48 |
| 5.11 | Load / Save Settings..... | 50 |
| 6. | Advanced Settings | 51 |
| 6.1 | Inputs | 51 |
| 6.1.1 | Synchronization..... | 51 |
| 6.1.2 | Encoder Inputs | 51 |
| 6.1.2.1 | Interpolation | 52 |
| 6.1.2.2 | Maximum Value..... | 52 |
| 6.1.2.3 | Effect on the Reference Track..... | 52 |
| 6.1.2.4 | Set on Value | 52 |
| 6.1.2.5 | Reset Reference Mark..... | 52 |
| 6.2 | Data Recording..... | 53 |
| 6.2.1 | Measuring Rate | 53 |
| 6.2.2 | Reset Counter..... | 53 |
| 6.2.3 | Input Triggering | 54 |
| 6.2.3.1 | General..... | 54 |
| 6.2.3.2 | Triggering Data Recording | 55 |
| 6.2.3.3 | Trigger Time Difference..... | 55 |

| | | |
|------------|--|-----------|
| 6.2.4 | Masking the Evaluation Range..... | 56 |
| 6.2.5 | Exposure Mode | 57 |
| 6.2.6 | Peak Separation | 58 |
| | 6.2.6.1 Detection Threshold..... | 58 |
| | 6.2.6.2 Peak Modulation | 58 |
| 6.2.7 | Peak Selection, Number of Measurement Values | 60 |
| 6.2.8 | Material Selection | 61 |
| 6.3 | Signal Processing..... | 62 |
| 6.3.1 | Spike Correction..... | 62 |
| 6.3.2 | Calculation..... | 63 |
| | 6.3.2.1 Data Source, Parameter, Programs..... | 63 |
| | 6.3.2.2 Definitions | 64 |
| | 6.3.2.3 Measurement Averaging..... | 65 |
| 6.4 | Postprocessing | 68 |
| 6.4.1 | Calculation..... | 68 |
| | 6.4.1.1 Data Source, Parameter, Programs..... | 68 |
| | 6.4.1.2 Definitions | 69 |
| | 6.4.1.3 Measurement Averaging..... | 69 |
| 6.4.2 | Zeroing, Mastering | 70 |
| 6.4.3 | Statistics | 71 |
| 6.4.4 | Output Triggering | 72 |
| | 6.4.4.1 General..... | 72 |
| | 6.4.4.2 Triggering Data Output | 73 |
| 6.4.5 | Data Reduction, Output Data Rate..... | 73 |
| 6.4.6 | Error Handling (Hold Last Value) | 73 |
| 6.5 | Outputs | 74 |
| 6.5.1 | Digital Interfaces..... | 74 |
| | 6.5.1.1 RS422..... | 74 |
| | 6.5.1.2 Ethernet..... | 74 |
| | 6.5.1.3 Data Output RS422, Ethernet | 75 |
| 6.5.2 | Analog Output | 76 |
| | 6.5.2.2 Calculation of the Measurement Value at the Voltage Output | 77 |
| | 6.5.2.3 Characteristics Distance Value and Analog Output | 78 |
| 6.5.3 | Error Output, Switching Output..... | 79 |
| | 6.5.3.1 Assignment of the Switch Outputs (digital I/O) | 79 |
| | 6.5.3.2 Limit Value Settings..... | 79 |
| | 6.5.3.3 Switching Logic of Error Outputs | 79 |
| 6.5.4 | Output Interface..... | 80 |
| 6.6 | System Settings..... | 80 |
| 6.6.1 | Unit Website, Language | 80 |
| 6.6.2 | Key Lock | 80 |
| 6.6.3 | Load and Safe | 80 |
| 6.6.4 | Access Authorization | 80 |
| 6.6.5 | Reset Controller..... | 81 |
| 6.6.6 | Light Source | 81 |
| 6.6.7 | Change Ethernet to EtherCAT..... | 81 |
| 7. | Thickness Measurement..... | 82 |
| 7.1 | One Sensor, Transparent Target..... | 82 |
| | 7.1.1 Requirements | 82 |
| | 7.1.2 Preset..... | 82 |
| | 7.1.3 Material Selection | 82 |
| | 7.1.4 Video Signal | 82 |
| | 7.1.5 Signal Processing..... | 83 |
| | 7.1.6 Measurement Chart..... | 84 |
| 7.2 | Thickness Measurement with Two Sensors | 84 |
| | 7.2.1 Requirements | 84 |
| | 7.2.2 Preset..... | 85 |
| | 7.2.3 Video Signal | 85 |
| | 7.2.4 Postprocessing..... | 85 |
| | 7.2.5 Measurement Chart..... | 86 |
| 8. | Errors, Repair | 87 |
| 8.1 | Web Interface Communication | 87 |
| 8.2 | Changing the Sensor Cable for IFS2405 and IFS2406 Sensor | 87 |
| 8.3 | Changing the Protective Glass for IFS2405 and IFS2406 Sensors | 87 |
| | 8.3.1 IFS2405/IFS2406 | 87 |
| | 8.3.2 IFS2406/90-2,5 | 88 |
| 9. | Software Update | 89 |
| 10. | Software Support with MEDAQLib | 89 |
| 11. | Liability for Material Defects | 90 |
| 12. | Service, Repair | 90 |
| 13. | Decommissioning, Disposal | 90 |

| | |
|--|-----------|
| Appendix | 91 |
| A 1 Accessories, Services | 91 |
| A 2 Factory Settings | 92 |
| A 3 ASCII Communication with Controller | 93 |
| A 3.1 General | 93 |
| A 3.2 Commands Overview | 93 |
| A 3.3 General Commands | 97 |
| A 3.3.1 General | 97 |
| A 3.3.1.1 Help | 97 |
| A 3.3.1.2 Controller Information | 97 |
| A 3.3.1.3 Reply Type | 97 |
| A 3.3.1.4 Parameter Overview | 97 |
| A 3.3.1.5 Synchronization | 98 |
| A 3.3.1.6 Termination Resistor at Sync/Trig Input..... | 98 |
| A 3.3.1.7 Booting the Sensor | 98 |
| A 3.3.1.8 Reset Counter | 98 |
| A 3.3.2 Web interface..... | 98 |
| A 3.3.2.1 Language | 98 |
| A 3.3.2.2 Unit..... | 98 |
| A 3.3.3 User Level..... | 99 |
| A 3.3.3.1 Changing the User Level | 99 |
| A 3.3.3.2 Changing to User Level | 99 |
| A 3.3.3.3 Querying the User Level | 99 |
| A 3.3.3.4 Defining a Standard User | 99 |
| A 3.3.3.5 Changing the Password | 99 |
| A 3.3.4 Sensor | 99 |
| A 3.3.4.1 Info about Calibration Tables | 99 |
| A 3.3.4.2 Sensor Number..... | 99 |
| A 3.3.4.3 Sensor Information | 100 |
| A 3.3.4.4 Dark Correction..... | 100 |
| A 3.3.4.5 Warning Threshold in the Event of Contamination | 100 |
| A 3.3.4.6 LED..... | 100 |
| A 3.3.5 Triggering..... | 100 |
| A 3.3.5.1 Select Trigger Source | 100 |
| A 3.3.5.2 Output of Triggered Values, With/Without Averaging..... | 100 |
| A 3.3.5.3 Trigger Type | 101 |
| A 3.3.5.4 Active Level Trigger Input | 101 |
| A 3.3.5.5 Software Trigger Pulse..... | 101 |
| A 3.3.5.6 Number of Output Measurement Values..... | 101 |
| A 3.3.5.7 Trigger Level TrigIn..... | 101 |
| A 3.3.5.8 Step Size Encoder Triggering..... | 101 |
| A 3.3.5.9 Minimum Encoder Triggering | 101 |
| A 3.3.5.10 Maximum Encoder Triggering | 101 |
| A 3.3.6 Encoder | 102 |
| A 3.3.6.1 Encoder Interpolation Depth | 102 |
| A 3.3.6.2 Effect of the Reference Track..... | 102 |
| A 3.3.6.3 Encoder Value..... | 102 |
| A 3.3.6.4 Setting Encoder Value per Software..... | 102 |
| A 3.3.6.5 Reset the Detection of the First Marker Position | 102 |
| A 3.3.6.6 Maximum Encoder Value..... | 102 |
| A 3.3.7 Interfaces | 103 |
| A 3.3.7.1 Ethernet IP Settings | 103 |
| A 3.3.7.2 Setting for Ethernet Transmission of Measured Values | 103 |
| A 3.3.7.3 Count of Measurements per Ethernet Frame | 103 |
| A 3.3.7.4 Setting the RS422 Baud Rate | 103 |
| A 3.3.7.5 Change Ethernet / EtherCAT | 103 |
| A 3.3.8 Parameter Management, Load / Save Settings | 104 |
| A 3.3.8.1 Safe / Load Connection Settings..... | 104 |
| A 3.3.8.2 Show Changed Parameters..... | 104 |
| A 3.3.8.3 Export of Parameter Sets to PC..... | 104 |
| A 3.3.8.4 Import of Parameter Sets from PC..... | 104 |
| A 3.3.8.5 Default Settings..... | 104 |
| A 3.3.8.6 Safe, Show, Delete Measurement Settings | 105 |
| A 3.3.9 Measurement..... | 106 |
| A 3.3.9.1 Number of Peaks | 106 |
| A 3.3.9.2 Peak Selection | 106 |
| A 3.3.9.3 Number of Peaks and Enabling/Disabling Refractive Correction | 106 |
| A 3.3.9.4 Exposure Mode..... | 106 |
| A 3.3.9.5 Measuring Rate..... | 106 |
| A 3.3.9.6 Exposure Time | 107 |
| A 3.3.9.7 Masking the Evaluation Range..... | 107 |
| A 3.3.9.8 Peak Detection Threshold | 107 |
| A 3.3.9.9 Peak Modulation | 107 |
| A 3.3.10 Material Data Base | 108 |
| A 3.3.10.1 Material Table | 108 |
| A 3.3.10.2 Select Material..... | 108 |
| A 3.3.10.3 Display Material Properties..... | 108 |
| A 3.3.10.4 Edit Material Table..... | 109 |
| A 3.3.10.5 Delete a Material | 109 |
| A 3.3.10.6 Material Settings Multilayer Measurement | 109 |

| | | |
|-------------|--|------------|
| A 3.3.11 | Measurement Value Processing..... | 110 |
| A 3.3.11.1 | Spike Correction..... | 110 |
| A 3.3.11.2 | Statistics Calculation..... | 110 |
| A 3.3.11.3 | List of Signals for the Statistics..... | 110 |
| A 3.3.11.4 | Reset the Statistics Calculation..... | 110 |
| A 3.3.11.5 | Selection of a Signal for the Statistics..... | 110 |
| A 3.3.11.6 | List of Possible Signal for the Statistics to be Selected..... | 110 |
| A 3.3.11.7 | List of Signals which can be Parameterized..... | 111 |
| A 3.3.11.8 | Master Signal Parameterization..... | 111 |
| A 3.3.11.9 | List of Possible Signals for Mastering..... | 111 |
| A 3.3.11.10 | Masters / Zero..... | 111 |
| A 3.3.11.11 | Mastering Example..... | 111 |
| A 3.3.11.12 | Channel Selection..... | 113 |
| A 3.3.11.13 | List of possible calculation signals..... | 113 |
| A 3.3.11.14 | Two-Point Scaling Data Outputs..... | 113 |
| A 3.3.12 | Data Output..... | 114 |
| A 3.3.12.1 | Selection of Digital Output..... | 114 |
| A 3.3.12.2 | Data output Rate..... | 114 |
| A 3.3.12.3 | Reduction Counter of Measurement Value Output..... | 114 |
| A 3.3.12.4 | Error Processing..... | 114 |
| A 3.3.13 | Select Measurement Values to be Output..... | 115 |
| A 3.3.13.1 | General..... | 115 |
| A 3.3.13.2 | Data selection for Ethernet..... | 115 |
| A 3.3.13.3 | List of Possible Ethernet Signals..... | 115 |
| A 3.3.13.4 | List of Selected Signals, Transfer Sequence via Ethernet..... | 115 |
| A 3.3.13.5 | Data selection for RS422..... | 115 |
| A 3.3.13.6 | List of Possible RS422 Signals..... | 115 |
| A 3.3.13.7 | List of Selected Signals, Transfer Sequence via RS422..... | 115 |
| A 3.3.14 | Switching Outputs..... | 116 |
| A 3.3.14.1 | Error Switching Outputs..... | 116 |
| A 3.3.14.2 | Setting the Signal to be Evaluated..... | 116 |
| A 3.3.14.3 | List of Possible Signals for Error Output..... | 116 |
| A 3.3.14.4 | Setting Limit Values..... | 116 |
| A 3.3.14.5 | Setting Value..... | 116 |
| A 3.3.14.6 | Switching Behavior of Error Outputs..... | 116 |
| A 3.3.15 | Analog Output..... | 117 |
| A 3.3.15.1 | Data Selection..... | 117 |
| A 3.3.15.2 | List of Possible Signals for Analog Output..... | 117 |
| A 3.3.15.3 | Output range..... | 117 |
| A 3.3.15.4 | Setting the Scaling of DAC..... | 117 |
| A 3.3.15.5 | Setting the Scaling Range..... | 117 |
| A 3.3.16 | Key Functions..... | 118 |
| A 3.3.16.1 | Multifunction Button..... | 118 |
| A 3.3.16.2 | Signal Selection for Mastering with Multifunction Button..... | 119 |
| A 3.3.16.3 | Key Lock..... | 119 |
| A 3.4 | Measured Value Format..... | 120 |
| A 3.4.1 | Structure..... | 120 |
| A 3.4.2 | Video Signal..... | 121 |
| A 3.4.3 | Exposure Time..... | 121 |
| A 3.4.4 | Encoder..... | 121 |
| A 3.4.5 | Measured Value Counter..... | 121 |
| A 3.4.6 | Time Stamp..... | 121 |
| A 3.4.7 | Measurement Data (Displacements and Intensities)..... | 122 |
| A 3.4.8 | Trigger Time Difference..... | 122 |
| A 3.4.9 | Differences (thicknesses)..... | 122 |
| A 3.4.10 | Statistical values..... | 122 |
| A 3.5 | Measurement Data Format..... | 123 |
| A 3.5.1 | Data Format RS422 Interface..... | 123 |
| A 3.5.1.1 | Video Data..... | 123 |
| A 3.5.1.2 | Measurements..... | 123 |
| A 3.5.2 | Measurement Data Transmission to a Server via Ethernet..... | 125 |
| A 3.5.2.1 | General..... | 125 |
| A 3.5.2.2 | Measurement Frame..... | 126 |
| A 3.5.2.3 | Example..... | 127 |
| A 3.5.2.4 | Error Codes Ethernet Interface..... | 127 |
| A 3.5.3 | Ethernet Video Signal Transmission..... | 127 |
| A 3.6 | Warning and Error Messages..... | 128 |
| A 4 | EtherCAT Documentation..... | 130 |
| A 4.1 | General..... | 130 |
| A 4.2 | Switching between Ethernet and EtherCAT..... | 130 |
| A 4.3 | Introduction..... | 130 |
| A 4.3.1 | Structure of EtherCAT® Frames..... | 130 |
| A 4.3.2 | EtherCAT® services..... | 131 |
| A 4.3.3 | Addressing and FMMUs..... | 131 |
| A 4.3.4 | Sync managers..... | 132 |
| A 4.3.5 | EtherCAT state machine..... | 132 |
| A 4.3.6 | CANopen over EtherCAT..... | 132 |
| A 4.3.7 | Process data PDO mapping..... | 133 |
| A 4.3.8 | Service data SDO service..... | 133 |

| | | |
|------------|--|-----|
| A 4.4 | CoE object directory..... | 134 |
| A 4.4.1 | Communication-specific standard objects | 134 |
| A 4.4.1.1 | Overview | 134 |
| A 4.4.1.2 | Object 1001h: Device type | 134 |
| A 4.4.1.3 | Object 1008h: Manufacturer's device name..... | 134 |
| A 4.4.1.4 | Object 1009h: Hardware version | 134 |
| A 4.4.1.5 | Object 100Ah: Software version | 134 |
| A 4.4.1.6 | Object 1018h: Device identification | 134 |
| A 4.4.1.7 | TxPDO Mapping..... | 135 |
| A 4.4.1.8 | Object 1C00h: Type of synchronization manager | 137 |
| A 4.4.1.9 | Object 1C12h: RxPDO Assign | 137 |
| A 4.4.1.10 | Object 1C13h: TxPDO Assign | 137 |
| A 4.4.1.11 | Object 1C33h: Synchronization manager input parameters | 137 |
| A 4.4.2 | Manufacturer-specific objects | 138 |
| A 4.4.2.1 | Overview | 138 |
| A 4.4.2.2 | Object 2001h: User level..... | 140 |
| A 4.4.2.3 | Object 2005h: Controller info (continued) | 140 |
| A 4.4.2.4 | Object 2011h: Correction, channel 1..... | 140 |
| A 4.4.2.5 | Object 2020h: Load, save, factory settings..... | 141 |
| A 4.4.2.6 | Object 2021h: Preset | 141 |
| A 4.4.2.7 | Object 2022h: Measurement settings | 141 |
| A 4.4.2.8 | Object 203Fh: Sensor error | 142 |
| A 4.4.2.9 | Object 2101h: Reset | 142 |
| A 4.4.2.10 | Object 2105h: Factory settings..... | 142 |
| A 4.4.2.11 | Object 2107h: Reset counter | 142 |
| A 4.4.2.12 | Object 2133h: LED light source channel 1..... | 142 |
| A 4.4.2.13 | Object 2141h: Request video signal..... | 142 |
| A 4.4.2.14 | Object 2142h: Share video signal | 142 |
| A 4.4.2.15 | Object 2150h: Sensor channel 1 | 143 |
| A 4.4.2.16 | Object 2152h: Sensor selection channel 1 | 143 |
| A 4.4.2.17 | Object 2156h: Multilayer options for channel 1..... | 143 |
| A 4.4.2.18 | Object 2161h: Peak selection for channel 1..... | 143 |
| A 4.4.2.19 | Object 2162h: Peak options for channel 1 | 144 |
| A 4.4.2.20 | Object 2183h: Spike correction for channel 1..... | 144 |
| A 4.4.2.21 | Object 21B0h: Digital interfaces | 144 |
| A 4.4.2.22 | Object 21B1h: Select interface | 144 |
| A 4.4.2.23 | Object 21C0h: Ethernet | 145 |
| A 4.4.2.24 | Object 21D0h: Analog output | 145 |
| A 4.4.2.25 | Object 21F3h: Switching output 1 | 146 |
| A 4.4.2.26 | Object 2250h: Exposure mode for channel 1 | 147 |
| A 4.4.2.27 | Object 2251h: Measuring rate | 147 |
| A 4.4.2.28 | Object 24A0h: Keylock | 147 |
| A 4.4.2.29 | Object 24A2h: Multi-function button..... | 147 |
| A 4.4.2.30 | Object 25A0h: Encoder | 148 |
| A 4.4.2.31 | Object 2711h: Masking the evaluation range for channel 1 | 148 |
| A 4.4.2.32 | Object 2800h: Material information | 149 |
| A 4.4.2.33 | Object 2802h: Edit material table | 149 |
| A 4.4.2.34 | Object 2803h: Existing materials | 149 |
| A 4.4.2.35 | Object 2804h: Select material for channel 1 | 150 |
| A 4.4.2.36 | Object 2A00h: Mastering | 150 |
| A 4.4.2.37 | Object 2A10h: Statistics..... | 151 |
| A 4.4.2.38 | Object 2C00h: Measured value calculation for channel 1 | 152 |
| A 4.4.2.39 | Object 2CBFh: Sys Signals | 153 |
| A 4.4.2.40 | Object 2E00: User signals | 153 |
| A 4.5 | Mappable objects – process data | 154 |
| A 4.6 | Error codes for SDO services..... | 155 |
| A 4.7 | Oversampling..... | 156 |
| A 4.8 | Calculations | 158 |
| A 4.8.1 | Setting a filter..... | 158 |
| A 4.8.2 | Thickness calculation | 158 |
| A 4.8.3 | Channel calculation..... | 159 |
| A 4.9 | Operational modes | 159 |
| A 4.9.1 | Free run | 159 |
| A 4.9.2 | Distributed clocks SYNC0 synchronization | 159 |
| A 4.10 | Video signal via SDO | 159 |
| A 4.11 | STATUS LEDs in EtherCAT operation | 160 |
| A 4.12 | EtherCAT configuration with the Beckhoff TwinCAT® Manager..... | 161 |

1. Safety

System operation assumes knowledge of the operating instructions.

1.1 Symbols Used

The following symbols are used in these operating instructions:



Indicates a hazardous situation which, if not avoided, may result in minor or moderate injury.



Indicates a situation that may result in property damage if not avoided.



Indicates a user action.



Indicates a tip for users.

Measure

Indicates hardware or a software button/menu.

1.2 Warnings



Connect the power supply and the display/output device according to the safety regulations for electrical equipment.

- > Risk of injury
- > Damage to or destruction of the controller



The supply voltage must not exceed the specified limits.

- > Damage to or destruction of the controller

Avoid shocks and impacts to the controller and the sensor.

- > Damage to or destruction of the components

Never fold the fiber optics and do not bend them in tight radii.

- > Damage to or destruction of the fiber optics; failure of measuring device

Protect the ends of the fiber optics against contamination (use protective caps).

- > Incorrect measurement
- > Failure of the measuring device

Protect the cables against damage.

- > Failure of the measuring device

1.3 Notes on CE Marking

The following apply to the confocalDT 2421/2422 measuring system:

- EU Directive 2014/30/EU,
- EU Directive 2011/65/EG

Products which carry the CE mark satisfy the requirements of the EU directives cited and the relevant applicable harmonized European standards (EN). The measuring system is designed for use in industrial and residential applications.

The EU Declaration of Conformity is available to the responsible authorities according to EU Directive, article 10.

1.4 Intended Use

- The confocalDT 2421/2422 is designed for use in industrial and residential applications. It is used for
 - measuring displacement, distance, profile, thickness and surface inspection
 - monitoring quality and checking dimensions
- The system must only be operated within the limits specified in the technical data, see Chap. 2.6.
- The sensor must be used in such a way that no persons are endangered or machines and other material goods are damaged in the event of malfunction or total failure of the controller.
- Take additional precautions for safety and damage prevention in case of safety-related applications.

1.5 Proper Environment

- Protection class
 - Sensor: IP40 ... IP65, see Chap. 2.6
 - Controller: IP40

Optical inputs are excluded from protection class. Contamination leads to impairment or failure of the function.

- Temperature range
 - Operation:
 - Sensor: +5 ... +70 °C (+41 ... +158 °F)
 - Controller: +5 ... +50 °C (+41 ... +122 °F)
 - Storage: -20 ... +70 °C (-4 ... +158 °F)
- Humidity: 5 - 95 % (non-condensing)
- Ambient pressure: atmospheric pressure
- EMC: According to EN 61000-6-3 / EN 61326-1 (Class B) and EN 61 000-6-2 / EN 61326-1.

2. Functional Principle, Technical Data

2.1 Short Description

The confocalDT 2421/2422 measuring system includes:

- one or two sensors IFS24xx inclusive an optical fiber (optic cable),
- one controller IFC2421 or IFC2422,

The controller IFC2421 and IFC2422 comes with one or two integrated white light LED's as an internal light source.

The sensor is completely passive as it contains no heat sources or moving parts. This prevents any heat-related expansion, and ensures high precision of the measuring system.

The controller uses a spectrometer to convert any light signals that it receives from the sensor. It then calculates distance values using the integrated signal processor (CPU) and transfers the data via its interfaces or the analog output.

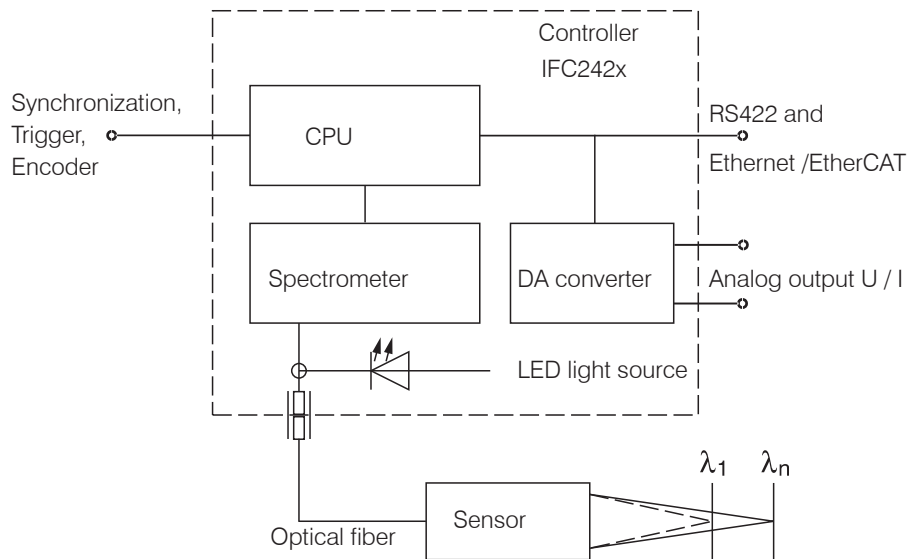


Fig. 1 Block diagram confocalDT 2421

2.2 Measuring Principle

The sensor projects polychromatic light (white light) to the target surface. The sensor lenses are designed to use controlled chromatic aberration to focus each light wavelength at a specific distance. In reverse, the sensor will then receive the light that is reflected from the target surface and transfer it to the controller. This is followed by the spectral analysis, and then the data stored in the controller are used to calculate the distances.

- **i** Sensor and controller are one unit, as the sensor's linearization table is stored in the controller.

This unique measuring system allows for highly precise measurement of applications. It is possible to measure both diffuse and reflecting surfaces. For transparent layered materials, thickness measurements can be conducted in addition to distance measurements. Shadowing is avoided because sender and receiver are aligned along one axis.

The excellent resolution and the small beam spot diameter make it possible to measure surface structures. However, measurement deviations may occur if the structure is of a similar size to the beam spot diameter or if the maximum tilt angle is exceeded (for example, with groove edges).

2.3 Glossary

- SMR Start of measuring range. Minimum distance between sensor surface and target
- MMR Mid of measuring range
- EMR End of measuring range (start of measuring range + measuring range)
Maximum distance between sensor face and target
- MR Measuring range

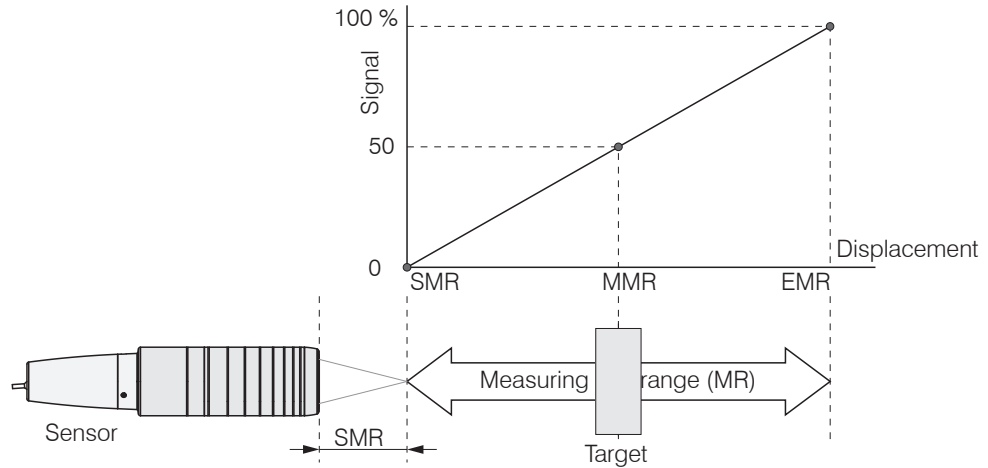


Fig. 2 Measuring range and output signal at the controller

2.4 Operating Modes

The sensor measuring ranges extend from a few tenths of micrometers to several millimeters. The controllers measure up to 6 peaks in the video signal.

Dual-channel systems (IFC2422) evaluate the measurement values of both channels.

For a quick start, we recommend to use presets defined for different target surfaces, see Chap. 5.2.2.

2.5 Sensors

The controller can be operated with up to 20 different sensors per channel. The required calibration tables are stored within the controller.

The sensor is a passive element in the measuring system: it contains neither moving nor heat-generating parts which might affect measuring accuracy due to thermal expansion in the sensor.

- Protect the ends of the sensor cables (optical fibers) and the sensor lens from dirt and contamination.

2.6 Technical Data

| Model | IFS | 2402-0,4 | 2402-1,5 | 2402-4 | 2402-10 | 2402/90-1,5 | 2402/90-4 | 2402/90-10 | |
|---------------------------------|---------------------------|---|-----------|---------|----------|---------------------|---------------------|---------------------|--|
| Measuring range | | 0.4 mm | 1.5 mm | 3.5 mm | 6.5 mm | 1.5 mm | 2.5 mm | 6.5 mm | |
| Start of measuring range | approx. | 1.5 mm | 0.9 mm | 1.9 mm | 2.5 mm | 2.5 mm ¹ | 2.5 mm ¹ | 3.5 mm ¹ | |
| Resolution ² | | 16 nm | 60 nm | 0.1 μm | 0.2 μm | 60 nm | 0.1 μm | 0.2 μm | |
| Linearity ³ | Displacement and distance | < ±0.3 μm | < ±1.2 μm | < ±3 μm | < ±13 μm | < ±1.2 μm | < ±3 μm | < ±13 μm | |
| Light spot diameter | | 10 μm | 20 μm | 20 μm | 100 μm | 20 μm | 20 μm | 100 μm | |
| Max. tilt angle ⁴ | | ±8° | ±5° | ±3° | ±1.5° | ±5° | ±3° | ±1.5° | |
| Numerical aperture | | 0.25 | 0.20 | 0.10 | 0.10 | 0.20 | 0.10 | 0.10 | |
| Connection | | integrated optical fiber 2 m with E2000/APC connector; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | | | | | | |
| Installation | | Clamping, mounting adapter (see accessories) | | | | | | | |
| Temperature range | Storage | -20... +70 °C (-4 ... +158 °F) | | | | | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | | | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY axis, 1000 shocks each | | | | | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz in XY axis, 10 cycles each | | | | | | | |
| Protection class (DIN-EN 60529) | | IP64 (front operated) | | | | IP40 | | | |
| Material | | Stainless steel housing, glass lenses | | | | | | | |
| Weight | | approx. 186 g (incl. optical fiber) | | | | | | | |

| Model | IFS | 2403-0,4 | 2403-1,5 | 2403-4 | 2403-10 | 2403/90-1,5 | 2403/90-4 | 2403/90-10 | |
|------------------------------------|---------------------------|---|-----------|---------|----------|---------------------|--------------------|---------------------|--|
| Measuring range | | 0.4 mm | 1.5 mm | 4 mm | 10 mm | 1.5 mm | 4 mm | 10 mm | |
| Start of measuring range | approx. | 2.5 mm | 8.0 mm | 14.7 mm | 11 mm | 4.9 mm ¹ | 12 mm ¹ | 8.6 mm ¹ | |
| Resolution ² | | 16 nm | 60 nm | 0.1 μm | 0.25 μm | 60 nm | 0.1 μm | 0.25 μm | |
| Linearity ³ | Displacement and distance | < ±0.3 μm | < ±1.2 μm | < ±3 μm | < ±20 μm | < ±1.2 μm | < ±3 μm | < ±20 μm | |
| | Thickness | < ±0.6 μm | < ±2.4 μm | < ±6 μm | < ±40 μm | < ±2.4 μm | < ±6 μm | < ±40 μm | |
| Light spot diameter | | 9 μm | 15 μm | 28 μm | 56 μm | 15 μm | 28 μm | 56 μm | |
| Max. tilt angle ⁴ | | ±20° | ±16° | ±6° | ±6° | ±16° | ±6° | ±6° | |
| Numerical aperture | | 0.5 | 0.3 | 0.15 | 0.15 | 0.3 | 0.15 | 0.15 | |
| Min. target thickness ⁵ | | 0.06 mm | 0.23 mm | 0.6 mm | 1.5 mm | 0.23 mm | 0.6 mm | 1.5 mm | |
| Connection | | integrated optical fiber 2 m with E2000/APC connector; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | | | | | | |
| Installation | | Clamping, mounting adapter (see accessories) | | | | | | | |
| Temperature range | Storage | -20 ... +70 °C (-4 ... +158 °F) | | | | | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | | | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY in XY axis, 1000 shocks each | | | | | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz in XY axis, 10 cycles each | | | | | | | |
| Protection class (DIN-EN 60529) | | IP64 (front operated) | | | | IP40 | | | |
| Material | | Stainless steel housing, glass lenses | | | | | | | |
| Weight | | approx. 200 g (incl. optical fiber) | | | | | | | |

1) Start of measuring range measured from sensor axis.

2) Average from 512 values at 1 kHz, near to the midrange onto optical flat

3) All data at constant ambient temperature (25 ± 1 °C) against optical flat; specifications can change when measuring different materials.

4) Maximum sensor tilt angle that produces a usable signal on reflecting surfaces. The accuracy decreases when approaching the limit values.

5) Glass with refractive index n = 1.5 in midrange

| Model | IFS | 2404-2 | 2404/90-2 | 2404-2(001) | 2404/90-2(001) |
|------------------------------------|---------------------------|---|---------------------|---|---------------------|
| Measuring range | | 2 mm | 2 mm | 2 mm | 2 mm |
| Start of measuring range | approx. | 14 mm | 9.6 mm ¹ | 14 mm | 9.6 mm ¹ |
| Resolution ² | | 40 nm | 40 nm | 40 nm | 40 nm |
| Linearity ³ | Displacement and distance | < ±1 μm | < ±1 μm | < ±1 μm | < ±1 μm |
| | Thickness | < ±2 μm | < ±2 μm | < ±2 μm | < ±2 μm |
| Light spot diameter | | 10 μm | 10 μm | 10 μm | 10 μm |
| Max. tilt angle ⁴ | | ±12° | ±12° | ±12° | ±12° |
| Numerical aperture | | 0.25 | 0.25 | 0.25 | 0.25 |
| Min. target thickness ⁵ | | 0.1 mm | 0.1 mm | 0.1 mm | 0.1 mm |
| Connection | | pluggable optical fiber via FC socket, type C2404-x; standard length 2 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | pluggable optical fiber via FC socket, standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | |
| Installation | | Clamping, mounting adapter (see accessories) | | | |
| Temperature range | Storage | -20 ... +70 °C (-4 ... +158 °F) | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY axis, 1000 shocks each | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz in XY axis, 10 cycles each | | | |
| Protection class (DIN-EN 60529) | | IP65 (front operated) | | | |
| Material | | Stainless steel housing, glass lenses | | | |
| Weight | | approx. 20 g | approx. 30 g | approx. 40 g | approx. 50 g |

| Model | IFS | 2405-0,3 | 2405-1 | 2405-3 | 2405-6 | 2405-10 | 2405-28 | 2405-30 |
|------------------------------------|---------------------------|---|------------|------------|-----------|-----------|-----------|-----------|
| Measuring range | | 0.3 mm | 1 mm | 3 mm | 6 mm | 10 mm | 28 mm | 30 mm |
| Start of measuring range | approx. | 6 mm | 10 mm | 20 mm | 63 mm | 50 mm | 220 mm | 100 mm |
| Resolution ² | | 10 nm | 28 nm | 36 nm | 18 nm | 60 nm | 250 nm | 180 nm |
| Linearity ³ | Displacement and distance | < ±0.15 μm | < ±0.25 μm | < ±0.75 μm | < ±1.5 μm | < ±2.5 μm | < ±7.0 μm | < ±7.5 μm |
| | Thickness | < ±0.3 μm | < ±0.5 μm | < ±1.5 μm | < ±3 μm | < ±5 μm | < ±14 μm | < ±15 μm |
| Light spot diameter | | 6 μm | 8 μm | 9 μm | 31 μm | 16 μm | 60 μm | 50 μm |
| Max. tilt angle ⁴ | | ±34° | ±30° | ±24° | ±10° | ±17° | ±5° | ±9° |
| Numerical aperture | | 0.6 | 0.55 | 0.45 | 0.22 | 0.3 | 0.1 | 0.2 |
| Min. target thickness ⁵ | | 0.015 mm | 0.05 mm | 0.15 mm | 0.3 mm | 0.5 mm | 2.2 mm | 1.5 mm |
| Connection | | pluggable optical fiber via FC socket; standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | | | | | |
| Installation | | Clamping, mounting adapter (see accessories) | | | | | | |
| Temperature range | Storage | -20 ... +70 °C (-4 ... +158 °F) | | | | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY axis, 1000 shocks each | | | | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz in XY axis, 10 cycles each | | | | | | |
| Protection class (DIN-EN 60529) | | IP65 (front operated) | | | | | | |
| Material | | Aluminum housing, glass lenses | | | | | | |
| Weight | approx. | 140 g | 125 g | 225 g | 217 g | 500 g | 750 g | 730 g |

1) Start of measuring range measured from sensor axis.

2) Average from 512 values at 1 kHz, near to the midrange onto optical flat

3) All data at constant ambient temperature (25 ± 1 °C) against optical flat; specifications can change when measuring different objects.

4) Maximum sensor tilt angle that produces a usable signal on reflecting surfaces. The accuracy decreases when approaching the limit values.

5) Glass with refractive index $n = 1.5$ throughout the entire measuring range. In the mid of the measuring range, also thinner layers can be measured.

| Model | IFS | 2406-2,5/VAC(003) | 2406/90-2,5/VAC(001) | 2406-3 | 2406-10 |
|------------------------------------|---------------------------|--|----------------------|-----------------------|---------------|
| Measuring range | | 2.5 mm | | 3 mm | 10 mm |
| Start of measuring range | approx. | 17.2 mm | 12.6 mm ¹ | 75 mm | 27 mm |
| Resolution ² | | 24 nm | | 50 nm | 60 nm |
| Linearity ³ | Displacement and distance | < ± 0.75 μm | | < ± 1.5 μm | < ± 2.5 μm |
| | Thickness | < ± 1.5 μm | | < ± 3.0 μm | < ± 5 μm |
| Light spot diameter | | 10 μm | | 35 μm | 15 μm |
| Max. tilt angle ⁴ | | ±16° | | ±6.5° | ±13.5° |
| Numerical aperture | | 0.3 | | 0.14 | 0.25 |
| Min. target thickness ⁵ | | 0.125 mm | | 0.15 mm | 0.5 mm |
| Connection | | pluggable optical fiber via FC socket, type C240x-x (01); standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | | |
| Installation | | Clamping, mounting adapter (see accessories) | | | |
| Temperature range | Storage | -20 ... +70 °C (-4 ... +158 °F) | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY axis, 1000 shocks each | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz in XY axis, 10 cycles each | | | |
| Protection class (DIN-EN 60529) | | IP40 (vacuum compatible) | | IP65 (front operated) | |
| Material | | Stainless steel housing, glass lenses | | | |
| Weight | | approx. 105 g | approx. 130 g | approx. 99 g | approx. 128 g |

| Model | IFS | 2407-0,1 | 2407-0,1(001) | 2407/90-0,3 | 2407-3 |
|------------------------------------|---------------------------|---|------------------------|---|---|
| Measuring range | | 0.1 mm | | 0.3 mm | 3 mm |
| Start of measuring range | approx. | 1 mm | | 5.3 mm | 28 mm |
| Resolution ² | | 3 nm | | 10 nm | 20 nm |
| Linearity ³ | Displacement and distance | < ±0.05 μm | | < ±0.15 μm | < ±0.75 μm |
| | Thickness | < ±0.1 μm | | < ±0.3 μm | < ±1.5 μm |
| Light spot diameter | | 3 μm | 4 μm | 6 μm | 9 μm |
| Max. tilt angle ⁴ | | ±48° | ±48° | ±27° | ±30° |
| Numerical aperture | | 0.8 | 0.7 | 0.5 | 0.53 |
| Min. target thickness ⁵ | | 0.005 mm | | 0.015 mm | 0.15 mm |
| Connection | | pluggable optical fiber via FC socket; standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | | pluggable optical fiber via FC socket, type C2407-x; standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm | pluggable optical fiber via FC socket; standard length 3 m; extension up to 50 m; bending radius: static 30 mm, dynamic 40 mm |
| Installation | | Clamping, mounting adapter (see accessories) | | Mounting holes (2x M2) | Clamping, mounting adapter (see accessories) |
| Temperature range | Storage | -20 ... +70 °C (-4 ... +158 °F) | | | |
| | Operation | +5 ... +70 °C (+41 ... +158 °F) | | | |
| Shock (DIN-EN 60068-2-29) | | 15 g / 6 ms in XY axis, 1000 shocks each | | | |
| Vibration (DIN-EN 60068-2-6) | | 2 g / 20 Hz ... 500 Hz axis, 10 cycles each | | | |
| Protection class (DIN-EN 60529) | | IP65 (front operated) | | | |
| Material | | Stainless steel housing, glass lenses | | | Aluminum housing, glass lenses |
| Weight | | approx. 36 g | | approx. 30 g | approx. 550 g |
| Features | | Sensor with high numerical aperture | Light-intensive sensor | - | - |


1) Start of measuring range measured from sensor axis.

2) Average from 512 values at 1 kHz, near to the midrange onto optical flat

3) All data at constant ambient temperature (25 ± 1 °C) against optical flat; specifications can change when measuring different objects.

4) Maximum sensor tilt angle that produces a usable signal on reflecting surfaces. The accuracy decreases when approaching the limit values.

5) Glass with refractive index $n = 1.5$ throughout the entire measuring range. In the mid of the measuring range, also thinner layers can be measured.

| Controller | IFC2421 | IFC2421MP | IFC2422 | IFC2422MP |
|---|---|---|----------------|-----------|
| Measurement channels | 1 | 1 | 2 | 2 |
| Multi peak measurement per channel | 2 Peaks | 6 Peaks | 2 Peaks | 6 Peaks |
| Light source | 1 LED, white | | 2 LED's, white | |
| Measuring rate | continuously adjustable 6.5 kHz ... 0.1 kHz, step size 1 Hz | | | |
| Resolution | Ethernet / EtherCAT | 1 nm | | |
| | RS422 | 18 bit | | |
| | Analog | 16 bit | | |
| Storage, per channel | up to 20 calibration tables for different sensors per channel, menu selection | | | |
| Controller inputs/outputs | Sync-In/Trig-In, Sync-Out Error1-Out, Error2-Out Encoder (2x A, B, Index) EtherCAT/Ethernet/RS422 Analog: current, voltage (16 bit D/A converter) | | | |
| EtherCAT |  | | | |
| Operating elements, controller display | Multifunction button (as well as dark alignment and reset to factory setting after 10 sec) LED's for intensity, range, status, supply voltage | | | |
| Supply voltage, power consumption | 24 VDC \pm 15 %, approx. 10 W | | | |
| Housing | Aluminum case for DIN rail mounting | | | |
| Protection class | IP 40 | | | |
| Temperature range | operation | +5 °C ... +50 °C (+41 ... +122 °F) | | |
| | storage | -20 °C ... +70 °C (-4 ... +158 °F) | | |
| Permissible ambient light | 30,000 lx | | | |
| Safety; EMC interference emission Interference resistance | CE EN 61 000-6-3 / DIN EN 61326-1 (class B) EN 61 000-6-2 / DIN EN 61326-1 | | | |
| Shock | 15 g, 6 ms | | | |
| Vibration | 2g / 10 Hz ... 500 Hz | | | |
| Optical fiber cable length | Sensor | 2 - 50 m | | |
| | Connector | E2000 | | |
| Max. cable lengths (all cables are shielded) | EtherCAT, Ethernet | CAT5E; cable length <100 m | | |
| | Supply, RS422, Sync./error | < 30 m | | |
| | Analog | < 30 m | | |
| | Encoder | < 30 m, if the power supply of the controller is not used < 3 m, if the power supply of the controller is used | | |

3. Delivery

3.1 Unpacking, Included in Delivery

- 1 Controller IFC2421/2422
- 1 Sensor with sensor cable (optical fiber)
- 1 RJ patch cable Cat5 2 m
- 1 Test certificate
- 1 CD incl. operating instructions and utilities

- ➡ Carefully remove the components of the measuring system from the packaging and ensure that the goods are forwarded in such a way that no damage can occur.
- ➡ Check the delivery for completeness and shipping damage immediately after unpacking.
- ➡ If there is damage or parts are missing, immediately contact the manufacturer or supplier.

3.2 Storage

- Temperature range storage: -20 ... +70 °C (-4 ... +158 °F)
- Humidity: 5 - 95 % (non-condensing)

4. Installation

4.1 Controller IFC2421/2422

Place the controller IFC2421/2422 on a level surface, or install it at a location of your choice (e.g. in a switch cabinet) using a DIN EN 60715 mounting rail (DIN rail TS35).

When using a DIN rail, an electrical connection (potential equalization) is established between the controller case and the rail.

➡ To remove, push the controller upwards, and pull it forwards.

ⓘ When attaching the controller, ensure that no connections, operating or display elements are covered.

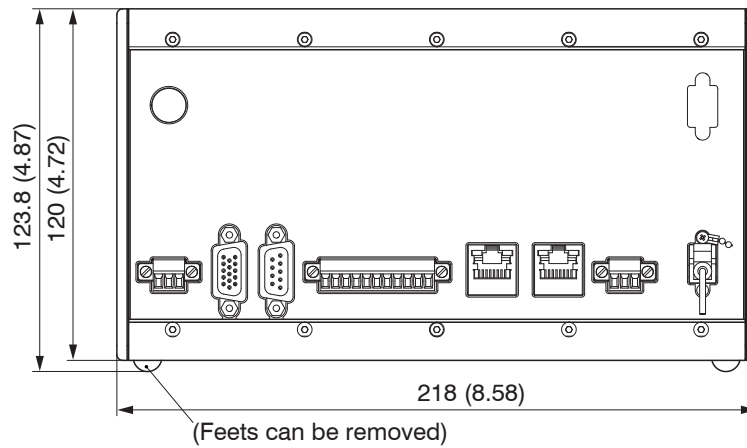


Fig. 3 Dimensional drawing controller IFC2421, dimensions in mm

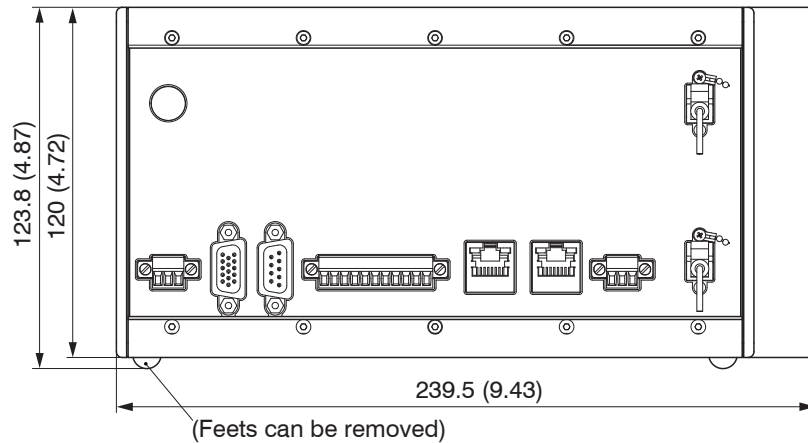


Fig. 4 Dimensional drawing controller IFC2422, dimensions in mm

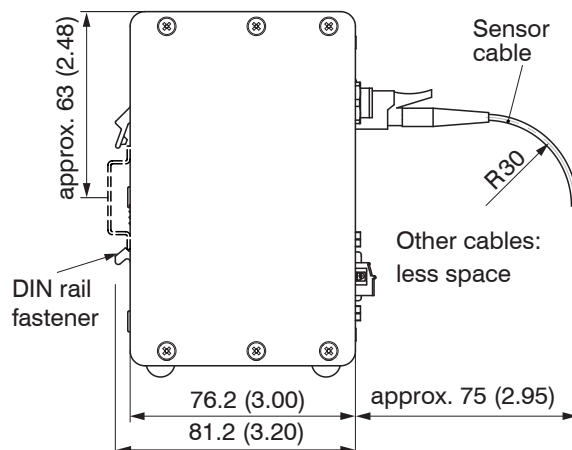


Fig. 5 Dimensional drawing side view, controllers IFC2421/2422

4.2 Controller Operating Elements

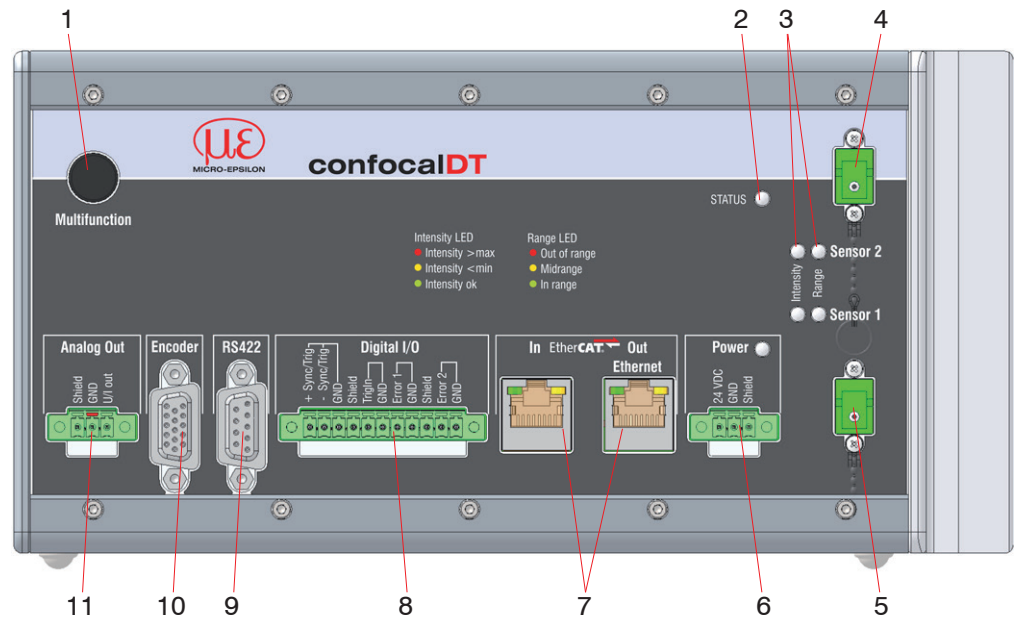


Fig. 6 Front view Controller IFC2422 (IFC2421)

| | | | |
|---|--|----|-----------------------|
| 1 | Button Multifunction (dark reference, light source) ¹ | 7 | Ethernet / EtherCAT |
| 2 | Status LED | 8 | Digital I/O |
| 3 | LEDs Intensity, Range | 9 | RS422 connector |
| 4 | Sensor connection channel 2 (optical fiber) ² | 10 | Encoder connector |
| 5 | Sensor connection channel 1 (optical fiber) | 11 | Analog output (U / I) |
| 6 | Power supply connection, LED Power On | | |

1) Resetting to factory settings: press the Multifunction button for more than 10 sec.
 2) On controller IFC2422 only.

4.3 Controller LEDs

| | | |
|---------------------------|--|--|
| Power on | Green | Active operating voltage |
| Status | Off | No errors |
| | Flashing red | Processing error |
| | If EtherCAT is active, meaning of the LED is conform with the EtherCAT guidelines. | |
| Intensity channel 1/2 | Flashing red | Dark signal acquisition in progress |
| | Red | Signal in saturation |
| | Yellow | Signal too low |
| | Green | Signal OK |
| Range channel 1/2 | Flashing red | Dark signal acquisition in progress |
| | Red | No target object, or target object outside the measuring range |
| | Yellow | Target object near the midrange |
| | Green | Target object within the measuring range |

Fig. 7 Description of the controller LEDs

The LED's Intensity and Range flashes with their current color during a synchronization error.

4.4 Electrical Connections Controller

4.4.1 Handling of Pluggable Screw Terminals

The controller IFC2421/2422 has three pluggable screw terminals for supply, digital I/O and analog out, which are included as accessories.

➔ Remove approx. 7 mm of the connecting wire isolation (0.14 ... 1.5 mm²).

➔ Connect the connecting wires.

ⓘ Use two captive screws to fix the screw terminals.

4.4.2 Grounding, Shielding

All inputs/outputs are electrically connected to the supply voltage ground (GND). Merely the Ethernet/EtherCAT ports are electrically isolated.


The the ground connections (GND, GND422, GND_ENC) of each group are interconnected via chokes.

The Shield connections of each connection group are only connected with the controller housing and are used for cable screen connections with individual connections (power, analog output, switching outputs, synchronization and trigger input).

Only use screened cables shorter than 30 m and connect the cable screen to the Shield or the connector housing.

4.4.3 Supply Voltage (Power)

- 3-pin pluggable screw terminal (24 VDC, GND, Shield),
- 24 VDC ± 15 %, $I_{max} < 1A$
- not electrically isolated, GND is electrically connected to the GND wiring for switching outputs, synchronization and encoder input.

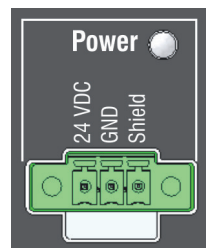

➔ Use a shielded cable of less than 30 m.

Fig. 8 Supply connection and LED on the controller IFC2421/2422

When the supply voltage has been connected, the Power On LED lights up.

4.4.4 RS422

- Differential signals in accordance with EIA-422, electrically isolated from the supply voltage.
- Receiver Rx with a 120 ohm internal terminating resistor.

➔ On the evaluation unit (receiver), terminate the transmitter input (Tx) with 90 ...120 Ohm.

➔ Use a shielded twisted cable of less than 30 m.

➔ Connect the earth connections.

ⓘ The pin assignment for the 9-pin D-sub connector is not standardized.

| Pin | Name | Signal |
|-------|--------|---------------|
| 3 | RX - | Receiver - |
| 2 | RX + | Receiver + |
| 5 | GND422 | RS422 ground |
| 9 | TX + | Transmitter + |
| 1 | TX - | Transmitter - |
| Cover | Shield | Cable shield |

Fig. 9 Pin assignment for the 9-pin D-sub connector (RS422)

4.4.5 Ethernet, EtherCAT

Potential isolated RJ 45 standard connector for connecting the controller IFC2421/2422

- to an Ethernet network (PC) or
- the EtherCAT bus system (IN-Port).

➡ Use a shielded Ethernet cable (Cat5E, patch cable, 2 m, included in the delivery, overall cable length less than 100 m to connect controller and network.

Both LEDs on the plug-in connector light up to indicate that the connection was successful and is active.

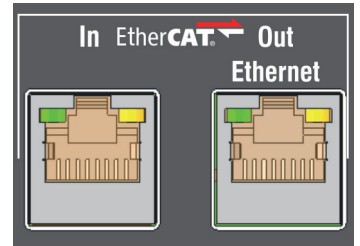


Fig. 10 Connectors RJ45 for Ethernet, EtherCAT

The measuring device can be configured through the web interface or using ASCII commands (e. g. Telnet), see Chap. A 3, or with EtherCAT objects.

4.4.6 Analog Output

The two alternative analog outputs (voltage or current) are connected to the 3-pin screw terminal and are electrically connected to the supply voltage.

Voltage: Pin U/I_{out} and Pin GND,

R_i approx. 50 Ohm, R_L > 10 MOhm

Slew rate (no C_L, R_L ≥ 1 kOhm) typ. 0.5 V/μs

Slew rate (with C_L = 10 nF, R_L ≥ 1 kOhm) typ. 0.4 V/μs

Current: Pin U/I_{out} and Pin GND

R_L ≤ 500 Ohm

Slew rate (no C_L, R_L = 500 Ohm) typ. 1.6 mA/μs

Slew rate (with C_L = 10 nF, R_L = 500 Ohm) typ. 0.6 mA/μs

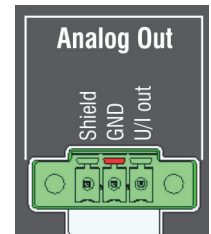


Fig. 11 Analog outputs on the controller

➡ Use a shielded cable of less than 30 m.

Pin 3 (Shield) is connected to the cover.

Alternatively, the following values may be defined for the output range:

Voltage: 0 ... 5 V; 0 ... 10 V;

Current: 4 ... 20 mA.

Only one reading can be produced as voltage or current.

i The socket is mechanically coded (red plug-in) in order to avoid any confusion with the power supply.

4.4.7 Switching Outputs (Digital I/O)

Both switching outputs **Error 1/2** on the 11-pin pluggable screw terminal are electrically connected to the supply voltage.

The switching behavior (NPN, PNP, Push-Pull) is programmable, $I_{max} = 100 \text{ mA}$.

The maximum auxiliary voltage for a switching output with NPN switching behavior is 30 V.

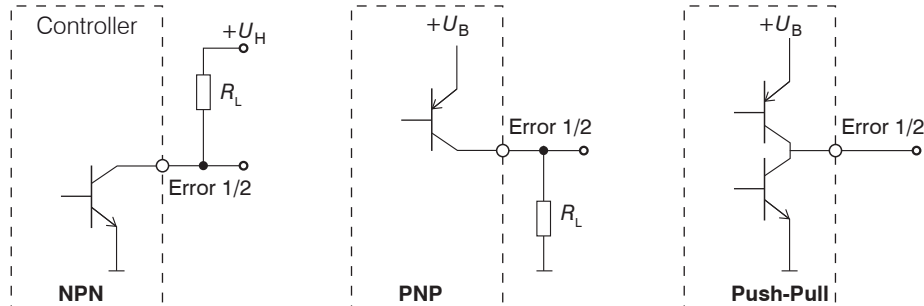


Fig. 12 Output behavior and wiring of the switching outputs **Error 1/2**

Switching output 1: pin **Error 1** and **GND**

Switching output 2: pin **Error 2** and **GND**

Cable shield: Shield is connected to the cover. Connect the cable shield.

All **GND** pins are interconnected, and they are connected to the operating voltage ground.

➡ Use a shielded cable of less than 30 m.

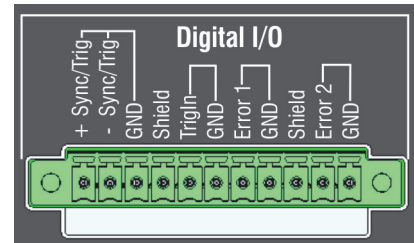


Fig. 13 Digital I/O on the controller

| | |
|--|----------------------------------|
| Output level (no load resistance), with a supply voltage of 24 VDC | Low < 1 V; High > 23 V |
| Saturation voltage at $I_{max} = 100 \text{ mA}$ | Low < 2.5 V (Output - GND) |
| | High < 2.5 V (Output - $+ U_B$) |

The saturation voltage is measured between output and **GND**, with output = Low, or between output and $+ U_B$, with output = High.

| Description | Output active (error) | Output passive (no error) |
|--------------------|-----------------------|---------------------------|
| NPN (Low side) | GND | $+ U_B$ |
| PNP (High side) | $+ U_B$ | GND |
| Push-Pull | $+ U_B$ | GND |
| Push-Pull, negated | GND | $+ U_B$ |

Fig. 14 Switching behavior of the error outputs

NOTICE

The load resistance R_L can be dimensioned according to the limit values ($I_{max} = 100 \text{ mA}$, $U_{Hmax} = 30 \text{ V}$) and requirements. Do not connect inductive loads, e.g. a relay without parallel protection diodes.

4.4.8 Synchronization (Inputs/Outputs)

For the pin assignment of the 11-pin pluggable screw terminal, see Fig. 13

- +Sync/Trig and -Sync/Trig pins: symmetrical synchronization output/input or trigger input, function and (I/O) direction are programmable
- The terminating resistor R_T (120 Ohm) can be switched on and off via software, see Chap. 6.1.1.

All GND pins are interconnected, and they are connected to the operating voltage ground.

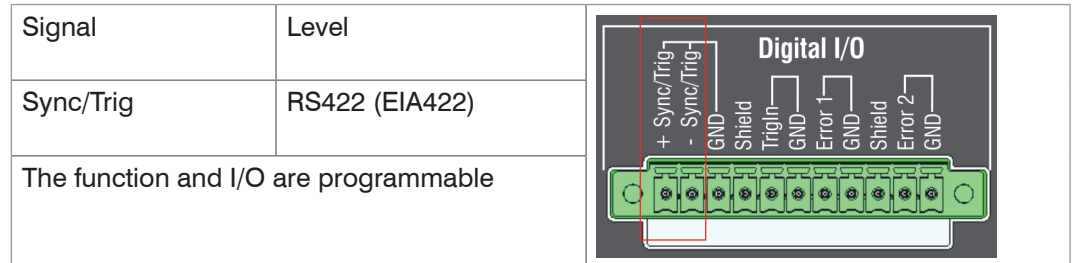


Fig. 15 Signal level synchronization, triggering

- ➡ Activate the terminating resistor 120 Ohm in the last controller (slave n) in the chain.

Star synchronization

- ➡ Connect the pins +Sync/Trig and -Sync/Trig of controller 1 (master) in star configuration with the pins +Sync/Trig and -Sync/Trig of controller 2 (slave) to controller n, in order to synchronize two or more controllers, see Fig. 16.
- Partial cable length less than 30 m with star synchronization.

Cascaded synchronization

- ➡ Connect the pins +Sync/Trig and -Sync/Trig of controller 1 (master) with the pins +Sync/Trig and -Sync/Trig of controller 2 (slave 1). Connect the pins of downstream controllers in order to synchronize two or more controllers, see Fig. 16.
- Total cable length less than 30 m with cascaded synchronization.

- ➡ Use a shielded twisted cable.
- ➡ Connect the cable shield to Shield.
- ➡ Set Controller 1 to Master and the other controllers to Slave, see Chap. 6.1.1.

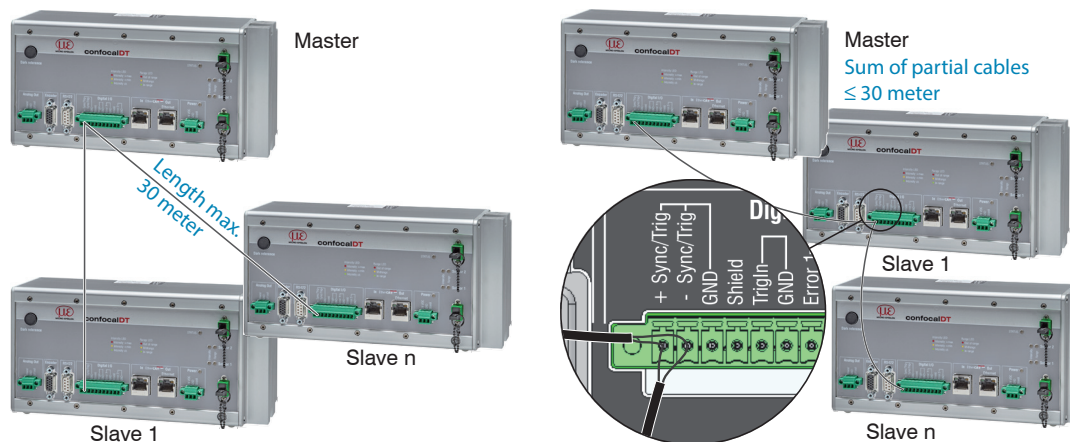


Fig. 16 Synchronization of more controllers, star synchronization (left), cascaded (right)

- ➡ Interconnected all GND, if the controllers are not supplied from a common power supply.
- If the controller are operated via the EtherCAT interface, then a synchronization even without the sync cable can be realized.

4.4.9 Triggering

The pluggable 11-pin screw terminal with Digital I/O has two trigger inputs.

Sync/Trig input

The Sync/Trig port can also be used as symmetrical trigger input for one or more controllers.

Program the Sync/Trig controller ports as trigger input.

The trigger source (master) must provide a symmetrical output signal according to the RS422 standard.


For asymmetrical trigger sources, we recommend the SU4 level converter (3 channels TTL/HTL to RS422) between trigger signal source and controller.

Encoders are not suitable for trigger purposes.

TrigIn input

The TrigIn switching input is equipped with an internal pull-up resistor of 15 kOhm. An open input is identified as High.

Trigger sources can be switching contacts, transistors (NPN, N-channel FET) and SPS outputs.

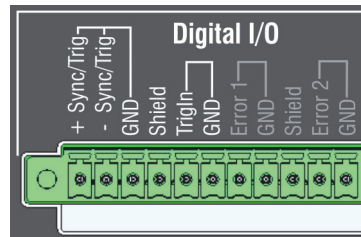

Electrical properties

- Programmable logic (TTL/HTL),
- TTL: Low level ≤ 0.8 V; High level ≥ 2 V
- HTL: Low level ≤ 3 V; High level ≥ 8 V (max. 30 V),
- Minimum pulse width 50 μ s

4.4.10 Encoder Inputs

Two encoders can be connected simultaneously and powered with 5V using the 15-pin HD-sub connector.

Each encoder provides A, B and N signals (zero pulse, reference, index). The maximum pulse frequency is 1MHz.

RS422 level (symmetrical) for A, B, N

Encoder supply 5 V: each 5 V, max. 300 mA





Fig. 17 15-pin HD connector

| Encoder | Pin | Signal | Encoder | Pin | Signal |
|-------------------|------------------------|--------------------|------------------------|--------------|----------|
| 1 | 1 | GND ENC1 | 2 | 11 | GND ENC2 |
| | 5 | A1+ | | 3 | A2+ |
| | 4 | A1- | | 2 | A2- |
| | 10 | N1+ | | 8 | N2+ |
| | 9 | N1- | | 7 | N2- |
| | 15 | B1+ | | 13 | B2+ |
| | 14 | B1- | | 12 | B2- |
| 6 | ENC U _p +5V | 6 | ENC U _p +5V | | |
| Connector housing | | Controller housing | | Cable shield | |

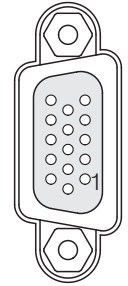

View on solder pin side male cable connector

Fig. 18 Pin assignment encoder inputs

➡ Use a shielded cable of less than 3 m. Connect the cable shield to the cover.

Connection requirements

The encoders must provide symmetrical RS422 signals.

If the encoder has no RS422 outputs, we recommend a level converter SU4 (3 channels TTL/HTL to RS422) between trigger signal source and controller.

Both encoders can be supplied with the controller voltage ENC U_p +5V and loaded with a maximum of 300 mA. When using the power supply of the 15-in HD socket, the cable length to the encoder must be less than 3 m. When the encoder is supplied externally, cable lengths up to 30 meters are possible.

The inputs are not electrically isolated from the supply voltage.

4.5 Sensor Cable, Optical Fiber

Sensor and controller are connected through an optical fiber.

- Do not shorten or lengthen the optical fibers.
- Do not pull or hold the sensor on the optical fiber.
- The optical fibers has a diameter of 50 μm .


Do not soil the connectors, because this would lead to particle deposition in the controller and therefore to strong loss of light. Cleaning of the connectors requires the corresponding know-how and a fiber microscope for control.

Basic Rules

Avoid





- any contamination of the connector, e. g. dust or finger prints, and frequent connecting and disconnecting
- any mechanical stress of the fiber (kinking, squeezing, pulling, twisting, knotting etc.)
- strong bending of the fiber. as the optical fiber is damaged thereby rapidly and this leads to permanent damage through micro-cracks

Please never underrun the allowed bending radius.

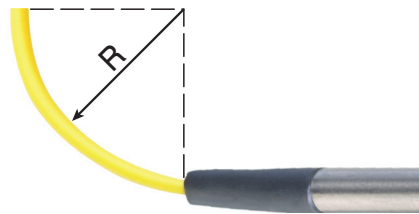

Fixed:
R = 30 mm or more

Flexible:
R = 40 mm or more

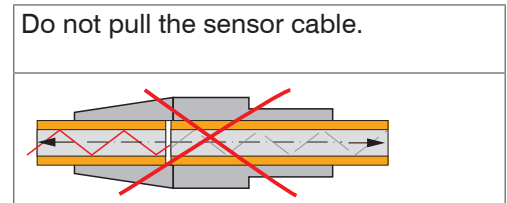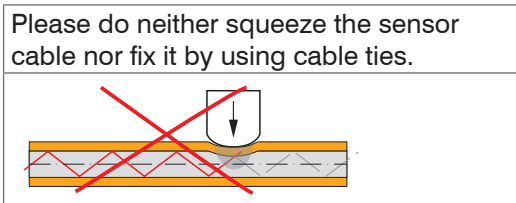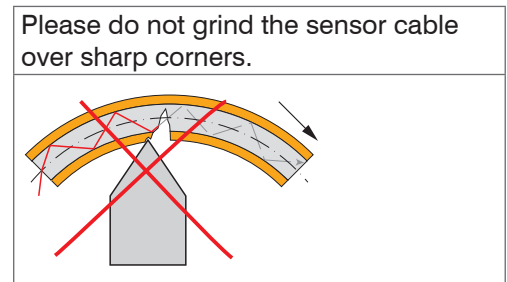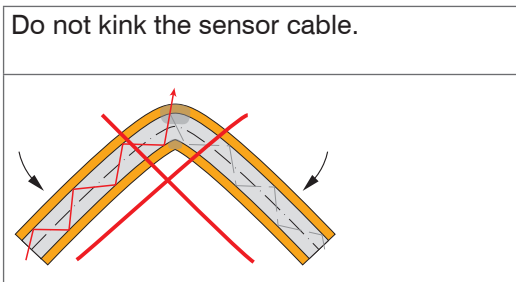

Miniature sensors IFS2402, hybrid sensors IFS2403


The optical fibers are fixed to the sensor and cannot be replaced. Repairs involve reducing the cable length and a new connector through the manufacturer only.

Standard sensors IFS2405

The **sensor cable is connected to the sensor**. Sensor cables may be up to 50 m long. Cables for drag chain use and cables with protective metal tubing are available, see Chap. A 1. A damaged sensor cable can be replaced, see Chap. 8.2.

Connecting the sensor cable to the controller

- ➔ Remove the dummy connector from the green optical fiber socket *Sensor 1/2*¹ on the controller.
- ➔ Plug the sensor cable (green connector, E2000/APC) into the optical fiber socket, and ensure that the sensor connector is aligned correctly.
- ➔ Push the sensor connector into the socket until it locks.

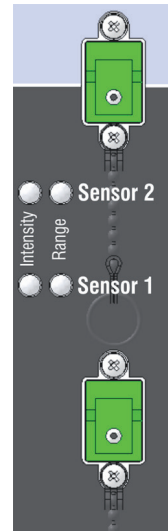

1) The sensor connector Sensor 2 is available on controller IFC2422 only.

Disconnecting the sensor cable from the controller


- ➔ Push the sensor connector's release lever down, and pull the sensor connector out of the socket.
- ➔ Replace the dummy connector.

NOTICE


Close the optical inputs and outputs with protective caps when no fiber cable is connected.

4.6 Sensors

4.6.1 Dimensions IFS2402 Sensors

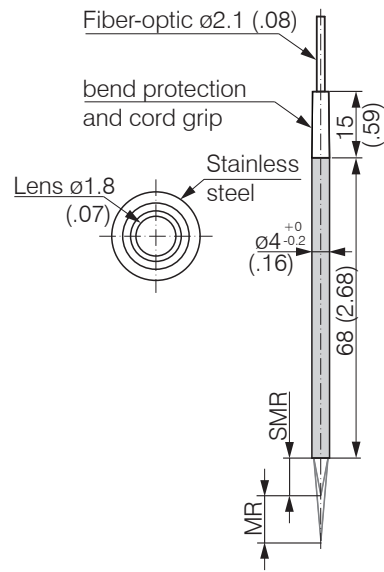

IFS2402-0,4/1,5/4/10

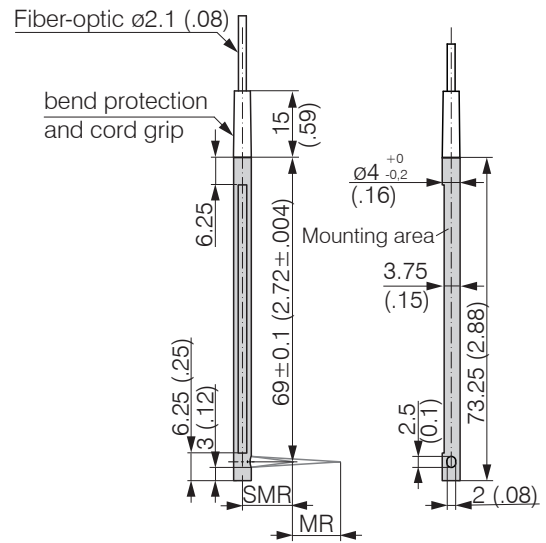


IFS2402/90-1,5/4/10


MR = Measuring range
 SMR = Start of measuring range

Dimension in mm (Inch)


4.6.2 Dimensions IFS2403 Sensors

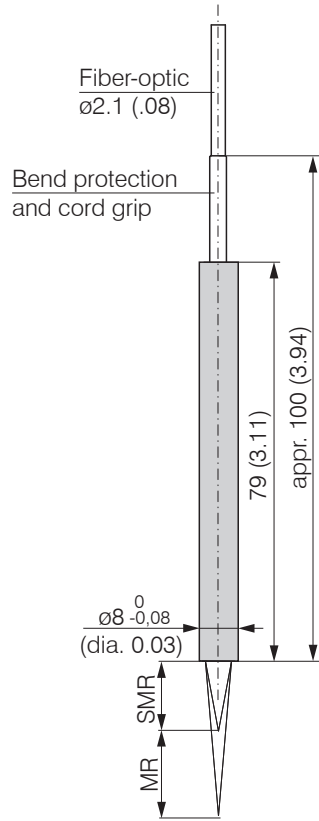


IFS2403-0,4/1,5/4/10

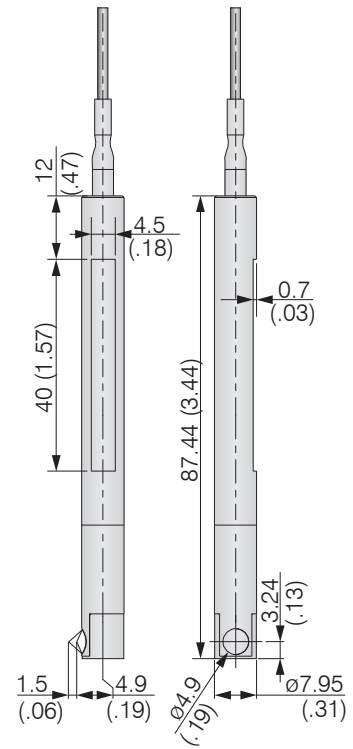

IFS2403/90-1,5

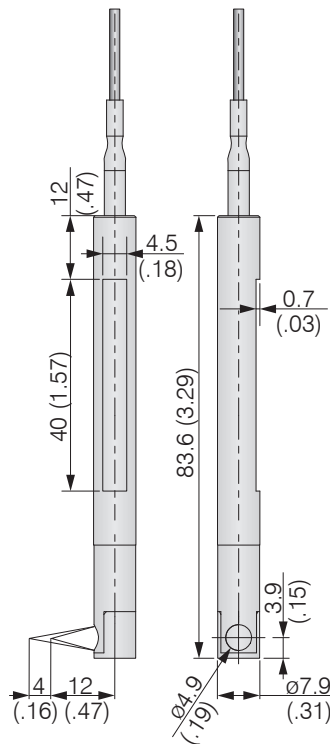

IFS2403/90-4

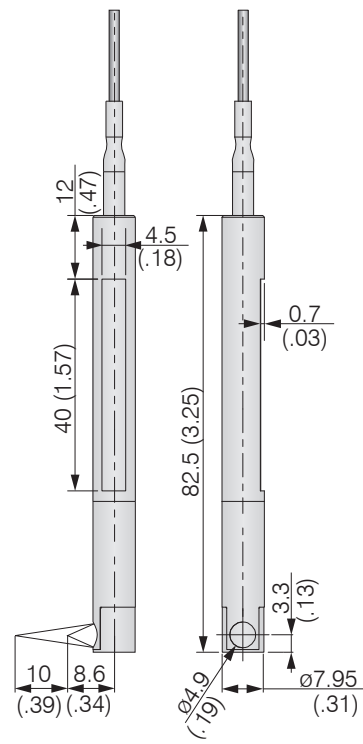


IFS2403/90-10


MR = Measuring range
SMR = Start of measuring range

Dimension in mm (Inch)


4.6.3 Dimensions IFS2404 Sensors

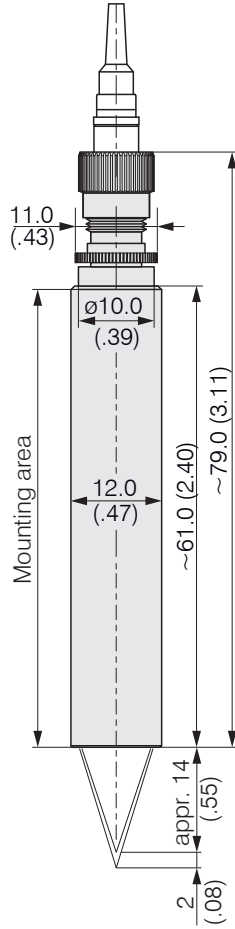


IFS2404-2(001)

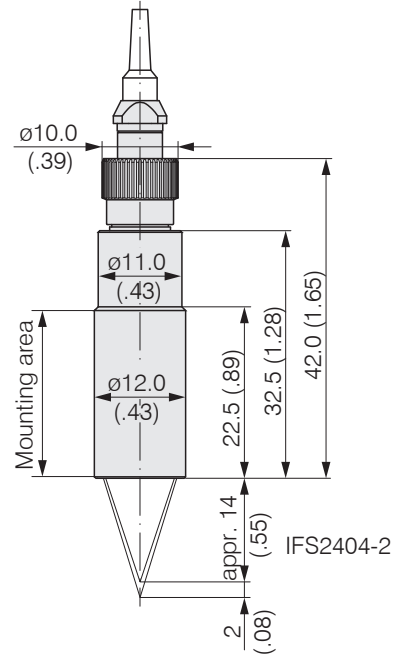

IFS2404-2

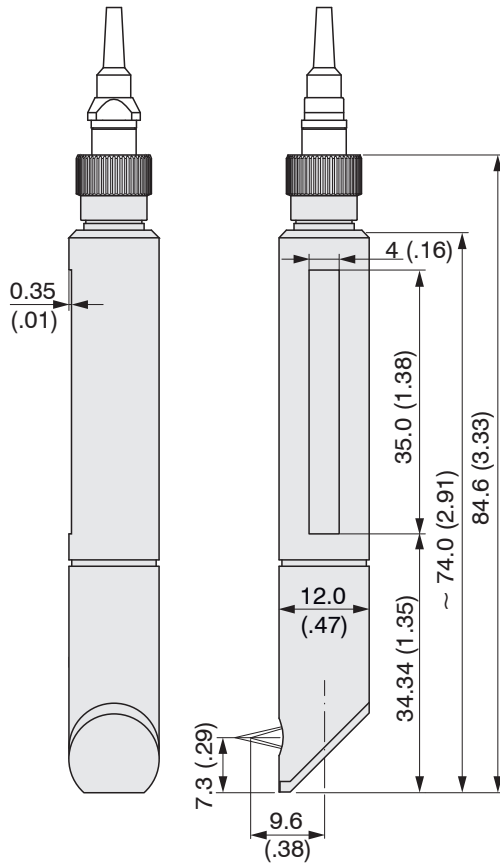


IFS2404/90-2(001)

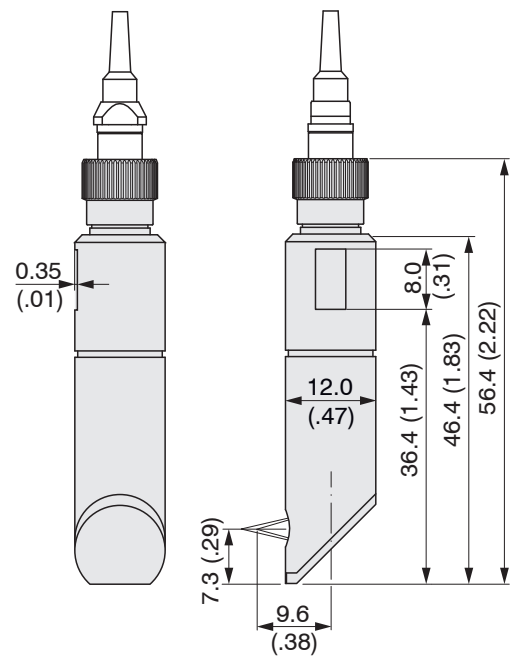


IFS2404/90-2

Dimension in mm (Inch)


4.6.4 Dimensions IFS2405 Sensors

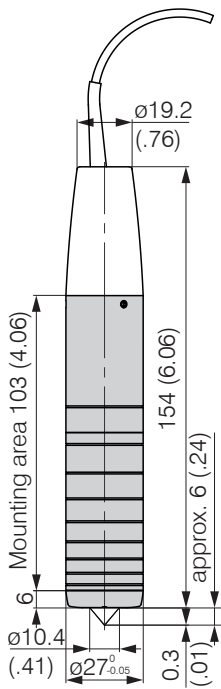

IFS2405-0,3

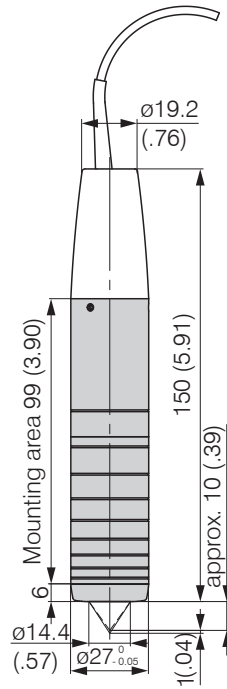


IFS2405-1

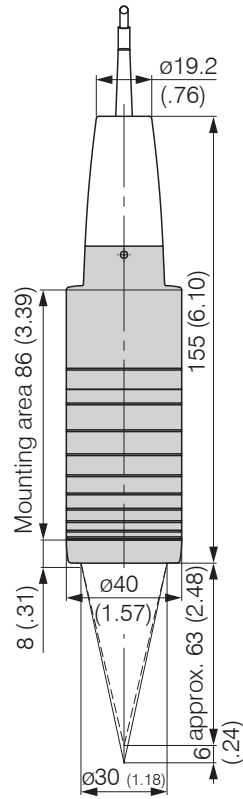


IFS2405-6


Dimension in mm (Inch)

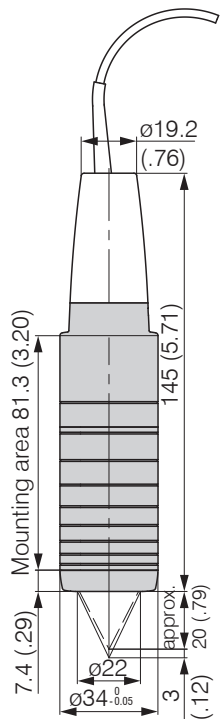


IFS2405-3

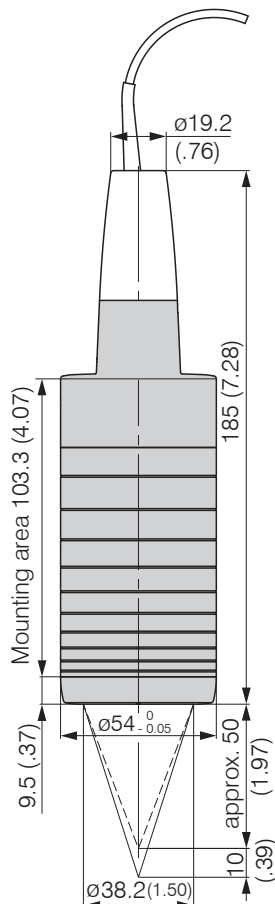

IFS2405-10

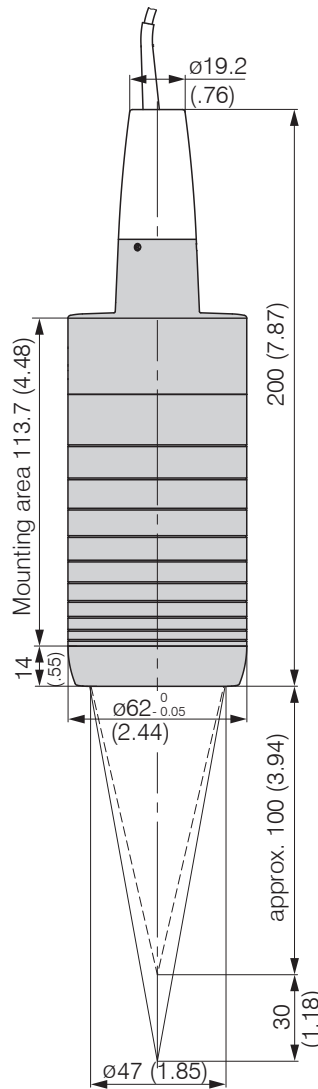


IFS2405-30

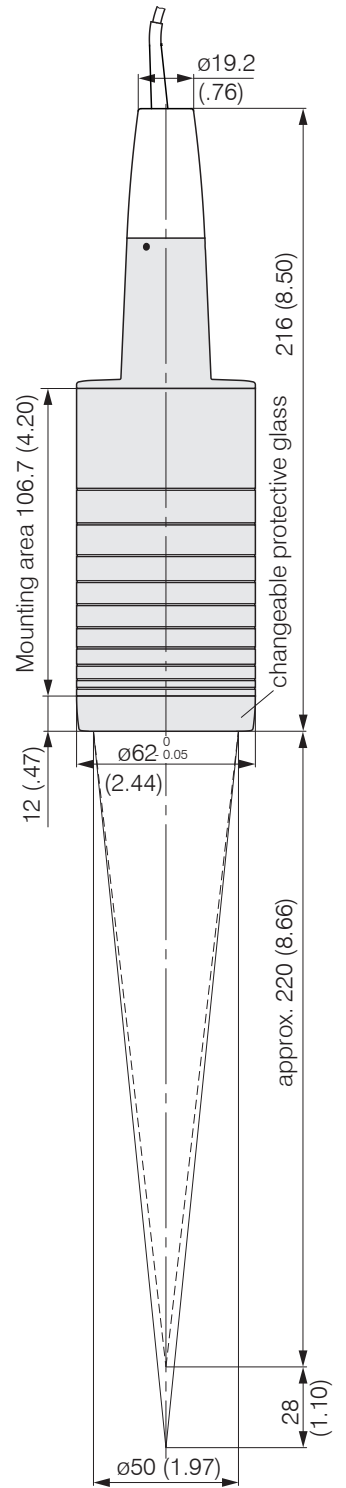


IFS2405-28


4.6.5 Dimensions IFS2406 Sensors

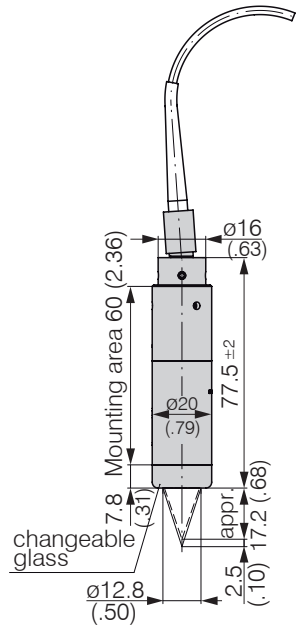


IFS2406-2,5/VAC(003)

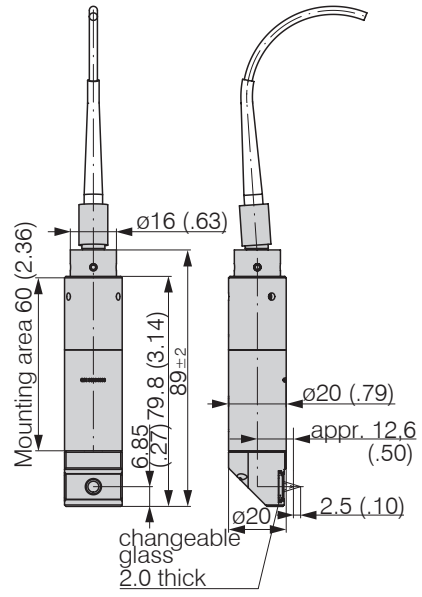

IFS2406/90-2,5/VAC(001)

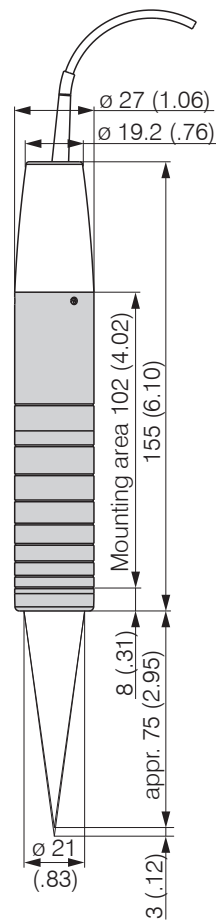


IFS2406-3

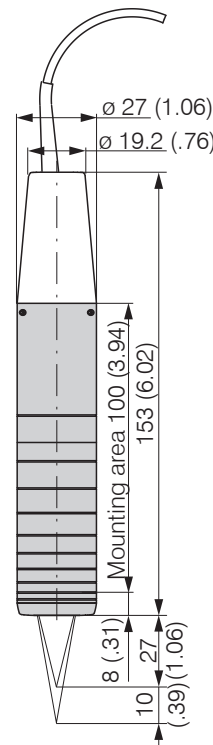




IFS2406-10

Dimension in mm (Inch)


4.6.6 Dimensions IFS2407 Sensors

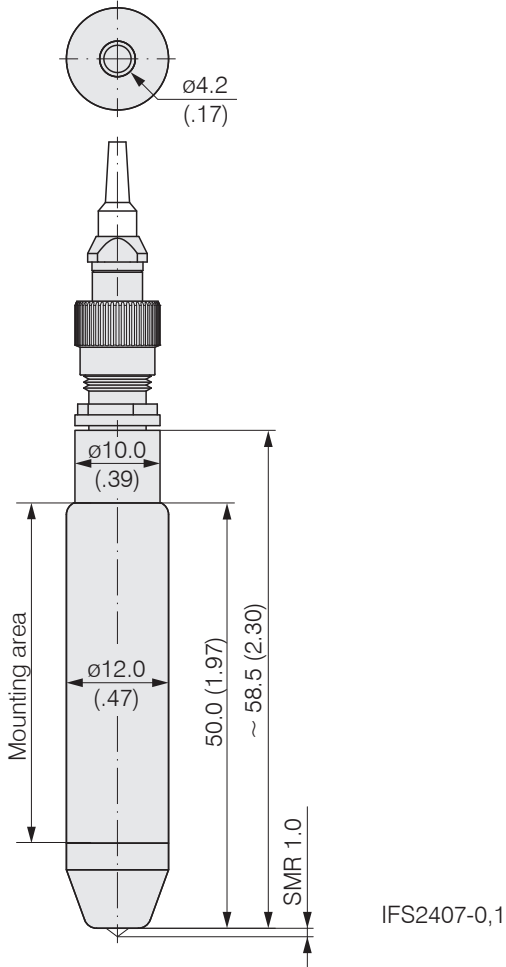

IFS2407/90-0,3

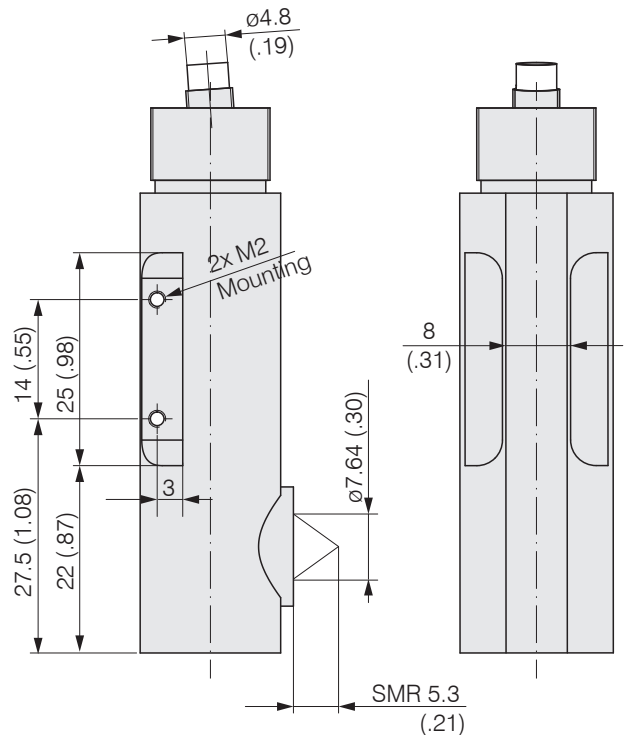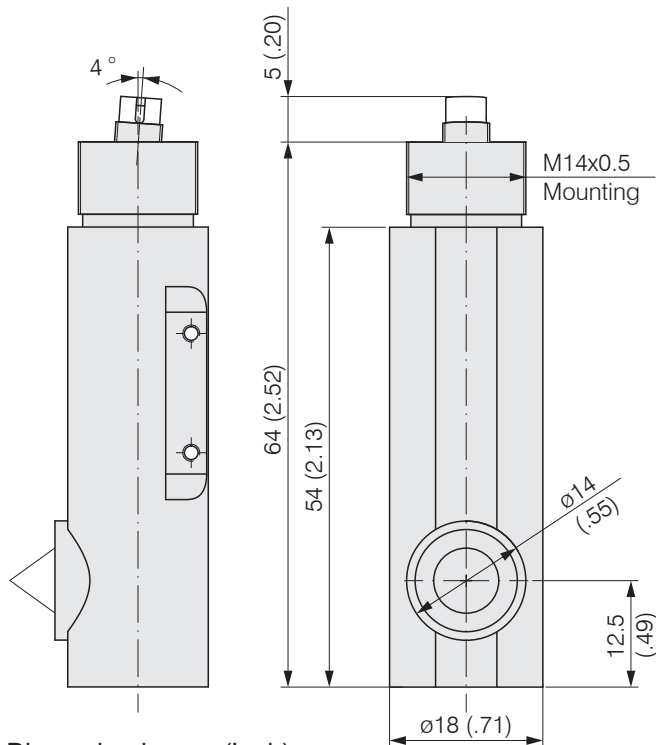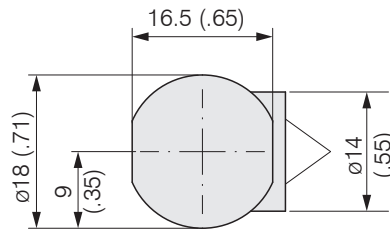

Dimension in mm (Inch)

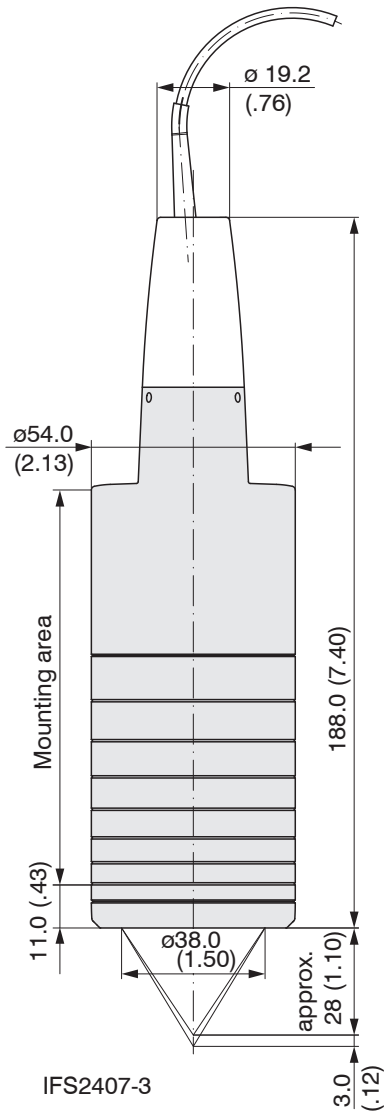

Dimension in mm (Inch),
not to scale

4.6.7 Start of Measuring Range

A base distance (SMR) must be maintained for each sensor.

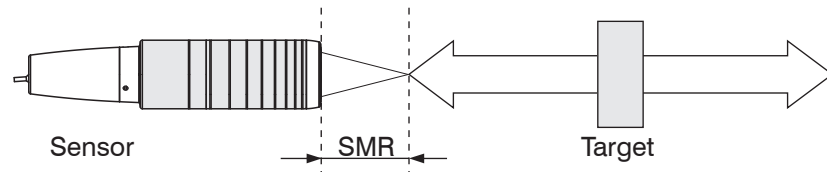


Fig. 19 Start of measuring range (SMR), the smallest distance between the sensor surface and the target.

SMR = Start of measuring range, approximate values

| Sensor | SMR |
|----------------|---------------------|
| IFS2402-0,4 | 1.5 mm |
| IFS2402-1,5 | 0.9 mm |
| IFS2402/90-1,5 | 2.5 mm ¹ |
| IFS2402-4 | 1.9 mm |
| IFS2402/90-4 | 2.5 mm ¹ |
| IFS2402-10 | 2.5 mm |
| IFS2402/90-10 | 3.5 mm ¹ |

| Sensor | SMR |
|----------------|---------------------|
| IFS2403-0,4 | 2.8 mm |
| IFS2403-1,5 | 8.1 mm |
| IFS2403/90-1,5 | 4.9 mm ¹ |
| IFS2403-4 | 14.7 mm |
| IFS2403/90-4 | 12 mm ¹ |
| IFS2403-10 | 11 mm |
| IFS2403/90-10 | 8.6 mm ¹ |

| Sensor | SMR |
|-------------------|---------------------|
| IFS2404-2 | 14 mm |
| IFS2404-2(001) | 14 mm |
| IFS2404/90-2 | 9.6 mm ¹ |
| IFS2404/90-2(001) | 9.6 mm ¹ |

| Sensor | SMR |
|-------------|--------|
| IFS2405-0,3 | 6 mm |
| IFS2405-1 | 10 mm |
| IFS2405-3 | 20 mm |
| IFS2405-6 | 63 mm |
| IFS2405-10 | 50 mm |
| IFS2405-28 | 220 mm |
| IFS2405-30 | 100 mm |

| Sensor | SMR |
|-------------------------|----------------------|
| IFS2406-2,5/VAC(003) | 17.3 mm |
| IFS2406/90-2,5/VAC(001) | 12.6 mm ¹ |
| IFS2406-3 | 75 mm |
| IFS2406-10 | 27 mm |

| Sensor | SMR |
|----------------|--------|
| IFS2407-0,1 | 1.0 mm |
| IFS2407/90-0,3 | 5.3 mm |
| IFS2407-3 | 28 mm |

1) Start of measuring range measured from sensor axis.

4.6.8 Mounting, Installation Bracket

4.6.8.1 General

The sensors of series IFS240x are optical sensors that operate in micrometers.

I Please ensure careful handling during installation and operation!

Mount the sensors with an outer clamp. This type of sensor installation ensures the highest level of reliability because the sensor's cylindrical cover is clamped over a relatively large area. It must be used in complex installation environments, such as machines, production systems etc.

4.6.8.2 IFS2402 Sensors

► Use an installation bracket MA2402 to mount IFS 2402 sensors.

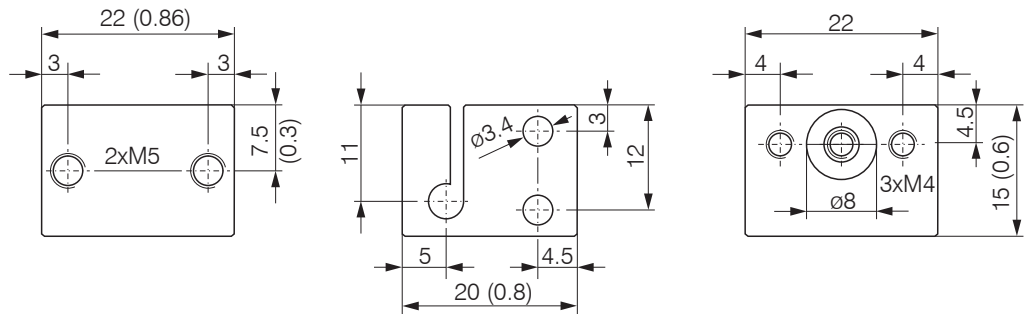


Fig. 20 MA2402-4 installation bracket

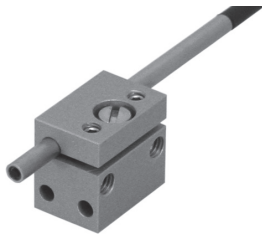


Fig. 21 Outer clamps with MA2402 for IFS2402 sensors

4.6.8.3 IFS2403 Sensors

► Use an installation bracket MA2403 to mount IFS 2403 sensors.


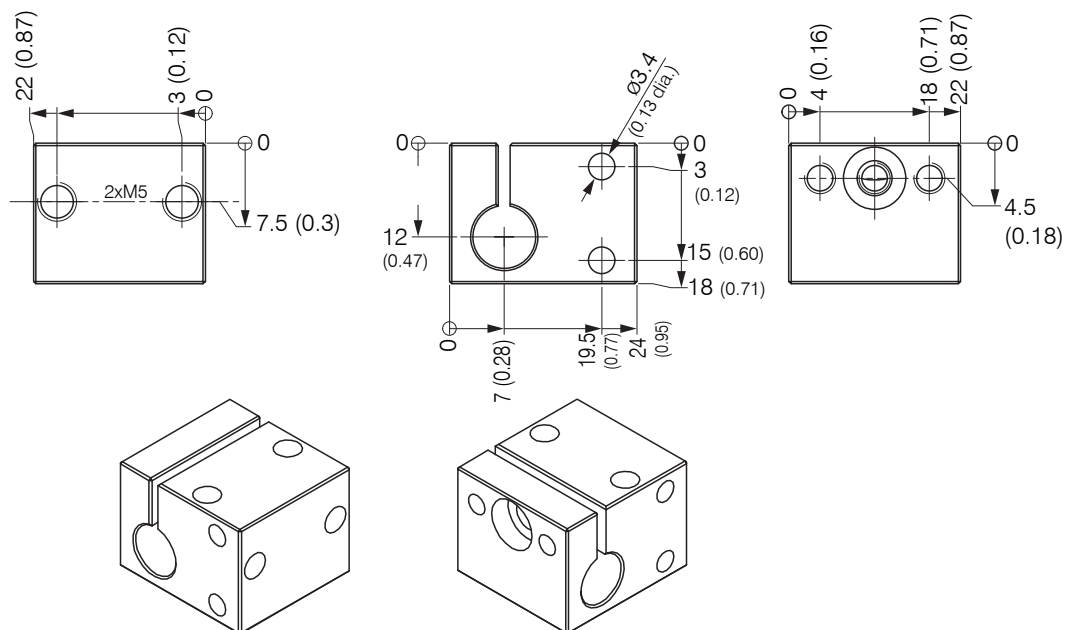


Fig. 22 MA2403 installation bracket
Dimension in mm (Inch)

4.6.8.4 IFS2405, IFS2406 and IFS2407 Sensors

➡ Use an installation bracket MA240x to mount IFS2405 and IFS2406 sensors.

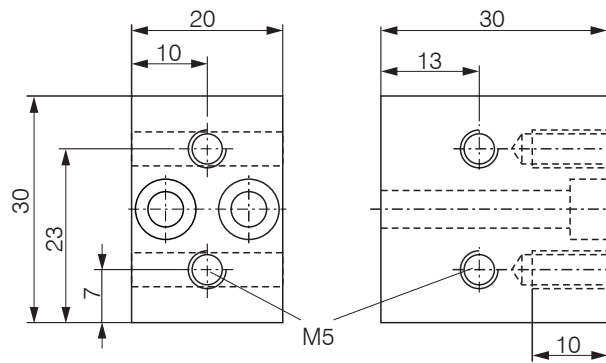

| Installation ring | | Dimension A | Dimension B | Dimension C | Sensor |
|-------------------|--|-------------|-------------|-------------|---|
| MA2400-27 | | ø27 | ø46 | 19.75 | IFS2405-0.3 IFS2405-1 IFS2406-3 IFS2406-10 |
| MA2405-34 | | ø34 | ø50 | 22 | IFS2405-3 |
| MA2405-40 | | ø40 | ø56 | 25 | IFS2405-6 |
| MA2405-54 | | ø54 | ø70 | 32 | IFS2405-10 IFS2407-3 |
| MA2405-62 | | ø62 | ø78 | 36.5 | IFS2405-28 IFS2405-30 |
| MA2406-20 | | ø20 | ø36 | 14.5 | IFS2406-2,5 |

Fig. 23 MA240x installation block and ring



Fig. 24 Outer clamps with installation bracket MA240x for IFS2405 and IFS2406 sensors

Dimension in mm (Inch)

4.6.8.5 IFS2404 and IFS2407 Sensors

- Use an installation bracket MA2404-12 to mount IFS2404-2, IFS2404/90-2 and IFS2407-0,1 sensors.

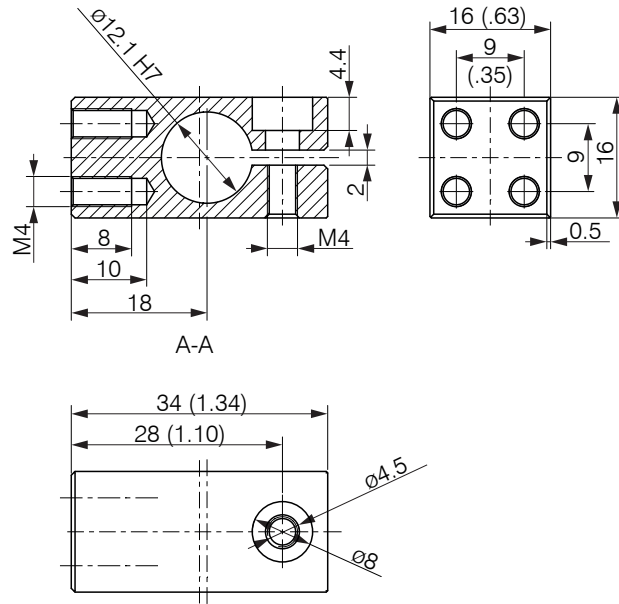


Fig. 25 Outer clamps with installation bracket MA2404-12 for IFS2404-2, IFS2404/90-2 and IFS2407-0,1 sensors, dimension in mm (Inch)

- Use the mounting area and two screws M2 or the mounting thread M14x0,5 to mount IFS2407/90 sensors.

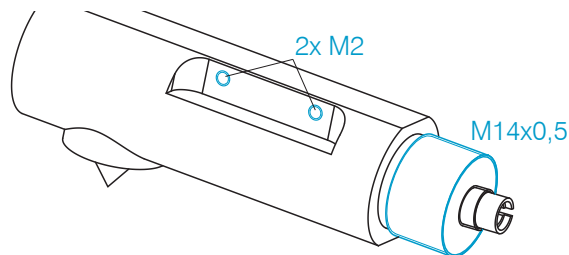


Fig. 26 Mounting for series IFS2407/90-0,3 sensors

5. Operation

5.1 Commissioning

- ➔ Connect the controller to a voltage supply, see Chap. 4.4.3.
- ➔ Connect the sensor and the controller with the optical fiber (sensor cable), see Chap. 4.5.

When the controller has been switched on it initializes. The measuring system is ready after approx. 10 seconds. To ensure precise measurements, let the measuring system warm up for about 60 minutes. The system can be configured through web pages that are integrated into the controller or using commands, see Chap. A 3. We recommend configuring the controller through the web pages.

5.2 Operation Using Ethernet

5.2.1 Requirements

Dynamic web pages are generated in the controller which contain the current settings of the controller and the peripherals. Operation is only possible while there is an Ethernet connection to the controller.

To support a basic first commissioning of the sensor, the sensor is set to a direct connection. If you have configured your browser to access the internet via a proxy server, in the browser settings you will need to add the IP address of the controller to the list of addresses which should not be routed through the proxy server. The MAC address of the unit can be found on the nameplate of the controller and on the test certificate calibration report.

- You need a HTML5 browser. Use one of the browsers below:

| | | |
|------------------------|----------------------|--------------------|
| Internet Explorer 10.0 | Mozilla Firefox 19.0 | Google Chrome 25.0 |
|------------------------|----------------------|--------------------|



| Direct connection to PC, controller with static IP (Factory setting) | | Network |
|---|---|--|
| PC with static IP | PC with DHCP | Controller with dynamic IP, PC with DHCP |
| <ul style="list-style-type: none"> ➔ Connect the controller to a switch with RJ-45 connectors. | <p>(intranet). Use a LAN cable</p> <ul style="list-style-type: none"> ➔ Start the sensorTOOL.exe program. This program is available online at https://www.micro-epsilon.de/download/software/sensorTOOL.exe. ➔ Click the  button. Select the designated controller from the list. In order to change the address settings, click the button <code>Configure sensor IP</code>. <ul style="list-style-type: none"> • Address type: static IP address • IP address: 169.254.168.150 ¹ • Subnet mask: 255.255.0.0 ➔ Click the button <code>Apply</code>, to transmit the changes to the controller. ➔ Click the button <code>Open Website</code> to connect the controller with your default browser. <p><small>1) Requires that the LAN connection on the PC uses, for example, the following IP address: 169.254.168.1.</small></p> | <ul style="list-style-type: none"> ➔ Connect the controller to a switch (intranet). Use a LAN cable with RJ-45 connectors. <ul style="list-style-type: none"> ➔ Enter the sensor in the DHCP / register the controller in your IT department. <p>The controller gets assigned an IP address from your DHCP server. You can check this IP address with the sensorFINDER.exe program.</p> <ul style="list-style-type: none"> ➔ Start the sensorTOOL.exe program. ➔ Click the  button. Select the designated controller from the list. ➔ Click the button <code>Open Website</code>, to connect the controller with your default browser. <p>Alternatively: If DHCP is used and the DHCP server is linked to the DNS server, access to the controller via a host name of the structure „IFC242x_SN<serial number>“ is possible (where x = 1 for IFC2421, x = 2 for IFC2422).</p> <ul style="list-style-type: none"> ➔ Start a web browser on your PC. To achieve a IFC2421 with the serial number “01234567”, type in the address bar on your browser „IFC2421_SN01234567“. |

Fig. 27 Options for connecting to a LAN

5.2.2 Access via Web Interface

Interactive web pages you can use to configure the controller are now displayed in the web browser. The controller is active and supplies measurement values.

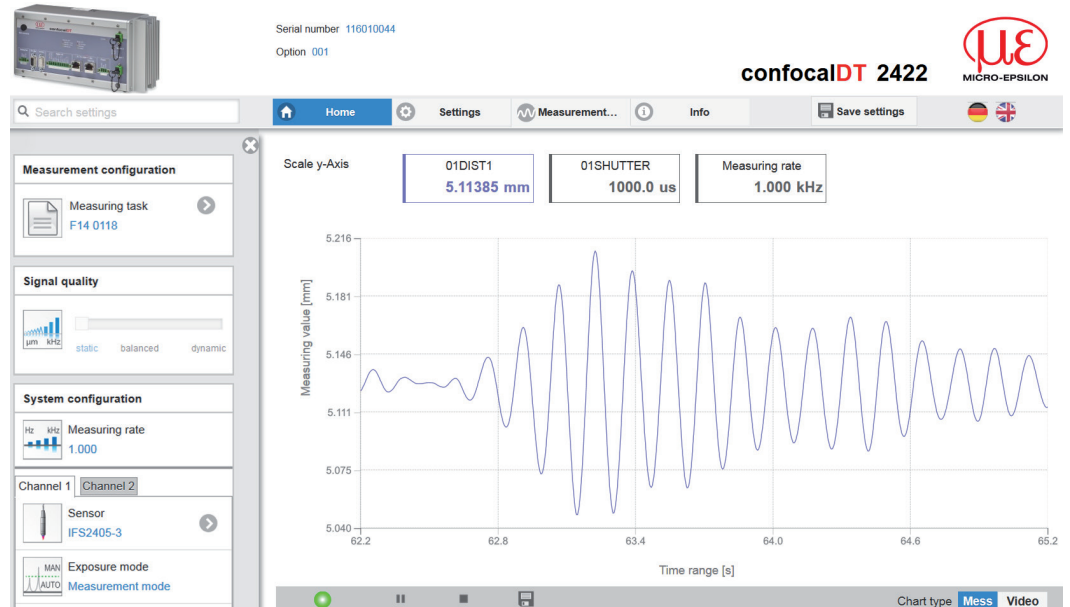


Fig. 28 First interactive web page after calling the IP address

The horizontal navigation includes the functions below:

- The search function permits time-saving access to functions and parameters.
- Home. The web interface automatically starts in this view with measurement chart, Configuration and Signal quality.
- Settings. This menu includes all sensor parameters, see Chap. 6.
- Measurement chart. Measurement chart with digital display or overlay of the video signal.
- Info. Includes information about the sensor, such as measuring range, serial number and software status.
- Web interface language selection

All settings on the web page are applied immediately in the controller.


Parallel operation with web browser and ASCII commands is possible; the last setting applies.

The appearance of the web pages may vary depending on functions and peripherals. Dynamic help text with excerpts from the operating instructions supports you during sensor configuration.

5.3 Select a Sensor

Controller and sensor(s) are matched at the factory.

- ➡ Change to the `Settings > Sensor` menu.
- ➡ Select the connected sensor for each channel from the list.

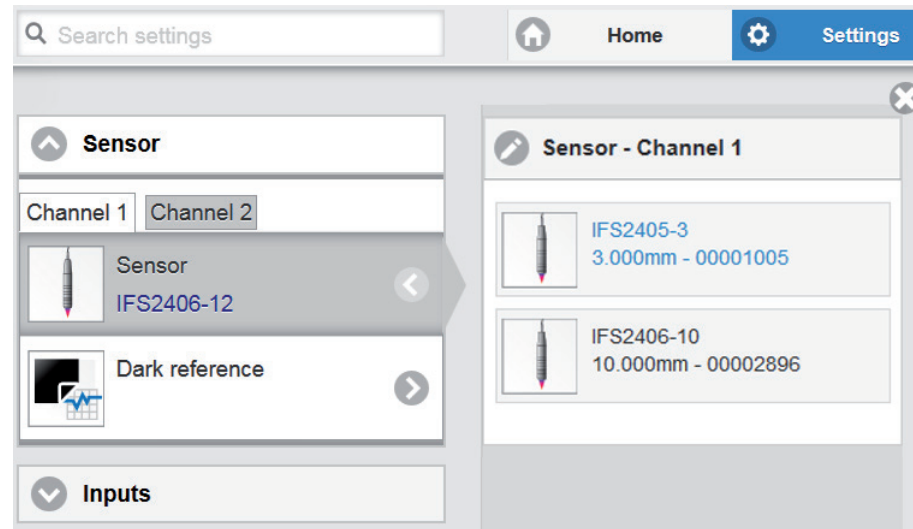


The calibration data of up to 20 different sensors can be stored in the controller. Calibration is done at factory only.

5.4 Button Multifunction

The Multifunction button of the controller has several functions, e.g. dark correction and light source operation.

The dark reference feature is assigned to this button per default. The assignment can be changed in Settings > Inputs. Changing the assignment requires the Expert authorization.
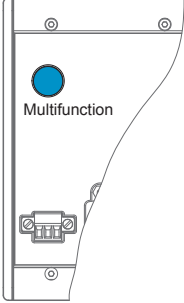
| | | | |
|---|------------|------------------------------|--|
|  | Function 1 | Dark reference | Starts dark correction for Sensor 1 or Sensor 2 |
| | Function 2 | Mastering Reset Mastering | Starts or stops the master measurement of the selected signals |
| | | LED | Turns the light source on/off for Sensor 1 or Sensor 2 |
| | | Inactive | Key has no function |

The functions can be allocated to the individual time frames, see Chap. A 3.3.16 The time intervals are indicated by LED flashing/lighting

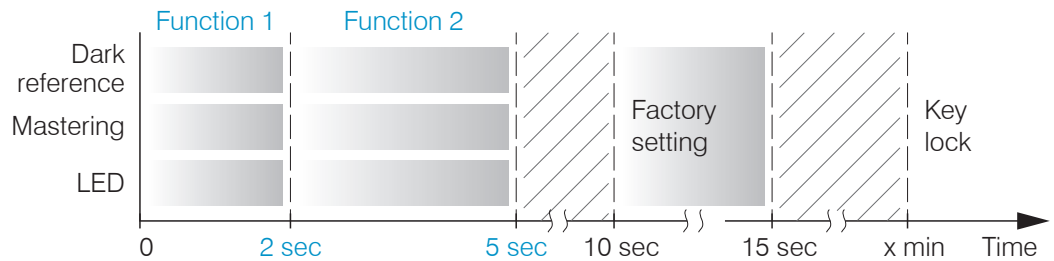


Fig. 29 Button press duration

5.5 Dark Reference

This adjustment must be carried out after every sensor change. Dark referencing is sensor-dependent and is stored separately in the controller for each sensor. Therefore, you need to connect the required sensor and select Settings > Sensor menu, before you start dark referencing.

The controller requires a warm-up time of approx. 30 minutes before capturing dark signals.

Step-by-Step procedures:


- ➡ Remove the target from the measuring range, or cover the sensor surface with a piece of dark paper.
- ⓘ For dark referencing, no object must be within the measuring range, and no ambient or external light must reach the sensor.
- ➡ On the controller, press the Multifunction button¹, or click the Start button on the Settings > Sensor > Dark reference web page.


The functions of the Multifunction button are explained in Button Multifunction, see Chap. 5.4.

The Intensity and Range LEDs will start flashing, and the sensor captures the current dark signal for about 20 seconds.

After the dark referencing the dark corrected signal is characterized by an almost smooth

1) After more than 10 seconds, the factory settings will load!

 Gray shaded fields require a selection.

 Value Dark-bordered fields require you to specify a value.

waveform directly to the X-axis.

➡ Remove the paper cover from the sensor. The sensor can now be used as normal.

•
i Repeat the dark referencing at regular intervals.

The current brightness value (as the quotient of the sum of all intensities and the current exposure time), is determined with each new darkness correction. If a major change in the previously stored value is detected, this can be interpreted as the degree of contamination, and a warning is given.

You can also ignore this message. However, you should note the current exposure time in the case of time-critical measurements. Then gently clean the face of the sensor cable's E2000 connector. Only use pure alcohol and fresh lens cleaning tissue to do this. Then repeat the darkness correction. If nothing changes, the sensor cable can also have become damaged or the fiber connector lying in the controller may become soiled.

Change the sensor cable or submit the whole system for checking.


You can adjust the warning threshold if necessary in the event of contamination by an ASCII command (permissible deviation in %); the factory setting is 50 %, see Chap. A 3.3.4.5.

The warning threshold is stored specific to the setup.


5.6 Place Target

➡ Place the target in the midrange.

➡ Do not exceed the maximum tilt angle between sensor and target, see Chap. 2.6.

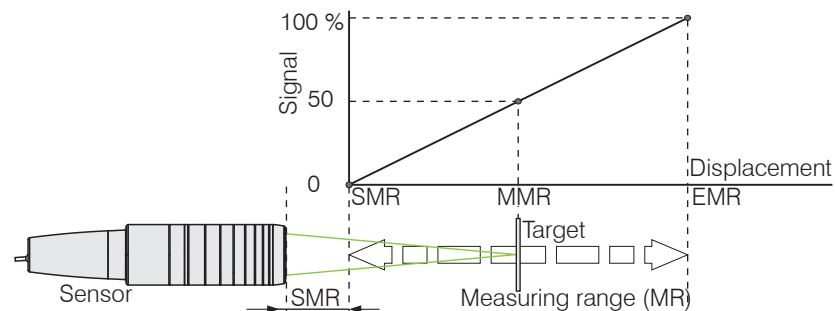

The LED Range on the controller front indicates the position of the target in relation to the sensor.

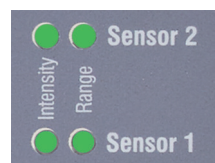








| | |
|--------------|--|
| Red flashing | Dark signal acquisition in progress |
| Red | No target, or target outside the measuring range |
| Yellow | Target near the midrange |
| Green | Target within the measuring range |

5.7 Measurement Configuration

Common measurement configurations (presets) for various target surfaces are stored on the controller and enable to quickly start the respective measurement task. In a preset the basic features like peak or material selection and calculation functions are already set.

➡ Go to the Home > Measurement configuration menu and start the configuration selection. Select a stored configuration (preset).

Presets:

| | |
|---|--|
|  Standard matt | Distance measurement e.g. on ceramics, non-transparent plastics. Highest peak, no averaging, distance calculation. |
|  Standard shiny | Distance measurement e.g. on metals, polished surfaces. Highest peak, median over 5 values, distance calculation. |
|  Multisurface | Distance measurement e.g. on PCB, hybrid materials. Highest peak, median over 9 values, distance calculation. |
|  One-sided thickness measure | One-sided thickness measurement e.g. of glass, BK7 materials. First and second peak, no averaging, thickness calculation. |
|  Multilayer air gap | Thickness measurement ¹ e.g. of mask under glass. 1. layer BK7, 2. layer air, first and second peak, median over 5 values. |
|  Multilayer laminated glass | Layer thickness measurement ¹ of laminated glass e.g. windshield, 1. layer BK7, 2. layer PC, 3. layer BK7, first and second peak, no averaging. |
|  Two-sided thickness measure | Both sided thickness measurement ² of metal. Highest peak, median over 5 values. Formula: $-1*01DIST - 1*02DIST1 + 10$ |

Setups:

| | |
|--|---|
|  1 MBg | Custom-built settings (setups), see Chap. 5.11. |
|  2 F14 0118 | |

The controller also enables user-specific settings. When saving a changed preset, the web interface displays a dialog which enables the user to define a setup name to avoid accidental overwriting.

➡ Go to the Home > Measurement configuration menu and start the configuration selection. Select a configuration or a setup.

Individual material selection is possible in the Settings > Data recording > material selection menu.

- 1) Programs available in controller with multi-peak functionality.
- 2) Possible with controller IFC2422.

5.8 Video Signal

➡ Go to the `Measurement` chart menu. Show video signal display with `Video`.

The diagram displayed in the large graph window on the right represents the video signal and the receiving row in different states of post processing.

The video signal displayed in the graph window displays the spectral distribution of the pixels in the receiving row. Left 0 % (small distance), and right 100 % (large distance). The corresponding measured value is marked by a vertical line (peak marking).

The diagram starts automatically when the web page is loaded.

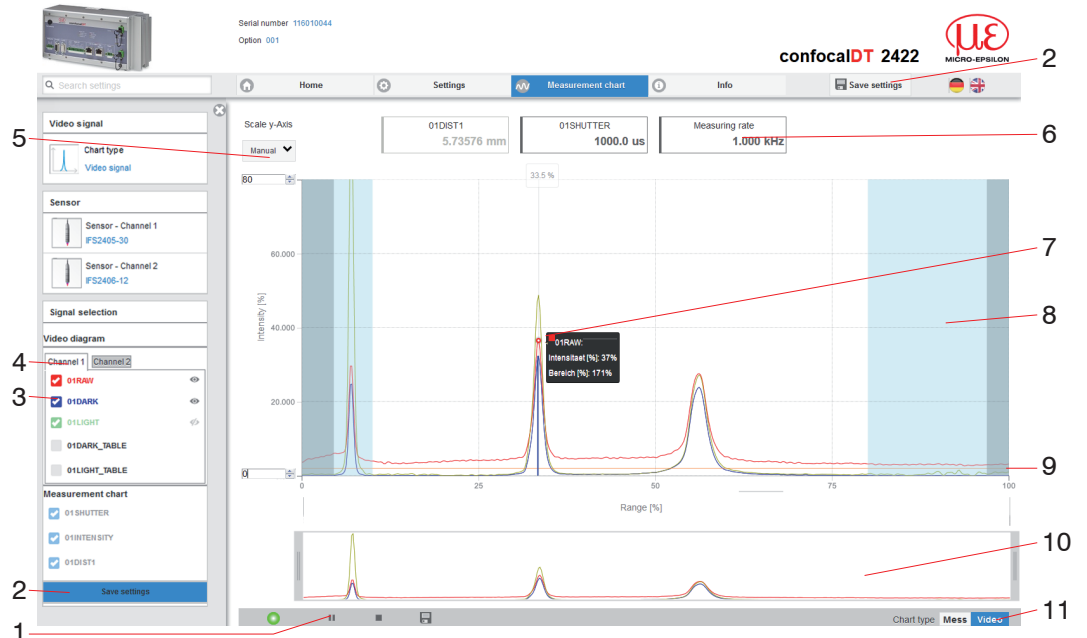


Fig. 30 Video signal web page


The `Video signal` web page includes the following features:

- The LED visualizes the status of the transmission of measured values:
 - green: transmission of measured values is running.
 - yellow: waiting for data in trigger mode
 - gray: transmission of measured values stopped

Data queries are controlled by using the `Play/Pause/Stop/Save` buttons of the measured values that were transmitted. `Stop` stops the diagram; data selection and zoom function are still possible. `Pause` interrupts recording. `Save` opens the `Windows` dialog box for the name and the location of the file in order to save the selected video signals in a `CSV` file, which contains all pixels, their (selected) intensities in % and other parameters.

➡ Click the button ▶ (Start), for starting the display of the measurement results.

- Changes only take effect after clicking the `Save settings` button.

- 3 In the window on the left, the video graph for channel 1/2 can be enabled or disabled both during and after measuring. Inactive graphs are gray. Click on the check mark to add them. The changes become effective when you save the settings. Use the eye icons  to show or hide the individual signals. The calculation continues in the background.
 - 0xRAW: Raw signal (uncorrected CCD signal)
 - 0xDARK: Dark corrected signal (raw signal minus dark level table)
 - 0xLIGHT: Light source corrected signal (signal which is corrected with the dark signal and the light source table)
 - 0xDARK_TABLE: Dark value table (generated in response to dark referencing)
 - 0xLIGHT_TABLE: Light value table (generated in response to light referencing)
- 4 The chart window shows the video signals of respectively one channel. Use the buttons to switch between the two channels.
- 5 Auto (= automatic scaling) or Manual (= manual setting) allow for scaling the intensity axis (Y axis) of the graph.
- 6 In addition, the current exposure time values and the selected measuring rate are displayed above the graph.
- 7 Mouseover feature. When moving the mouse over the graph, curve points or peak markings are highlighted with a circle symbol while the corresponding intensity is displayed. The corresponding x position is displayed in % above the graph window.
- 8 The linearized range is in the diagram between the gray hatchings and can not be changed. Only peaks of which the centers are in this range can be evaluated. The masked range may be limited if needed. Then an additional pale blue hatching limits the range on the right and on the left side. The peaks remaining in the resulting range are used for evaluation.
- 9 The detection threshold, based on the dark corrected signal, is a horizontal straight line that corresponds to the preset value. It needs to be just high enough that no undesired video signal peak is included in the measurement. An acceptable signal-to-noise ratio requires the threshold to be as low as possible. The detection threshold should not be changed if possible.
- 10 X axis scaling: The diagram displayed above is zoomable with both sliders on the right and on the left side in the lower total signal. Move it sideways also with the mouse in the center of the zoom window (cross arrow).

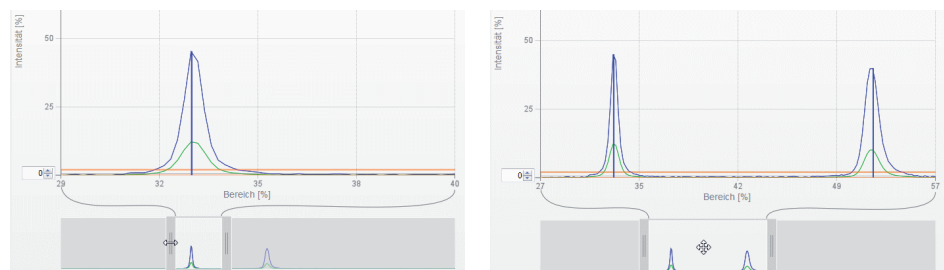


Fig. 31 Slider zoom: one-sided and dragging with cross arrow


- 11 The both buttons allow to change between video and measurement representation.

5.9 Signal Quality

A good measurement result can be achieved with sufficient video signal intensity. Reducing the measuring rate enables longer exposure of the CCD array, therefore leading to high measurement quality.

The `Signal quality` area enables the user to switch between three preset basic settings (Static, Balanced, Dynamic) by mouse click. The effects are immediately displayed in the chart and the system configuration.

➡ Go to the menu Home > Signal quality and adapt the measurement dynamics to the requirements. Check the result in the video signal.

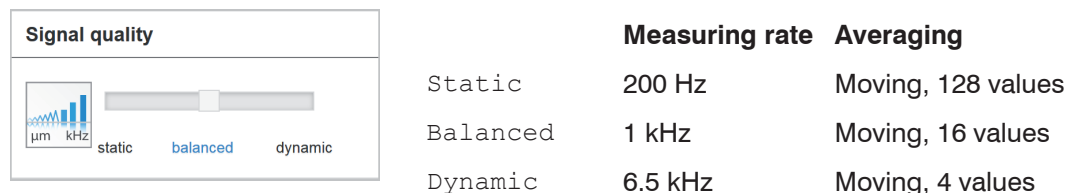

i After the sensor has been started with a user-specific configuration (preset), see Chap. 5.7, changing the signal quality is not possible.

5.10 Distance Measurement

- Align the sensor vertically to the target object.
- Then, move the sensor (or the target) closer, until you more or less reach the start of measuring range for your sensor.

Once the object is within the sensor's measuring range, the Range LED (green or yellow) on the front of the controller will light up. Or, observe the video signal.

| LED | State | Description |
|---------------|--------|--|
| Intensity 1/2 | Red | Signal is saturated |
| | Yellow | Signal too low |
| | Green | Signal is ok |
| Range 1/2 | Red | No target or outside the measuring range |
| | Yellow | Target in midrange |
| | Green | Target within the measuring range |

Fig. 32 Description of LEDs for distance measurements

After launching Measurement chart > Mess the following web page is displayed. The diagram starts automatically when the web page is reloaded. The diagram in the large window to the right displays the value-time graph.

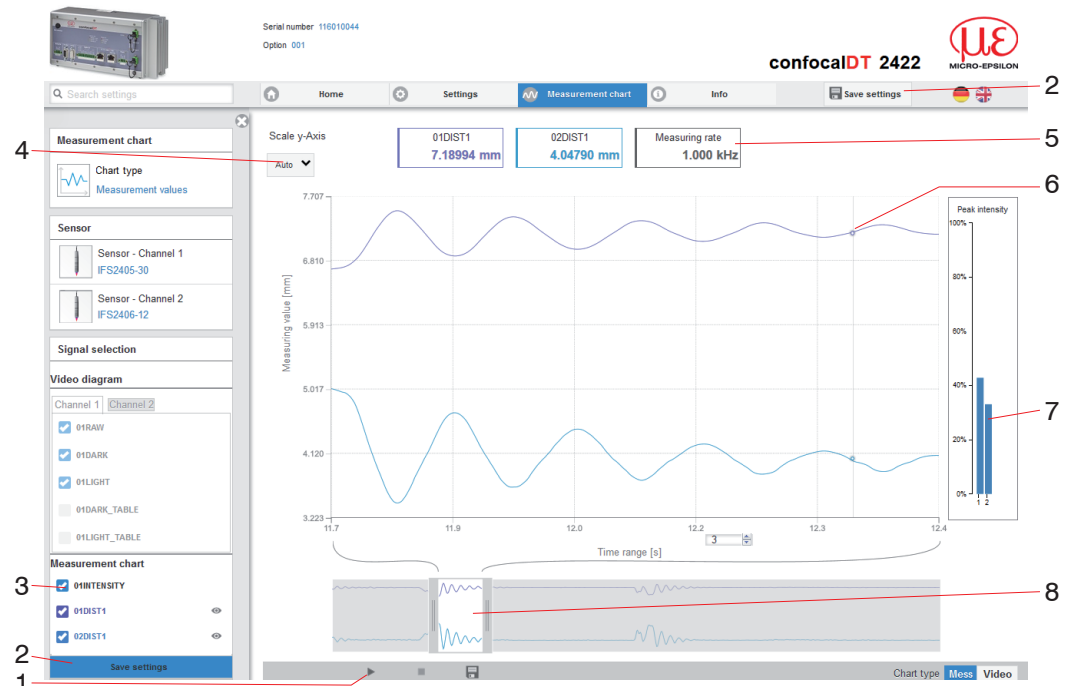



Fig. 33 Measurement web page (distance measurement)

- 1 The LED visualizes the status of the transmission of measured values:
 - green: transmission of measured values is running.
 - yellow: waiting for data in trigger mode
 - gray: transmission of measured values stopped

Data queries are controlled by using the Play/Pause/Stop/Save buttons of the measured values that were transmitted. Stop stops the diagram; data selection and zoom function are still possible. Pause interrupts recording. Save opens the Windows selection dialog for file name and storage location to save the last 10,000 values in a CSV file (separation with semicolon).

- Click the button ► (Start), for starting the display of the measurement results.
- 2 Changes only take effect after clicking the Save settings button.

- 3 In the window on the left, the signals for channel 1/2 can be enabled or disabled both during and after measuring. Inactive graphs are gray. Click on the check mark to add them. The changes become effective when you save the settings. Use the eye icons  to show or hide the individual signals. The calculation continues in the background.
 - 0xSHUTTER: Shutter time
 - 0xINTENSITY: Signal quality of the respective peak in the video signal
 - 0xDIST: Chronological signal sequence
- 4 Auto (= automatic scaling) or Manual (= manual setting) allow for scaling the measurement axis (Y axis) of the graph.
- 5 In addition, the values of distance, the current measuring rate and time stamp are displayed in the text boxes above the graph. Errors are displayed as well.
- 6 Mouseover feature while measurement is stopped. When moving the mouse over the graph, curve points are highlighted with a circle symbol while the corresponding values are displayed in the text boxes above the graph. The intensity bars are updated as well.
- 7 The peak intensity is displayed in form of a bar graph.
- 8 X axis scaling: The total signal is zoomable with the slider on the left side during running measurement. The time range can be defined in the input field below the time axis. Once the diagram is stopped, you can use the right slider as well. You may also move the zoom window sideways with the mouse in the center of the zoom window (cross arrow).

5.11 Load / Save Settings

In this menu you can save current device settings to the controller and recall stored settings. You can permanently store eight different parameter sets in the controller.

We recommend saving settings after programming the controller, as the settings will be lost when the controller is switched off. We recommend saving settings after programming the controller, as the settings will be lost when the controller is switched off.

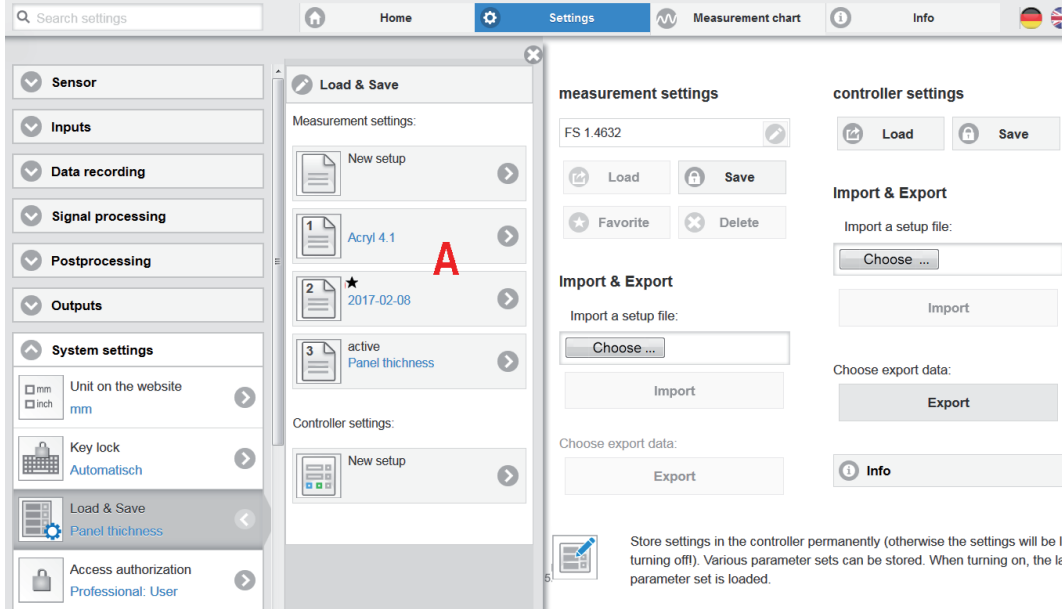
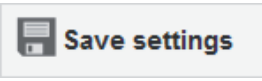
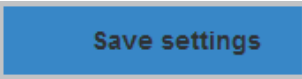


Fig. 34 Setup management

➡ Change to the Settings > System settings > Load & Safe menu.

| Manage setups in the controller, possibilities and procedure | | | |
|--|---|--|---|
| Save settings | Activate existing setup | Save changes in active setup | Define setup after booting |
| Menu New setup | Menu Load & Safe | Menu bar | Menu Load & Safe |
| ➡ Enter the name for the setup into the field <input type="text" value="individual name"/> e.g. FS 1.4632 and click the button Save. | ➡ Click on the desired setup with the left mouse button, area A. The dialog Measurement settings opens. ➡ Click on the button Load. | ➡ Click on the button   | ➡ Click on the desired setup with the left mouse button, area A. The dialog Measurement settings opens. ➡ Click on the button Favorite. |

The current settings will be available after the controller has been switched off and on.

For a fast saving to the last saved setup use the Save setup button in every preferences page.

i Switching on the controller loads the set of parameters that was last stored in the controller.

| Exchange setups with PC/notebook, possibilities | |
|---|--|
| Safe setup on PC | Load setup from PC |
| Menu Load & Safe | Menu Load & Safe |
| ➡ Click on the desired setup with the left mouse button, area A. The dialog Measurement settings opens. ➡ Click on the button Export. | ➡ Click on New setup with the left mouse button. The dialog Measurement settings opens. ➡ Click on the button Search. A Windows dialog for file selections opens. ➡ Choose the desired file and click on the button Open. ➡ Click on the button Import. |

6. Advanced Settings

6.1 Inputs

6.1.1 Synchronization

If several sensors measure the same target synchronously, the controllers may be synchronized with each other. The sync output of the first controller IFD242x Master is connected to the sync inputs of the further controller, see Chap. 4.4.8.


| | | |
|------------------------|-------------|---|
| <i>Master</i> | | <i>First controller in the measuring chain; synchronizes any subsequent controllers.</i> |
| <i>Slave Sync/Trig</i> | Termination | on / off |
| | | <i>Controller operates in dependence on the first controller. The terminating resistor must be set on ON for the last controller in the chain.</i> |
| <i>Slave TrigIn</i> | | <i>The entry expects TTL or HTL level enabling external synchronization. The TrigIn input is controlled by an external synchronization source, e.g. a frequency generator. Min. 0.1 ... 6.5 kHz. It is also possible to externally synchronize several controllers in parallel.</i> |


If the controllers are operated via an EtherCAT interface, then a synchronization can be realized without a synchronization cable.

6.1.2 Encoder Inputs

A maximum of three encoder values can be assigned to the measured data. They will then be issued and used as trigger conditions. This exact assignment to the measured values is ensured by the fact that exactly the encoder values are output that are exist in half of the exposure time of the measured value (the exposure time may vary due to the control). Tracks A and B make it possible to detect directions. Each of the three encoders can be configured separately. The encoder socket configuration, see Chap. 4.4.10.

| | | |
|----------------------|--|--|
| <i>Encoder 1 / 2</i> | Interpolation | <i>single / double / quadruple resolution</i> |
| | Max value | <i>Value</i> |
| | Effect on reference track | <i>no effect / set on first track / set with every track</i> |
| | Set on value | <i>Value</i> |
| | Setting encoder value per software | |
| | Reset the detection of the first marker position | |

 Gray shaded fields require a selection.

 *Value* Dark-bordered fields require you to specify a value.

6.1.2.1 Interpolation

Interpolation increases the encoder resolution. The counter reading rises and falls with each interpolated pulse edge.

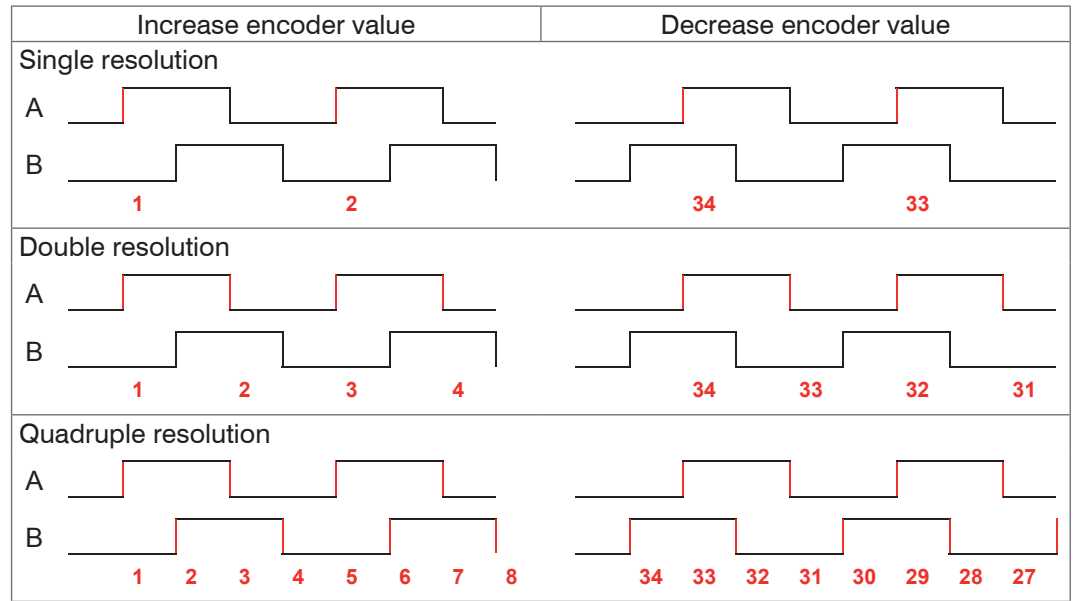


Fig. 35 Pulse sequence encoder signals

6.1.2.2 Maximum Value

If the encoder exceeds the maximum value, the counter is reset to zero. Examples include rotary pulse indicators without a zero-signal (reference track). The maximum counter reading before a reset is 4,294,967,295 ($2^{32}-1$).

6.1.2.3 Effect on the Reference Track

No effect. The encoder counter continues to count; the signal is reset when the controller is switched on or if you click on `Set on value`.

`Set on first track`. Sets the encoder counter to the defined value, if it reaches the first reference mark. It is the first mark after turning on the controller. Without turning off only after pressing the button `Use next mark`.

`Set with every track`. Resets the encoder counter to its starting value at all marker positions or when reaching a marker for a second time (e.g. with traversing movements)

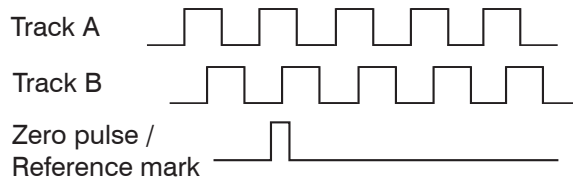


Fig. 36 Reference signal of an encoder

6.1.2.4 Set on Value

The encoder are set to this value

- each time the controller is switched on,
- with the `Set on value` button.

The starting value must be lower than the maximum value and should not exceed 4.294.967.294 ($2^{32}-2$).

6.1.2.5 Reset Reference Mark

Resets the detection of the reference mark.

6.2 Data Recording

6.2.1 Measuring Rate

To select the measuring rate click `Settings > Data recording > Measuring rate`. The measuring rate applies to both channels for the IFC2422.

➡ Select the required measuring rate.

The measuring rate can be continuously adjusted from 0.1 kHz to 6.5 kHz in increments of 100 Hz.

Monitoring the video signal helps to select a measuring rate, see Chap. 5.8.

Step-by-Step procedures:

➡ Place the target in the midrange, see Fig. 37. Keep adjusting the measuring rate until you get a high signal intensity that is not oversaturated.

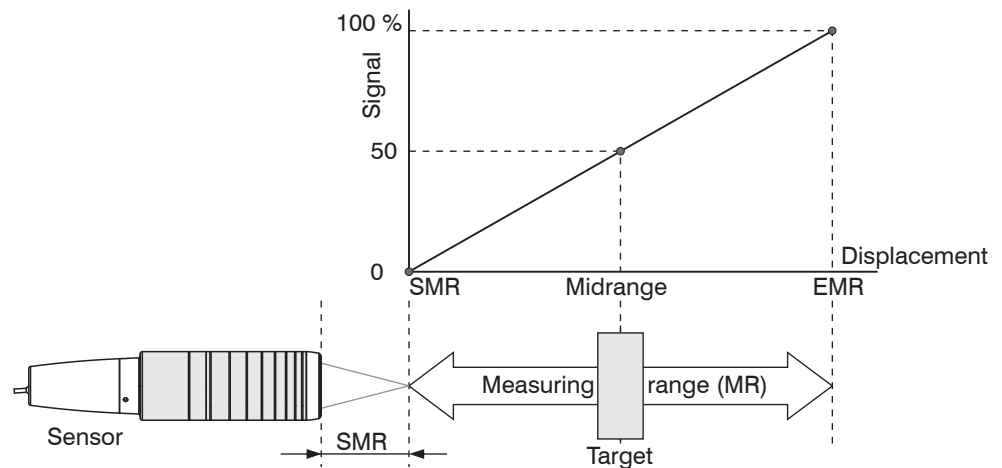


Fig. 37 Defining measuring range and output signal

➡ To do this, observe the `Intensity LED`.

| LED | State | Description |
|---------------|--------|----------------------|
| Intensity 1/2 | Red | Signal in saturation |
| | Yellow | Signal too low |
| | Green | Signal ok |

- If the `Intensity LED` changes to red, increase the measuring rate.
- If the `Intensity LED` changes to yellow, reduce the measuring rate.

➡ Choose a measuring rate that makes the `Intensity LED` light up green.

➡ If necessary, change the exposure mode, use the manual mode, see Chap. 6.2.5.

➡ Use the required measuring rate, and adjust the exposure time. Or let the exposure time define possible measuring rates.

If the signal is low (`Intensity LED` is orange) or saturated (`Intensity LED` is red), the controller will carry out measurements, but measuring accuracy might not correspond to the specified technical data.

6.2.2 Reset Counter

The measured value counter can be used to check if the data are output completely or if a package is missing. Counting begins at zero.

6.2.3 Input Triggering

6.2.3.1 General

The trigger conditions applies to both channels for the IFC2422.

The value input (data recording) on the confocalDT 242x can be controlled through an external electrical trigger signal or commands.


- Triggering does not affect preset measuring rates.
- Sync/Trig or TrigIn are used as external trigger input, see Chap. 4.4.9.
- Factory settings: no triggering, the controller starts transmitting data as soon as it is switched on.
- “Sync in” pulse duration is 5 μ s or more.

| | | | | |
|--------------------|----------------------|---|---------------------------|---------------------------------|
| <i>Sync/Trig</i> | Trigger type | Level | Trigger-Level | Low / High |
| | | Edge | Trigger-Level | Falling edge / increasing edge |
| | | | Number of measured values | <i>manual selection</i> |
| | Terminating resistor | <i>Off / on</i> | | |
| <i>TrigIn</i> | Trigger type | Level | Trigger-Level | Low / High |
| | | Edge | Trigger-Level | Falling edge / increasing edge |
| | | | Number of measured values | <i>manual selection</i> |
| | Input pulse | <i>TTL / HTL</i> | | |
| <i>Software</i> | | Number of measured values | | <i>manual selection</i> / Value |
| <i>Encoder 1/2</i> | | Lower limit | | Value |
| | | Upper limit | | Value |
| | | Step size | | Value |
| <i>Inactive</i> | | <i>continuous measured value output</i> | | |

Level triggering. Continuous value input for as long as the selected level is active. After that the controller stops the input/output of the values. Pulse duration must last for at least one cycle. The subsequent pause must also last for at least one cycle.


W = Displacement signal

Fig. 38 Active high level trigger (U_i), relevant analog signal (A_0) and digital signal (D_0)

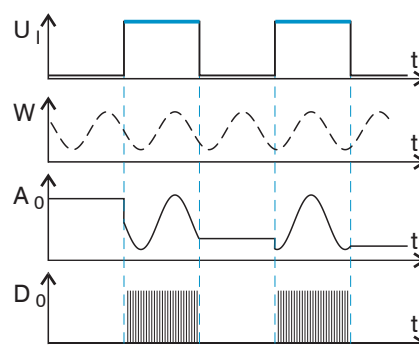

Edge triggering. Starts value input/output as soon as the selected edge is active to the trigger input. The duration of the pulse must be at least 5 μ s.

Fig. 39 Falling edge trigger (U_i), relevant analog signal (A_0) and digital signal (D_0)

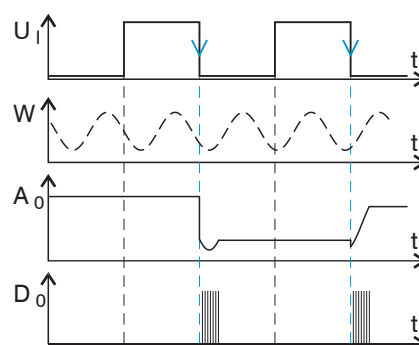

Software triggering. Starts measurement data recording as soon as a software command (instead of the trigger input) or the Initiate trigger button is activated.

Encoder triggering. Starts the measurement data recording through one of the both encoder inputs.

6.2.3.2 Triggering Data Recording

The current array signal is only further processed after a valid trigger event and the measured values are calculated from this. The measurement data is then transferred for further calculation (e.g. averaging or statistics), as well as the output via a digital or analog interface.

When calculating averages, measured values immediately before the trigger event cannot be included; instead older measured values are used, which had been entered during previous trigger events.

6.2.3.3 Trigger Time Difference

Since the exposure time is not started directly by the trigger input, the respective time difference to the measurement cycle can be output. This measured value can, for example serve to accurately assign measurements to one place, when measuring objects are scanned at a constant speed and when each track starts with a trigger.

The time from the start of the cycle until the trigger event is defined as a trigger time difference. The output of the time determined occurs 3 cycles later, due to the internal processing.

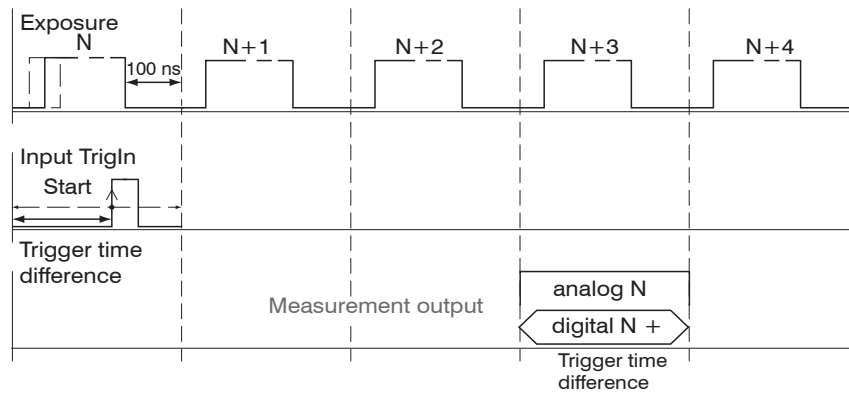


Fig. 40 Definition of the trigger time difference

- The start of the cycle does not mean the start of the exposure time. There is only a fixed difference of 100 ns between the start of the cycle and the end of the exposure time.

6.2.4 Masking the Evaluation Range

With the IFC2422, the user can set an individual evaluation range for both channels.

Masking limits the range that the video signal uses for distance or thickness calculations. This feature is used, for example, if ambient light with certain wavelengths (blue, red, IR) causes video signal interference. It is also possible to mask the background if it reaches into the measuring range.

Masking (start and end) is entered into the two boxes on the left (in %). The factory settings are 0 % (start) and 100 % (end).

i If you limit the video signal area, a peak is detected only, if it lies completely within the masked area, i. e. above the threshold. The measuring range can be reduced thereby.

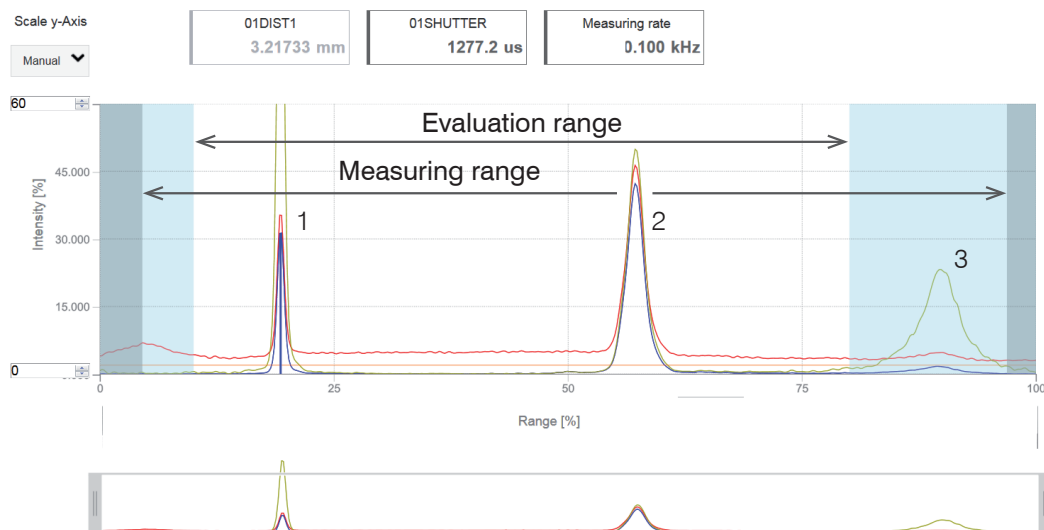


Fig. 41 Limiting the used video signal

The example shown in the figure uses the peaks (1) and (2) for the evaluation while peak (3) is not used.

6.2.5 Exposure Mode

With the IFC2422, the shutter mode can be individually set for both channels.

| <i>Measurement mode</i> | | |
|----------------------------------|--|---|
| <i>Manuel mode</i> | Exposure time 1 in μs | <i>Value (0.1 μs ... 10,000 μs)</i> |
| <i>Alternating two-time mode</i> | Exposure time 1 in μs | <i>Value (0.1 μs ... 10,000 μs)</i> |
| | Exposure time 2 (shorter) in μs | <i>Value (value is shorter than time 1)</i> |
| <i>Automatic two-time mode</i> | Exposure time 1 in μs | <i>Value (0.1 μs ... 10,000 μs)</i> |
| | Exposure time 2 (shorter) in μs | <i>Value (value is shorter than time 1)</i> |


 Select the required exposure mode.


Measurement mode. Maintains the required or suitable measuring rate, and adjusts only the exposure time. A smaller control range is used to achieve faster results. This mode also enables the user to work with targets with different reflections that have the same measuring rates. Lasts 1 up to a maximum of 7 measurement cycles (change from no target too good reflective target with 0.1 kHz measuring rate).

Manuel mode. No automatic adjustments. Set (optimized) values are maintained. This makes sense for fast changes due to targets with identical surfaces moving in and out or for highly dynamic movements (no overshoots). It is not recommended to use this mode for strongly varying target surfaces. Manual mode can also be used for several layers if the brightest peak should not be captured. The video signal display can acquire suitable measuring rates and exposure times from automatic mode.

Alternating two-time mode. Operating mode with two manually preset exposure times that are used alternately. Suitable for two very different high peaks when measuring thickness. We recommend using this mode in particular, if the smaller peak disappears or the higher peak overshoots. A possibly set video averaging is ignored here.

Automatic two-time mode. Fastest mode with two manually preset exposure times. The more suitable time is automatically selected. We recommend using this mode to measure distances for fast changing surface properties, such as mirrored or anti-glare glass.

 Gray shaded fields require a selection.

 *Value* Dark-bordered fields require you to specify a value.

6.2.6 Peak Separation

6.2.6.1 Detection Threshold

With the IFC2422, the detection threshold can be set individually for both channels.

The detection threshold (in %, relates to the signal after dark correction) defines the minimum intensity for including a video signal peak in the measurement. Therefore, the video graph must be taken into consideration when defining the threshold.

| | | |
|---------------|-------|-------------------------|
| Min threshold | Value | Value in %, default 2 % |
|---------------|-------|-------------------------|

Defining the detection threshold

- For very weak signals (e.g. typical for extremely high measuring rates), choose a low detection threshold, as only signal parts above this threshold will be included in measurements.
- In general, set the threshold high enough to avoid that any interfering video signal peaks are detected.

The detection threshold affects linearity, it is therefore recommended to adjust it as little as possible.

6.2.6.2 Peak Modulation

With the IFC2422, the peak modulation can be set individually for both channels. Peak modulation is used e.g. when measuring thin layers.

A peak detected with the detection threshold may consist of two or more overlapping peaks. The peak modulation indicates to which degree the video signal must be modulated in order to separate the peak again for the subsequent signal processing.

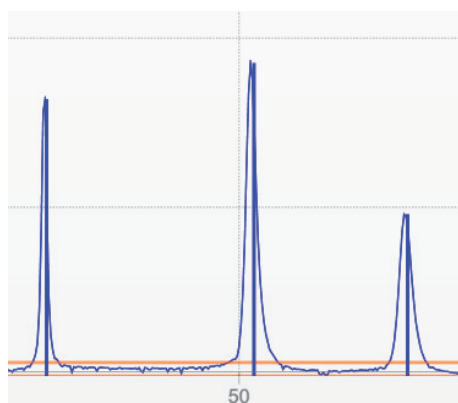


Fig. 42 Separated peaks: measurement possible

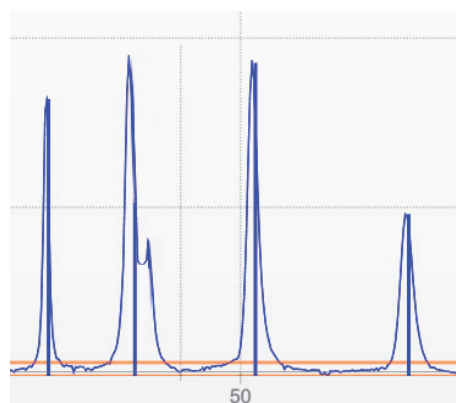



Fig. 43 Interleaved peaks: probable measurement uncertainty

The modulation is individually evaluated for each peak detected with the detection threshold.

Default value is 50 % as a compromise between the separability of the peaks and the measurement uncertainty due to mutual peak interference.

- Increase the value when the controller separates peaks which should be processed together.
- Decrease the value when the controller does not separate peaks which should be processed separately.

Example 1: With the default setting, no peak separation is carried out. The controller determines a distance from the center of gravity in the video signal.

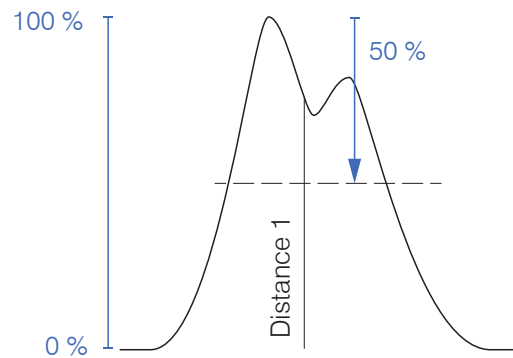

Example 2: With a lower peak modulation value, the controller detects two separate peaks in the video signal and calculates two distances.

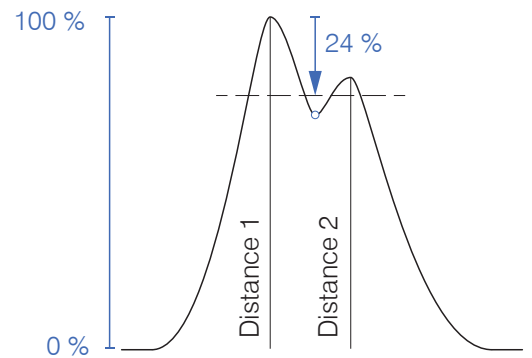


Fig. 44 Examples for peak modulation

Changing the `peak modulation` is only necessary in special cases. Use this function carefully.

6.2.7 Peak Selection, Number of Measurement Values

With the IFC2422, the number of peaks can be set individually for both channels. Each channel detects up to six peaks.

i This function is used, if a material generates peaks in front of or between the applied peaks caused by thin layers on the measurement object. This function should be used with care and exclusively by product specialists.

The selection of the peaks determines which areas in the signal are used for the distance or thickness measurement. If a measurement object contains multiple transparent layers, a correct measurement result is determined only for the first peak (distance measurement) and the first two peaks (thickness measurement).

The peaks are counted from the start of measuring range to the end of measuring range.

| | |
|----------------------|--|
| 1 measurement value | first peak / highest peak / last peak |
| 2 measurement values | first and second peak / highest and second highest peak / second to last and last peak |
| 3 measurement values | Individual |
| 4 measurement values | Individual |
| 5 measurement values | Individual |
| 6 measurement values | Individual |

Fig. 45 Options for peak selection

The determination of the peak heights is performed using the light corrected signal.


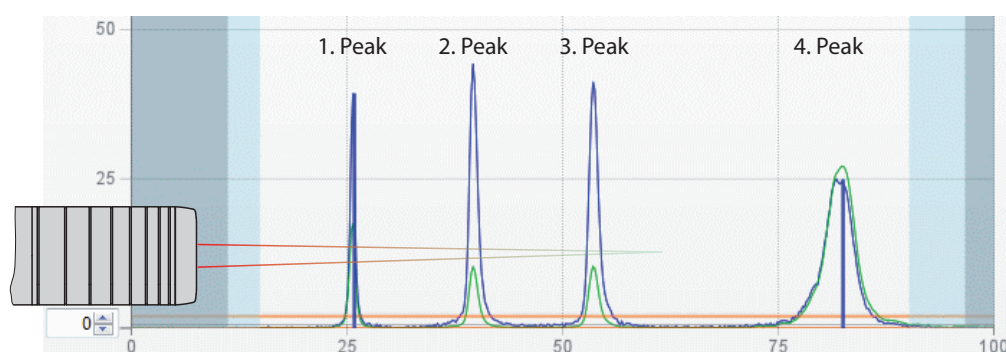


Fig. 46 Extract of a video signal with four peaks in the measuring range

By default the refractive correction is performed. If more than two peaks are within the measuring range, an exact refractive correction is performed with the same amount of peaks only. Example: 3 peaks, the first or the last peak leaves the measuring range sometimes. Switch off the refractive correction, because the refractive correction is applied on a different layer, a clear assignment of the material is not possible.

6.2.8 Material Selection

With the IFC2422, the target material can be set individually for both channels.

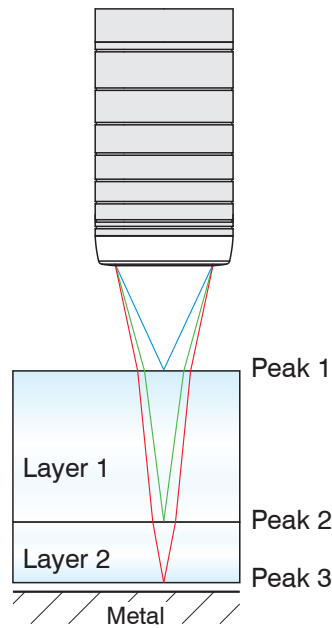

Displacement and thickness measurements require the refractive correction in the controller.

- ➡ Change to the `Material selection` menu.
- ➡ Activate the refractive correction. Click on the button `On` in the on/off refractive correction menu.
- ➡ Select the used material of each layer.

Fig. 47 Target layers

Clicking on the button `Edit material table` expands/reduces the materials database in the controller. For a new material, a refractive index and the Abbe number v_d are required or three refractive index numbers for different wavelengths (also approx. the same).

| | | |
|---------|---|----------|
| Vacuum | vacuum, air (approximately) | 1 |
| Water | (a liquid) | 1.337121 |
| Ethanol | ethyl alcohol, pure alcohol (a liquid) | 1.3614 |
| Acrylic | acrylic resin, adhesive, lacquer | 1.497828 |
| PMMA | polymethyl methacrylate, acrylic glass (a plastic) | 1.497761 |
| PMMI | polymethacrylmethylimide, polymethyl methacrylimide (a plastic) | 1.534 |
| | polystyrene, polystyrol (a plastic) | |

On/off refractive correction:
On is the default setting if the expected n_r recommended to disable the refractive correction always 1.0).

Fig. 48 Material-specific refractive index numbers

6.3 Signal Processing

6.3.1 Spike Correction

With the IFC2422, the spike correction can be set individually for both channels.

This special form of filtering is used to remove very high spikes from a relatively constant course of measurement values, though while retaining any smaller spikes. A median would remove all the spikes.

The assessment of whether a measurement is a spike (outlier) is based on the mean of a particular number of previous valid readings. The permissible deviation from the next value is calculated using the tolerance range. If the new measured value deviates too much, it will be corrected to the previous value. A maximum number of consecutive measured values to be corrected must also be stated.

This function acts the same way on all output distances; the differences (thicknesses) are calculated on the basis of the corrected distances.

Spike correction - Channel 1

Spike correction:
 Off On

Evaluation length

Tolerance range in mm

Number of corrected values

Attention: In the event of several consecutive spikes (outliers), the previous corrected value is used in the correction of the following measured value. Use this function only in appropriate applications. Improper use can lead to a distortion of the measured value sequence! Check the possible impact of a changed measured value sequence on the measuring environment and subsequent controllers/systems.

- Evaluation length (max. 10): x
- Max. Tolerance range (mm); the spike (outlier) correction comes into play when the value is not met or is exceeded: y
- Number of corrected values (max. 100): z

Example: $x = 3 / y = 0.05 / z = 1$

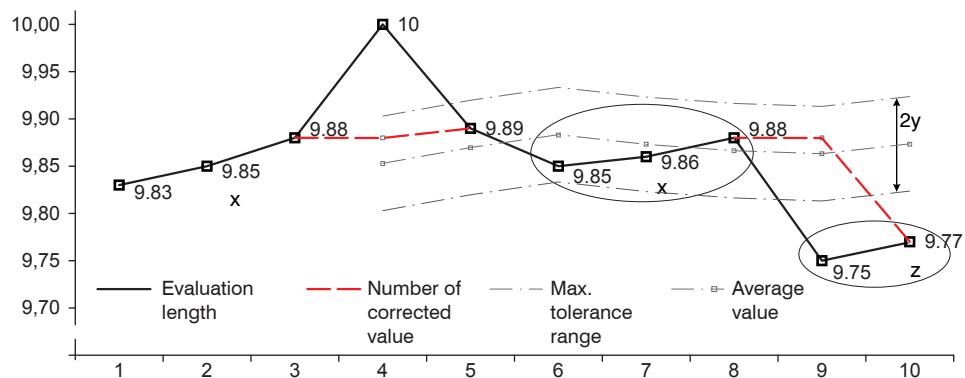


Fig. 49 Correction of measuring values

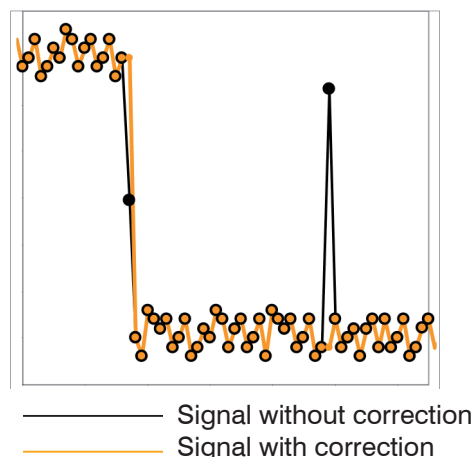


Fig. 50 Different signals

Application tips

- Eliminating spikes with an adjustable threshold
- For highly dynamic data acquisition of fast moving objects
- With measurement jumps suitable, especially those with interfering peaks
- With edge jumps and with some bent edge transitions
- Execution is done before other averages take place

6.3.2 Calculation

6.3.2.1 Data Source, Parameter, Programs

With the IFC2422, calculation can be set individually for both channels.

One calculation operation can be performed in each calculation block. The calculation program, the data sources and the parameters of the calculation program must be set for this.

| | | |
|-------------------|------------|--|
| Thickness | Difference | Two signals or results, Signal Distance B < Signal Distance A |
| Formula | | Distance A - Distance B |
| Calculation | Summation | Two signals or results |
| Formula | | Factor 1 * Distance A + Factor 2 * Distance B + Offset |
| Median | | |
| Moving Average | | |
| Recursive Average | | |

Fig. 51 Available programs

Sequence for creating a calculation block, see Fig. 52:


- ➡ Select a program ①, e.g. average
- ➡ Define the parameter ②.
- ➡ Define the data source(s) ③.
- ➡ Enter a block name ④.
- ➡ Click on the button Store calculation.


Fig. 52 Sequence for the program selection

The programs calculation and thickness have two data sources. Averaging programs each have one data source.




| | | | |
|--------------------------------------|------------------|-----------------------------|---|
| Calculation parameters (Calculation) | Factor 1 / 2 | Value | -32768.0 ... 32767.0 |
| | Offset | Value | -2147.0 ... 2147.0 |
| Calculation parameters (Averaging) | Average type | Recursive / Moving / Median | |
| | Number of values | Value | Recursive: 2 ... 32000 |
| | | Value | Moving: 2 / 4 / 8 / 16 / 32 / 64 / 128 / 256 / 512 / 1024 / 2048 / 4096 |
| | | Value | Median: 3 / 5 / 7 / 9 |

The number of values states over how many sequential measured values in the controller should be averaged before a new measured value is output.

 Gray shaded fields require a selection.

 Dark-bordered fields require you to specify a value.

6.3.2.2 Definitions
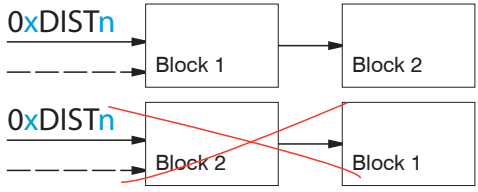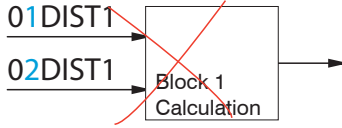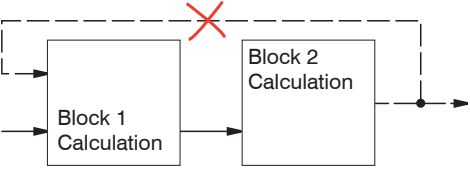
| | |
|---|--|
| <p>Distance value(s) of channel/Sensor 1</p> | <p>01DIST1, 01DIST2, ... 01DIST6</p> |
| <p>Distance value(s) of channel/Sensor 2</p> | <p>02DIST1, 02DIST2, ... 02DIST6</p> |
| <p>Max. 10 calculation blocks per channel/sensor. The calculation blocks are processed sequentially.</p> |  |
| <p>The calculation blocks in the <i>Signal processing</i> menu process only distances and calculated results of the respective channel/sensor.</p> |  |
| <p>Feedback couplings (algebraic loops) over one or several blocks are not possible. Only the distance values or the calculated results from the previous calculation blocks can be used as data source.</p> |  |
| <p>Processing sequence</p> <ol style="list-style-type: none"> 1. Unlinearized distances 2. Linearization of distances 3. Refractive correction of distances 4. Error handling in the case of no valid measured value 5. Spike correction of distances 6. Calculation blocks 7. Statistics | |

6.3.2.3 Measurement Averaging

Measurement averaging is performed after measurement values have been calculated, and before they are issued or processed through the relevant interfaces.

Measurement averaging

- improves the resolution
- allows masking individual interference points, and
- ‘smoothes’ the reading.

i Linearity is not affected by averaging. Averaging has no effect on measuring rate and output rate.

The internal average value is re-calculated for each measuring cycle.

i The defined type of average value and the number of values must be stored in the controller to ensure they are hold after it is switched off.

Controller IFC242x is delivered with “moving average, averaging value = 16” as factory settings, i.e. averaging is not enabled by default.

Moving average


The definable number N for successive measurements (window width) is used to calculate the arithmetic average M_{mov} according to the following formula:

$$M_{mov} = \frac{\sum_{k=1}^N MV(k)}{N}$$

MV = measured value
 N = averaging value
 k = continuous index (in the window)
 M_{mov} = average value or output value

Each new measured value is added, and the first (oldest) value is removed from the averaging (from the window). This produces short response times for measurement jumps.

Example: N = 4

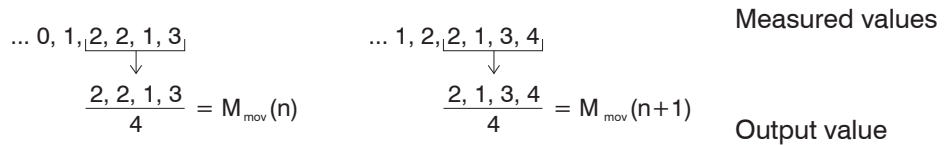

i Moving average in the controller IFC242x allows only potentials of 2 for N. The highest averaging value is 1024.

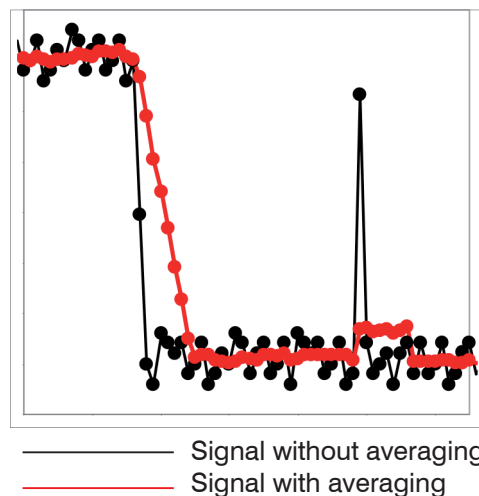


Fig. 53 Moving average, N = 8

Application tips

- Smooths measured values
- The effect can be finely controlled in comparison with the recursive averaging
- With uniform noise of the measured values without spikes
- At a slightly rough surface, in which the roughness should be eliminated
- Also suitable for measured value jumps at relatively low settling time

Recursive Average

Formula:

$$M_{rec}(n) = \frac{MV_{(n)} + (N-1) \times M_{rec(n-1)}}{N}$$

MV = measured value

N = averaging value, N = 1 ... 32768


n = measurement index

M_{rec} = average value or output value

The weighted value of each new measured value MV(n) is added to the sum of the previous average values

M_{rec}(n-1).

Recursive averaging allows for very strong smoothing of the measurements, however it requires long response times for measurement jumps. The recursive average value shows low-pass behavior.

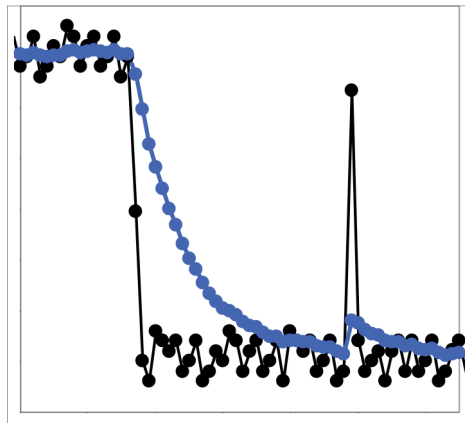

————— Signal without averaging
 ———— Signal with averaging

Fig. 54 Recursive average, N = 8

Application tips

- Permits a high degree of smoothing of the measurement values. However, it requires extremely long transient recovery times for measured value jumps (low-pass behavior)
- Permits a high degree of smoothing for noise without strong spikes
- For static measurements, to smooth signal noise
- For dynamic measurements on rough surfaces, to eliminate the roughness, e.g. roughness of paper
- For the elimination of structures, e. g. parts with uniform grooves, knurled rotary parts or roughly milled parts
- Unsuitable for highly dynamic measurements

Median

A median value is formed from a preselected number of measurements.

When creating a median value for controller IFC242x, incoming readings are sorted after each measurement. Then, the average value is provided as the median value.

3, 5, 7 or 9 readings are taken into account. This means that individual interference pulses can be suppressed. However, smoothing of the measurement curves is not very strong.

Example: Median value from five readings

... 0 1 2 4 5 1 3 → Messwerte sortiert: 1 2 **3** 4 5 Median_(n) = 3
 ... 1 2 4 5 1 3 5 → Messwerte sortiert: 1 3 **4** 5 5 Median_(n+1) = 4

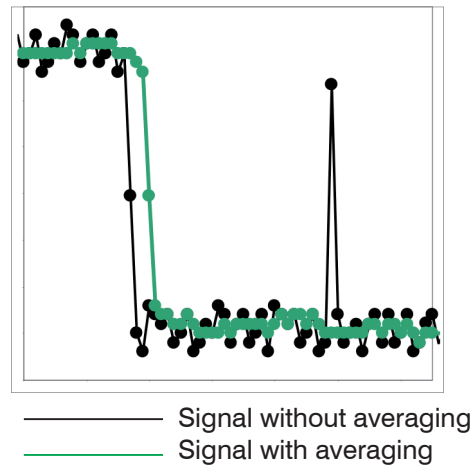


Fig. 55 Median, N = 7

Application tips

- The measurement value curve is not smoothed to a great extent, used to eliminate spikes
- Suppresses individual interference pulses
- In short, strong signal peaks (spikes)
- Also suitable for edge jumps (only minor influence)
- For rough, dusty or dirty environment, to eliminate dirt or roughness
- Further averaging can be used after the median filter

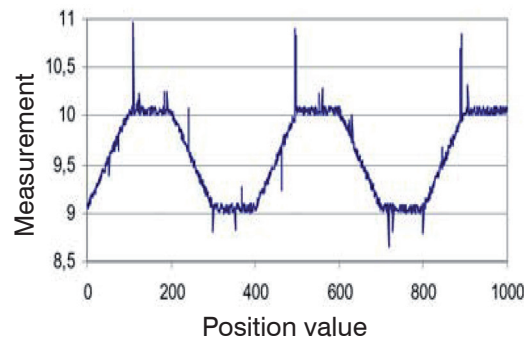


Fig. 56 Original profile

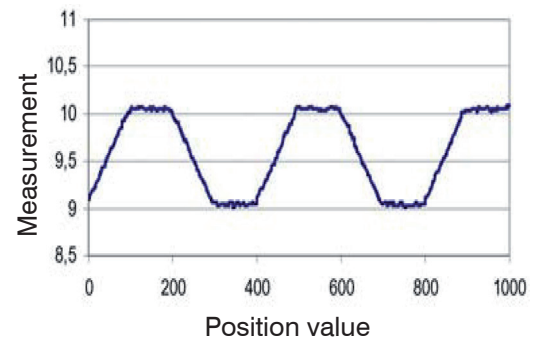


Fig. 57 Profile with Median, N = 9

6.4 Postprocessing

6.4.1 Calculation

6.4.1.1 Data Source, Parameter, Programs

In each calculation block one calculation step can be carried out. To do so, you must adjust the calculation program, the data sources and the program parameters.

| | | |
|-------------------|------------|--|
| Thickness | Difference | Two signals or results, Signal Distance B < Signal Distance A |
| Formula | | Distance A - Distance B |
| Calculation | Summation | Two signals or results |
| Formula | | Factor 1 * Distance A + Factor 2 * Distance B + Offset |
| Median | | |
| Moving Average | | |
| Recursive Average | | |

Fig. 58 Available programs

Sequence for creating a calculation block, see Fig. 59:

➡ Select a program ①, e.g. average

➡ Define the parameter ②.

➡ Define the data source(s) ③.

➡ Enter a block name ④.


➡ Click on the button
Store calculation.


Fig. 59 Sequence for the program selection

The programs calculation and thickness have two data sources. Averaging programs have respectively one data source.

| | | | |
|---|------------------|-----------------------------|---|
| Calculation parameters (Calculation) | Factor 1 / 2 | Value | -32768.0 ... 32767.0 |
| | Offset | Value | -2147.0 ... 2147.0 |
| Calculation parameters (Averaging) | Average type | Recursive / Moving / Median | |
| | Number of values | Value | Recursive: 2 ... 32000 |
| | | | Moving: 2 / 4 / 8 / 16 / 32 / 64 / 128 / 256 / 512 / 1024 / 2048 / 4096 |
| | | Median: 3 / 5 / 7 / 9 | |

The number of values indicates how many consecutive values are averaged in the controller before a new measurement value is output.

 Gray shaded fields require a selection.

 Dark-bordered fields require you to specify a value.

6.4.1.2 Definitions

| | |
|--|-------------------------------|
| Distance value(s) of channel/Sensor 1 | 01DIST1, 01DIST2, ... 01DIST6 |
| Distance value(s) of channel/Sensor 2 | 02DIST1, 02DIST2, ... 02DIST6 |
| A maximum of 10 calculation blocks is possible. The calculation blocks are processed sequentially. | |
| Feedback couplings (algebraic loops) over one or several blocks are not possible. Only the distance values or the calculated results from the previous calculation blocks can be used as data source. | |
| <p>Processing sequence</p> <ol style="list-style-type: none"> 1. Unlinearized distances 2. Linearization of distances 3. Refractive correction of distances 4. Error handling in the case of no valid measured value 5. Spike correction of distances 6. Calculation blocks signal processing 7. Calculation blocks post processing 8. Zeroing, Mastering 9. Data reduction 10. Data output | |

6.4.1.3 Measurement Averaging

The measurement averaging corresponds to the averaging in the signal processing menu, see Chap. 6.3.2.3.

Averaging is possible in two different areas:

- Signal Processing
- Postprocessing

Averaging is recommended for static measurements or slowly changing measured values. Averaging reduces noise or suppresses spikes in the measurement values.

6.4.2 Zeroing, Mastering

Use zeroing and setting masters to define a target value within the measuring range. This shifts the output range. This feature can be useful, for example, when several sensors carry out measurements simultaneously in thickness and planeness measurements. When measuring the thickness of a transparent target using controller IFC242x, you need to specify the actual thickness of a master object as `Master value`.

| | | |
|--------------------|-------|--|
| Master value in mm | Value | Specify the thickness (or other parameter) of a master object. Value range: - 2147.0 ... +2147.0 mm |
|--------------------|-------|--|

Mastering (setting masters) is used to compensate for mechanical tolerances in the sensor measurement setup or to correct chronological (thermal) changes to the measuring system. The master value, also called calibration value, is defined as the target value.

The `master value` is the reading that is issued as result of measuring a master object. Zeroing is when you set a master with 0 (zero) as the master value.


| Position | Signal | Value |
|----------|---------|-------|
| 1 | 01DIST1 | 3.000 |
| 2 | | |
| 3 | | |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |
| 10 | | |

The zeroing/mastering function is not channel-specific. The controller manages up to 10 master signals. These 10 signals can be applied to any internally determined value. This also applies for calculated values.

i Mastering or zeroing requires a target object to be present in the measuring range and affects both analog and digital outputs.

- 1 Starts/stops the function
- 2 Applies a certain selected signal or function to all defined signals (5)
- 3 Deletes a signal
- 4 Selects a signal for the function, assigns master value
- 5 Overview of all existing signals for the function

Fig. 60 Mastering dialog, overview of individual master values

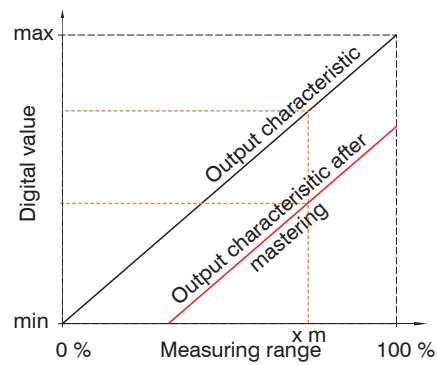

When setting a master, the output characteristic is moved in parallel. Moving the characteristic reduces the relevant measuring range of a sensor (the further master value and master position are located, the greater the reduction).

Setting masters/Zeroing – Step-by-Step:

- Place target and sensor into their required positions.
- Define the `Master value` (web interface/ASCII).

After setting the master, the controller will issue new readings that relate to the master value. If you click the `Reset master value` button to undo the mastering process, the system reverts to the state that existed before the master was set.

Fig. 61 Moving the characteristic when mastering



Fig. 62 Flow chart for zeroing, mastering (key Multifunction)



Fig. 63 Flow chart for resetting zeroing/mastering

The zeroing/mastering function can be applied several times in a row.

6.4.3 Statistics

The controller derives the following statistical values from the measurement result: Statistical values are calculated from measured values within the evaluation range. The evaluation range is updated with every new measurement value. Statistical values are displayed in the web interface, the `measurement chart` or are output via the interfaces.

| Position | Signal | Statistic value |
|----------|---------------|-----------------|
| 1 | 01DIST1 | 2048 |
| 2 | 02DIST1 | 2048 |
| 3 | Diff_Dist_2_3 | 4096 |
| 4 | | |
| 5 | | |
| 6 | | |
| 7 | | |
| 8 | | |

The statistical values are not channel-specific. The controller manages up to 10 statistical values. These 10 signals can be applied to any internally determined value. This also applies for calculated values.

Fig. 64 Mastering dialog, overview of individual master values

- 1 Use the `Reset statistic value` button to reset a certain signal or all statistic signals in order to start a new evaluation cycle (storage period). When a new cycle starts, previous statistical values are deleted.
- 2 Deletes a signal.
- 3 Number of measurement values based on which minimum, maximum and peak-to-peak are determined for a signal. The range of values used for calculation can be between 2 and 16384 (in powers of 2) or include all measured values.
- 4 Selects a signal for the function.
- 5 Overview of all existing signals for the function.

Sequence for creating a statistical evaluation:

- ➡ Change to the tab `Settings > Postprocessing > Statistics`.
- ➡ Choose a signal (4) for which the statistical values should be calculated.
- ➡ Define the evaluation range via the `statistic value`.

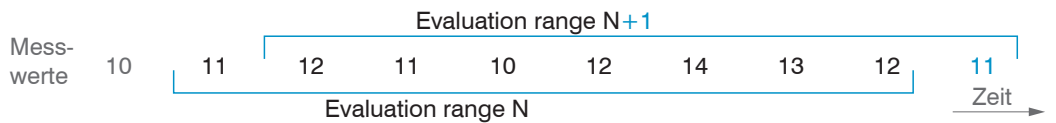


Fig. 65 Dynamic update of evaluation range via measurement values, statistical value = 8

6.4.4 Output Triggering

6.4.4.1 General

The value output (data output) on the confocalDT 242x can be controlled through an external electrical trigger signal or commands. Both analog and digital outputs are affected. The measured value to the trigger point is output delayed.


- Triggering does not affect preset measuring rates.
- Sync/Trig or TrigIn are used as external trigger input, see Chap. 4.4.9.
- Factory settings: no triggering, the controller starts transmitting data as soon as it is switched on.
- “Sync in” pulse duration is 5 μ s or more.

| | | | | | | |
|-------------|----------------------|-----------|----------------------------------|--------------------------------|-------|--|
| Sync/Trig | Trigger type | Level | Trigger level | Low / High | | |
| | | Edge | Trigger level | Falling edge / increasing edge | | |
| | | | Number of measured values | manual selection | Value | |
| | Terminating resistor | Off / on | | | | |
| TrigIn | Trigger type | Level | Trigger level | Low / High | | |
| | | Edge | Trigger level | Falling edge / increasing edge | | |
| | | | Number of measured values | manual selection | Value | |
| | Input pulse | TTL / HTL | | | | |
| Software | | | Number of measured values | manual selection | Value | |
| | | | | infinite | | |
| Encoder 1/2 | | | Lower limit | | Value | |
| | | | Upper limit | | Value | |
| | | | Step size | | Value | |
| Inactive | | | continuous measured value output | | | |

Level triggering. Continuous value output for as long as the selected level is active. After that the controller stops the output of the values. Pulse duration must last for at least one cycle. The subsequent pause must also last for at least one cycle.

W = displacement signal


Fig. 66 Active high level trigger (U_i), relevant analog signal (A_o) and digital signal (D_o)

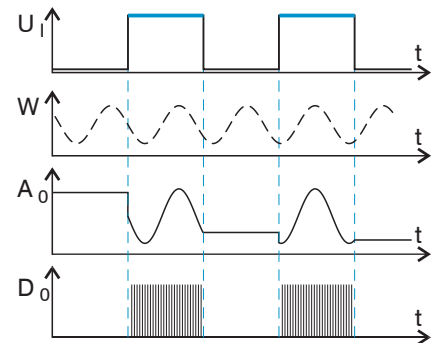

Edge triggering. Starts value output as soon as the selected edge is active to the trigger input. If trigger conditions are met, the controller outputs a defined number of measurements. Value range between 1 and 16383. After completion of data output the analog output remains standing at the last value (Sample & Hold).

The duration of the pulse must be at least 5 μ s.

Fig. 67 Falling edge trigger (U_i), relevant analog signal (A_o) and digital signal (D_o)

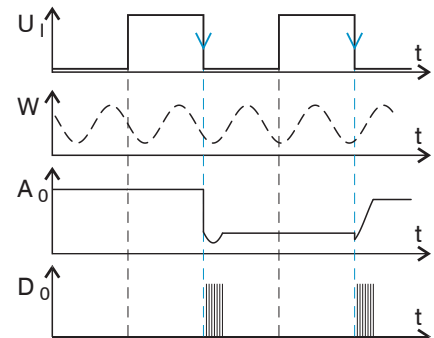

Software triggering. Starts measurement data output as soon as a software command (instead of the trigger input) or the Initiate trigger button is activated.

Encoder triggering. Starts the measurement data output through one of the both encoder inputs.

6.4.4.2 Triggering Data Output

Measurement values are calculated continuously and independently of the trigger event. A trigger event simply triggers the value output via a digital or an analog interface.

Therefore, any values measured immediately before the trigger event are included in calculating mean values (averages) or statistics.

The triggering of the measured value recording and output have the same timing.

6.4.5 Data Reduction, Output Data Rate


| | | |
|-----------------------|---------------------------|---|
| Data reduction | Value | <i>Instructs the controller, which data are excluded from the output, and thus the amount of transmitted data is reduced.</i> |
| Reduction applies for | RS422 / Analog / Ethernet | <i>The interfaces, which are provided for the sub-sampling, are to be selected with the checkbox.</i> |


You can reduce the measurement output in the sensor if you set the output of every nth measurement value in the web interface or by command. Data reductions causes only every nth measured value to be output. The other measurement values are rejected. The reduction value n can range from 1 (each measurement value) to 3,000,000. This allows you to adjust slower processes, such as a PLC, to the fast sensor without having to reduce the measuring rate.

6.4.6 Error Handling (Hold Last Value)

If no valid reading can be obtained, an error is issued. Should this be a problem for processing, the last valid value can be hold for a certain period of time, and will be issued repeatedly.

| | | | |
|----------------|----------------------------|---|--|
| Error handling | Error output, no value | <i>Instead of a value, interfaces output an error</i> | |
| | Hold last value infinitely | <i>Interfaces output the last valid value until a new, valid value is available</i> | |
| | Hold last value | Value | <i>Possible number of values to be maintained between 1 and 1024 When number = 0, the last value is maintained until a new, valid value is displayed</i> |

 Gray shaded fields require a selection.

 Dark-bordered fields require you to specify a value.

6.5 Outputs

6.5.1 Digital Interfaces

| | | | |
|-----------------------------|---|--|--|
| Digital interface selection | RS422 / Ethernet / Error output (switching outputs) | Defines which interface is used for data output. A parallel data output via multiple channels is possible. | |
| RS422 | Baud rate | 9.6 / 115.2 / 230.4 / 460.8 / 691.2 / 921.6 / 2000 / 3000 / 4000 kBps | |
| Ethernet | IP settings controller | Static / DHCP | Values for IP address / gateway / subnet mask. Only for static IP addresses. |
| | Ethernet measured value transmission | Server TCP | Value for the port |

6.5.1.1 RS422

The RS422 interface has a maximum baud rate of 4000 kBaud. As a factory setting, the baud rate is set to 115.2 kBaud. Use ASCII commands or the web interface to configure.

Transfer settings for controller and PC must match.

Data format: Binary. Interface parameters: 8 data bits, no parity, 1 stop bit (8N1). Selectable baud rate.

The RS422 interface can transfer 18 bits per output value.

The maximum number of measured values that can be transferred for each measuring point depends on the controller measuring rate and the selected RS422 interface transmission rate. Where possible, use the maximum available transmission rate (baud rate), see Chap. [A 3.3.13](#).

6.5.1.2 Ethernet

When using a static IP address, you need to specify values for IP address, gateway and subnet mask. This is not necessary when using DHCP.

The controller is factory set to the static IP address 169.254.168.150

The controller transmits the Ethernet packets at a transmission rate of 10 MBit/s or 100 MBit/s. The transfer rate is selected automatically depending on the connected network or PC.

Any output values and additional information to be transmitted that are logged at one point in time are combined to form a value frame. Multiple value frames are combined as one measurement block. A header is added to the start of each measurement value packet.

When transmitting measurement data, the controller sends each measurement value (measured value block) to the connected remote station after successful connection establishment. No explicit request is required.

If any changes are made to the transmitted data or the frame rate, a new header will be sent automatically. Distance and thickness values are transmitted as 32 bit signed integer with 1 nm resolution.

This measured value block can also consist of several Ethernet packets depending on the size of the video signal.

6.5.1.3 Data Output RS422, Ethernet

The output data from all internally determined values and the calculated values from the calculation modules are selected separately for each of the two interfaces. This data is then output in a defined sequence. The selected values for Ethernet include the signals for the transfer of the measures values and the video data. However, this does not apply for the web diagram.

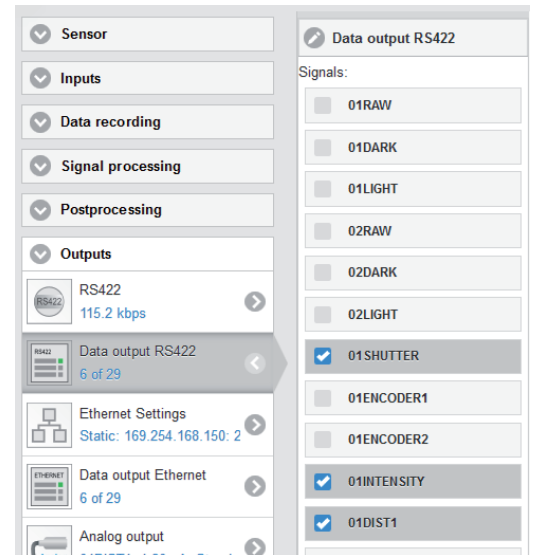


Fig. 68 Select output data

6.5.2 Analog Output

Only one type of measurement can be transmitted at any given time. The analog output has a resolution of 16 bit.

| | | | |
|---------------|---|--|-------|
| Output signal | 01DIST1 / ... 01DIST6 / 02DIST1 / ... 02DIST6 / ... | The data selection depends on the current setting and includes, in addition to the distance values, also the results from the calculation modules. | |
| Output range | 4 ... 20 mA / 0 ... 5 V / 0 ... 10 V | Either the voltage or the current output on the controller can be used. | |
| Scale | Standard scale | Scaled to 0 ... measuring range | |
| | Two-point scale | Minimum value (in mm): | Value |
| | | Maximum value (in mm): | Value |

The first value corresponds to the start of the measuring range and the second value to the end of the measuring range. If the analog range needs to be moved, we recommend to use zeroing or mastering.

Two-point scaling enables the user to specify separate start and end values (in mm) for the sensor's measuring range. The available output range of the analog output is then spread between the minimum and maximum values. This allows for decreasing analog characteristics, see Fig. 69.

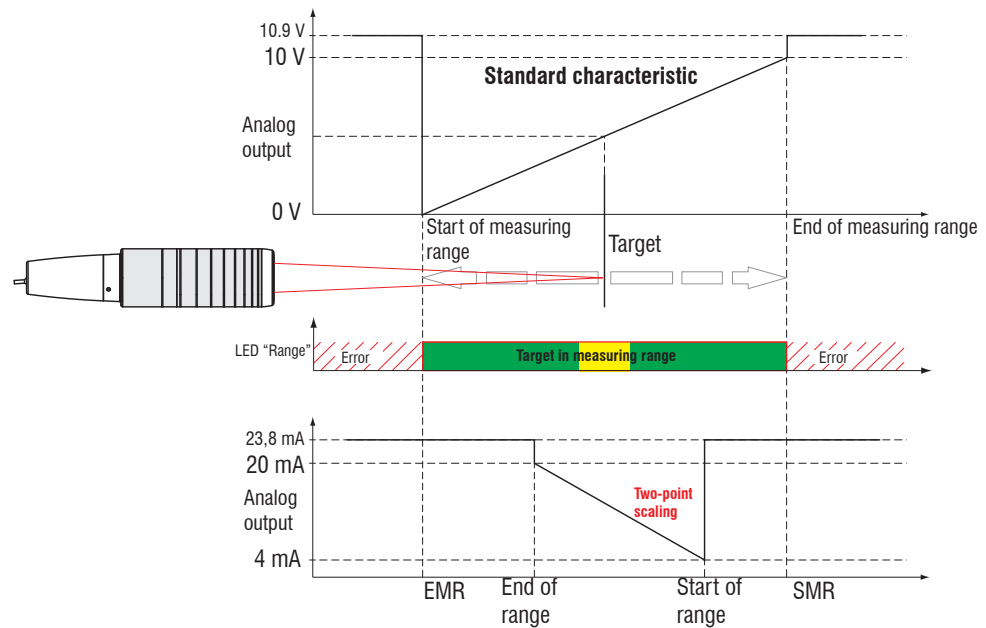


Fig. 69 Scaling the analog signal

Gray shaded fields require a selection.

Dark-bordered fields require you to specify a value.

6.5.2.1 Calculation of the Measurement Value at the Current Output

Current output (without mastering, without two-point scale)

| Variables | Value range | Formula |
|---------------------------|---|--|
| I_{OUT} = current [mA] | [3.8; <4] SMR reserve [4; 20] measuring range [>20; 20.2] EMR reserve | $d \text{ [mm]} = \frac{(I_{OUT} \text{ [mA]} - 4)}{16} * MR \text{ [mm]}$ |
| MR = measuring range [mm] | {0.1/0.3/0.4/1/1.5/2/2.5/2/3/3.5/4/6/ 6.5/10/28/30} | |
| d = distance [mm] | [-0.01MR; 1.01MR] | |

Current output (with two-point scale)

| Variables | Value range | Formula |
|---------------------------|---|--|
| I_{OUT} = current [mA] | [3.8; <4] SMR reserve [4; 20] measuring range [>20; 20.2] EMR reserve | $d \text{ [mm]} = \frac{(I_{OUT} \text{ [mA]} - 4)}{16} * n \text{ [mm]} - m \text{ [mm]} $ |
| MR = measuring range [mm] | {0.1/0.3/0.4/1/1.5/2/2.5/2/3/3.5/4/6/ 6.5/10/28/30} | |
| m, n = teaching area [mm] | [0; MR] | |
| d = distance [mm] | [m; n] | |

6.5.2.2 Calculation of the Measurement Value at the Voltage Output

Voltage output (without mastering, without two-point scale)

| Variables | Value range | Formula |
|---------------------------|--|---|
| U_{OUT} = voltage [V] | [-0.05; <0] SMR reserve [0; 5] measuring range [>5; 5.05] EMR reserve | $d \text{ [mm]} = \frac{U_{OUT} \text{ [V]}}{5} * MR \text{ [mm]}$ |
| | [-0.1; <0] SMR reserve [0; 10] measuring range [>10; 10.1] EMR reserve | $d \text{ [mm]} = \frac{U_{OUT} \text{ [V]}}{10} * MR \text{ [mm]}$ |
| MR = measuring range [mm] | {0.1/0.3/0.4/1/1.5/2/2.5/2/3/3.5/4/6/ 6.5/10/28/30} | |
| d = distance [mm] | [-0.01MR; 1.01MR] | |


Voltage output (with two-point scale)

| Variables | Value range | Formula |
|---------------------------|--|---|
| U_{OUT} = voltage [V] | [-0.05; <0] SMR reserve [0; 5] measuring range [>5; 5.05] EMR reserve | $d \text{ [mm]} = \frac{U_{OUT} \text{ [V]}}{5} * n \text{ [mm]} - m \text{ [mm]} $ |
| | [-0.1; <0] SMR reserve [0; 10] measuring range [>10; 10.1] EMR reserve | $d \text{ [mm]} = \frac{U_{OUT} \text{ [V]}}{10} * n \text{ [mm]} - m \text{ [mm]} $ |
| MR = measuring range [mm] | {0.1/0.3/0.4/1/1.5/2/2.5/2/3/3.5/4/6/ 6.5/10/28/30} | |
| m, n = teaching area [mm] | [0; MR] | |
| d = distance [mm] | [m; n] | |


6.5.2.3 Characteristics Distance Value and Analog Output

The zero setting function set the analog output on half of the output range: current output 12 mA; voltage output 2.5 V or 5 V. The Master function (master value \neq zero) sets the analog output to the scaled value for the master value. The examples below show the current output and the distance value behavior of an IFS2404-2 with 2 mm measuring range.


Target at 16 % measuring range

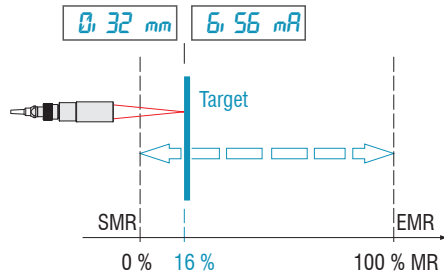


Zero setting (MV = 0 mm)

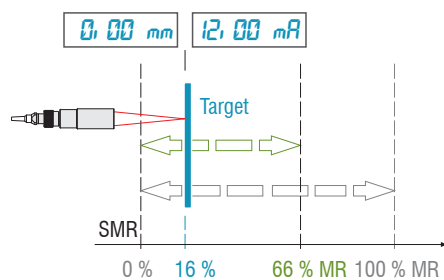

Analog maximum reached at 66 % MR

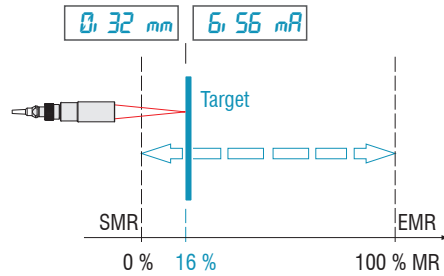


Set master value 0.8 mm

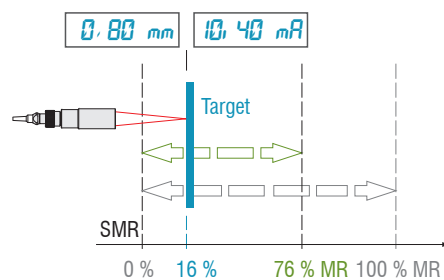


Analog maximum reached at 76 % MR

Target at 60 % measuring range

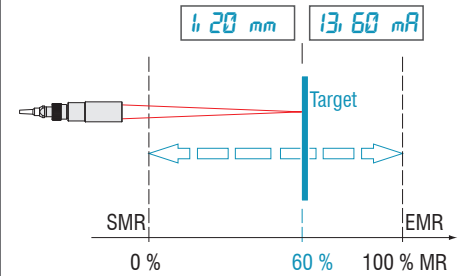

Set master value 0.8 mm

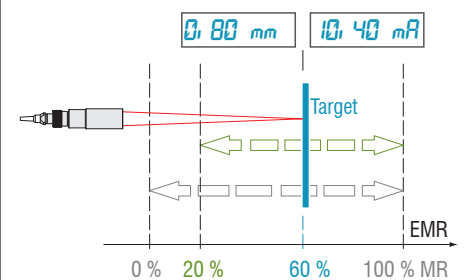


Analog minimum reached at 20 % MR

MR = Measuring range, SMR = Start of measuring range, EMR = End of measuring range, MV = Master value


The examples demonstrate the behavior of the voltage output and the distance value based on the example of an IMP displacement, measuring range 2 mm.

Target at 16 % measuring range,


$U_{OUT} = 0 \dots 5 \text{ V}$

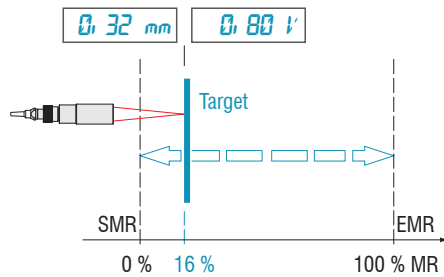


Zero setting (MV = 0 mm)

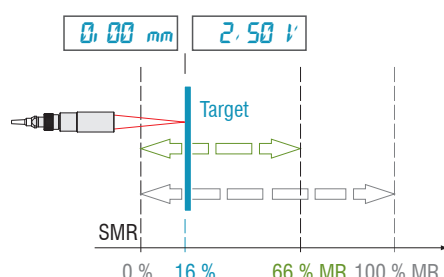

Analog maximum reached at 66 % MR

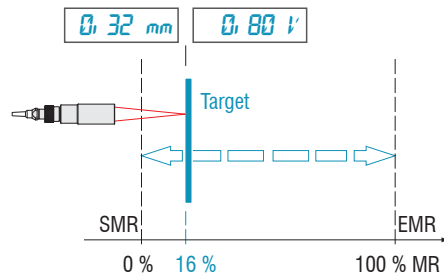


Set master value 0.8 mm

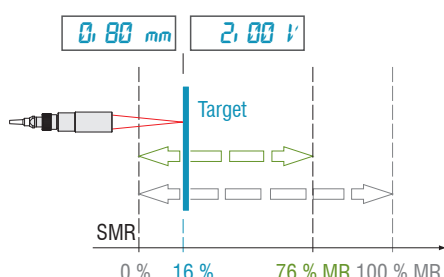


Analog maximum reached at 76 % MR

Target at 60 % measuring range,

$U_{OUT} = 0 \dots 10 \text{ V}$

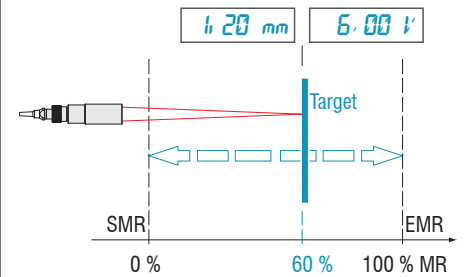

Set master value 0.8 mm

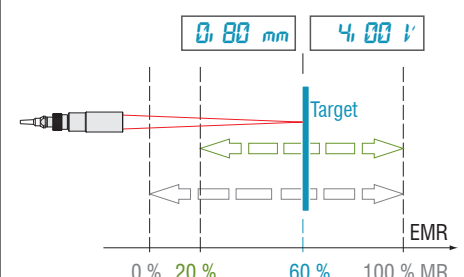

Analog minimum reached at 20 % MR

6.5.3 Error Output, Switching Output

| | | |
|-----------------------------|--|-----------------------------|
| Error output 1 „Error 1“ | <i>Intensity error channel 1 / Measuring range error channel 1 / Intensity or measuring range error channel 1</i> | |
| Error output 2 „Error 2“ | <i>Intensity error channel 2 / Measuring range error channel 2 / Intensity or measuring range error channel 2 / Distance is out of limit</i> | |
| Switching level with error | <i>PNP / NPN / Push pull / Push pull Pull negated</i> | |
| Limit values | Limit value (in mm) | <i>Value</i> |
| | Limit value (in mm) | <i>Value</i> |
| | Function | <i>lower / upper / both</i> |

6.5.3.1 Assignment of the Switch Outputs (digital I/O)

Switching outputs “Error 1” and “Error 2” of the “Digital I/O” terminal block can be individually assigned to different errors and thresholds.

Per default, “Error 1” is assigned to intensity errors (F1, peak too high or too low), and “Error 2” corresponds to the signal being outside the measuring range (F2).

Both switching outputs are activated when the measurement object is outside the measuring range.

6.5.3.2 Limit Value Settings

You can also use the “Error 1” and “Error 2” switching outputs to monitor threshold values. If the value exceeds or falls below a defined limit, the switching outputs are activated. In this case, enter lower and upper limit values (in mm).

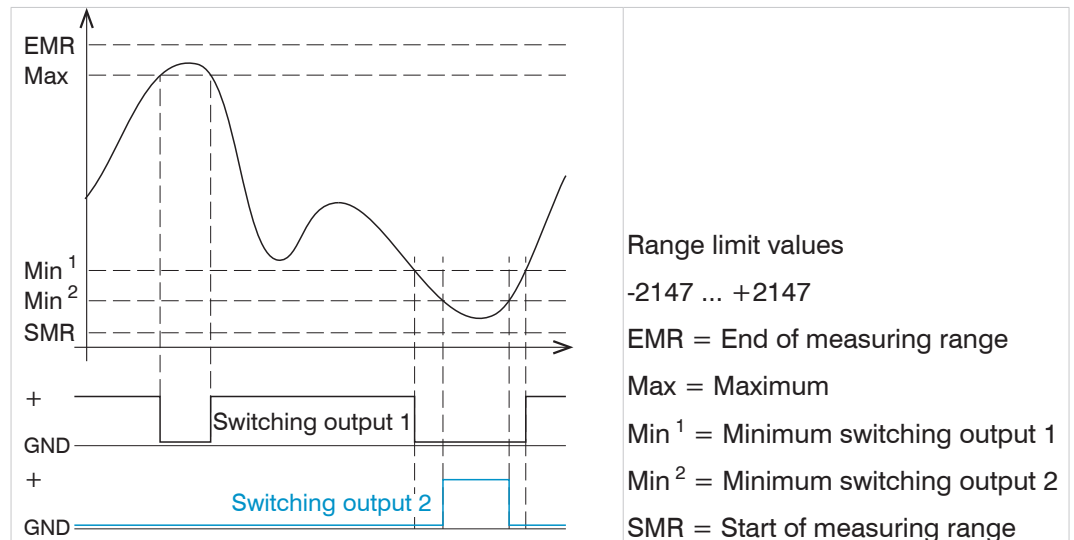


Fig. 70 Switching output 1 (both, NPN) and switching output 2 (lower, PNP) with limit values

6.5.3.3 Switching Logic of Error Outputs

Please refer to the electrical connections, see Chap. 4.4.7 for further notes on the switching behavior.

Gray shaded fields require a selection.

Dark-bordered fields require you to specify a value.

6.5.4 Output Interface

Controller IFC242x has three digital interfaces that can be used as an alternative data output.

- Ethernet: allows fast data transfer, but provides no real-time capabilities (packet-based data transfer). Both measurement and video data can be transferred. Use to capture measurements without any direct process control, for subsequent analysis. Parameterization is provided through the web interface or ASCII commands.
- RS422: provides a real-time capable interface with a lower data rate.
- Error output

6.6 System Settings

6.6.1 Unit Website, Language

The web interface promotes the units millimeter (mm) and inch when displaying measuring results. You can choose German or English in the web interface. You can change language in the menu bar.

6.6.2 Key Lock

The key lock function avoids unauthorized or unintended button operation. The key lock of the Multifunction button can be adapted individually.

| | | | |
|----------|-----------|-------------------------|--|
| Key lock | Automatic | Value (1 ... 60 min) | Keylock starts after expiry of a defined time. |
| | Active | | Keylock starts immediately. |
| | Inactive | | No key lock |

6.6.3 Load and Safe

This chapter explains how to safe a setup either based on measurement settings or on device settings. Here you can also find the functions for setup import and setup export, see Chap. 5.11.

6.6.4 Access Authorization


Assigning passwords prevents unauthorized changes to controller settings. Password protection is not enabled as a factory setting. The controller works on the Professional level. After the controller has been configured, you should enable password protection. The standard password for the Professional level is "000".


- A software update will not change the standard password or a custom password.
- The Professional level password is setup-independent, and is not loaded or stored during setup.

User can do the following:

| | User | Professional |
|-----------------------------------|------|--------------|
| Password required | no | yes |
| View settings | yes | yes |
| Change settings, change passwords | no | yes |
| View readings, video signals | yes | yes |
| Scale graphs | yes | yes |
| Restore factory settings | no | yes |

Fig. 71 Permissions within the user hierarchy

 Gray shaded fields require a selection.

 Dark-bordered fields require you to specify a value.

Access authorization

Current access authorization:

Professional login password:

Login:

Logout:

Enter the standard password “000” or a custom password into the Password box, and click Login to confirm.

Fig. 72 Changing to professional level

The user management enables to define a user-specific password in Expert mode.

| | | |
|----------------------------|---------------------|--|
| Password | Value | All passwords are case-sensitive. Numbers are allowed, but special characters are not permitted. |
| User level when restarting | User / Professional | Defines the user level that is enabled when the sensor starts the next time. MICRO-EPSILON recommend to select Professional level. |

6.6.5 Reset Controller

This menu section enables to reset the individual settings to factory settings.

| | |
|----------------------|---|
| Device settings | Reset the Ethernet and RS422 interfaces to factory settings. |
| Measurement settings | Resets the preset to Standard mat, the Multifunction button to dark correction and all parameters (except for interface settings) to factory setting. |
| Reset all | Reset the device and measurement settings to factory settings. |
| Reset controller | Starts the controller with the last saved settings |

6.6.6 Light Source

With the IFC2422, the light sources can be individually set for both channels.

You can turn on or off the light source for Sensor 1 or Sensor 2.

6.6.7 Change Ethernet to EtherCAT

This setting defines the connection log when the controller is started.

You can switch between Ethernet and EtherCAT via an ASCII command, see Chap. A 3.3.7.5, or EtherCAT object, see Chap. A 4.2.

Save the current settings before switching to EtherCAT. The switching is done after re-starting the controller.

The RS422 interface for transmitting an ASCII command is available both in Ethernet and EtherCAT mode.

7. Thickness Measurement

7.1 One Sensor, Transparent Target

7.1.1 Requirements

In order to measure the thickness of a transparent target from one side, the controller evaluates two signals reflected by the surface. The controller uses both signals to calculate the distances from the targets and thus the thickness can be derived.

- Align the sensor vertically to the target object. Ensure that the target is located near the midrange ($= \text{SMR} + 0.5 \times \text{MR}$)
- The light beam must meet the target surface at a right angle to avoid inaccurate measurements.

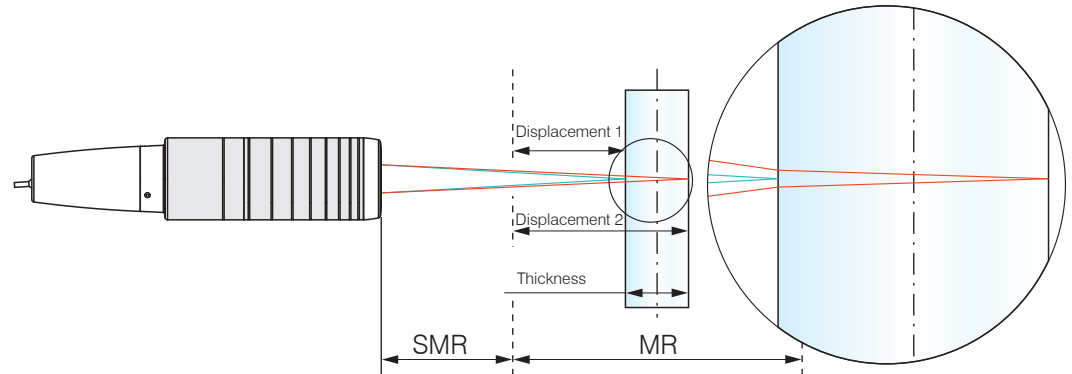


Fig. 73 Single-sided thickness measurement for a transparent object

| | |
|--------------------------|--|
| SMR | Start of measuring range |
| MR | Measuring range |
| Minimum target thickness | IFS2403 (hybrid sensor) approx. 15 % of the measuring range IFS2405 (standard sensor) approx. 5 % of the measuring range, see Chap. 2.6 |
| Maximum target thickness | Sensor measuring range x refraction index for the target |

7.1.2 Preset

- Change to the Home menu.
- Select One-sided thickness measurement in the Measurement configuration.

This preset commands the controller to use the first and second peak in the video signal to calculate the thickness.

7.1.3 Material Selection

Thickness can only be calculated correctly if the material has been specified. To balance the spectral adjustment of the refractive index, a minimum of three refractive index numbers for different wavelengths or one refractive index plus the Abbe number are required.

- Change to the Settings > Data recording > Material selection menu.
- Select the target material in the field Layer 1.

7.1.4 Video Signal

If a target surface is outside the measuring range, the controller provides only one signal for distance, intensity and focus. This might also happen, if one signal is below the detection threshold.

When measuring the thickness of a transparent material, two boundary areas are active. This means, that two peaks are displayed in the video signal, see Chap. Fig. 74.

Even if the detection threshold is just below the saddle between the two peaks, the controller can determine both distances and use them to calculate the thickness.

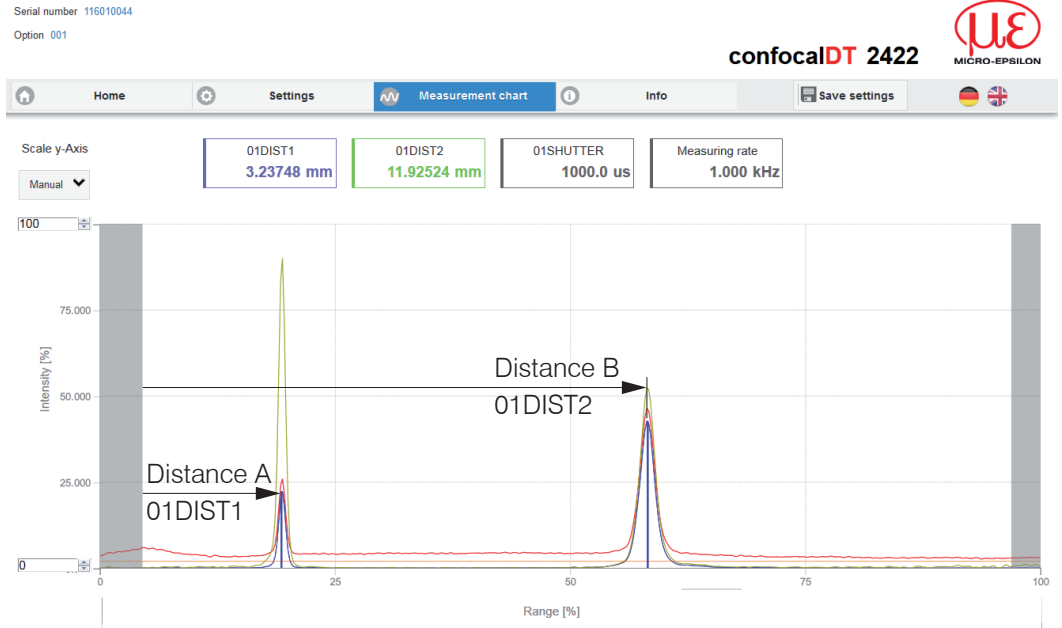


Fig. 74 Video signal web page (thickness measurement)

7.1.5 Signal Processing

The One-side thickness measurement configuration also contains presets for the thickness calculation based on both distance signals Distance1 and Distance2, see Fig. 74.

In the downstream calculation block Calculation 2, the thickness values are subject to a moving average based on a 16 values.

➡ Adapt the signal processing to your measurement task.

7.1.6 Measurement Chart

➡ Change to the Measurement chart and choose the Mess type.

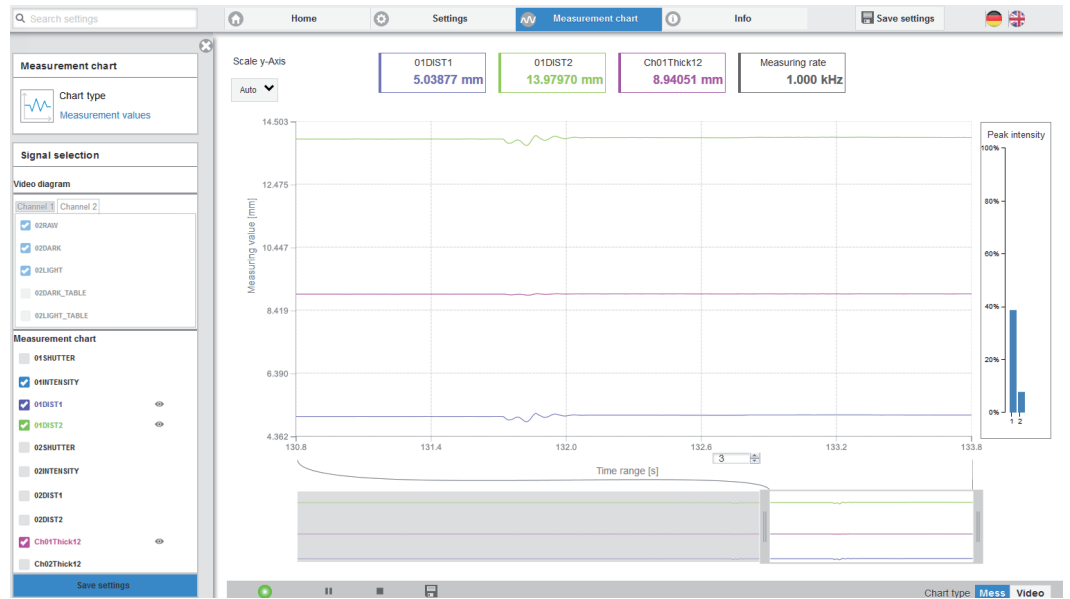


Fig. 75 Thickness measurement results from one-sided thickness measurement using one sensor

The website displays both distances and the thickness (difference from 01DIST2 and 01DIST1) in graphical and numerical form. The intensities for both peaks (peak 1 = close, peak 2 = far) can be optionally displayed.

7.2 Thickness Measurement with Two Sensors

7.2.1 Requirements

In order to achieve a two-sided thickness measurement, two sensors arranged opposite to each other measure against the target. The controller evaluates the signals reflected by the surface. The controller uses both signals to calculate the distances from the targets and thus the thickness can be derived.

➡ Align both sensors vertically to the target object. Ensure that the target is located near the midrange (= $SMR + 0.5 \times MR$)

- The light beam must meet the target surface at a right angle to avoid inaccurate measurements..

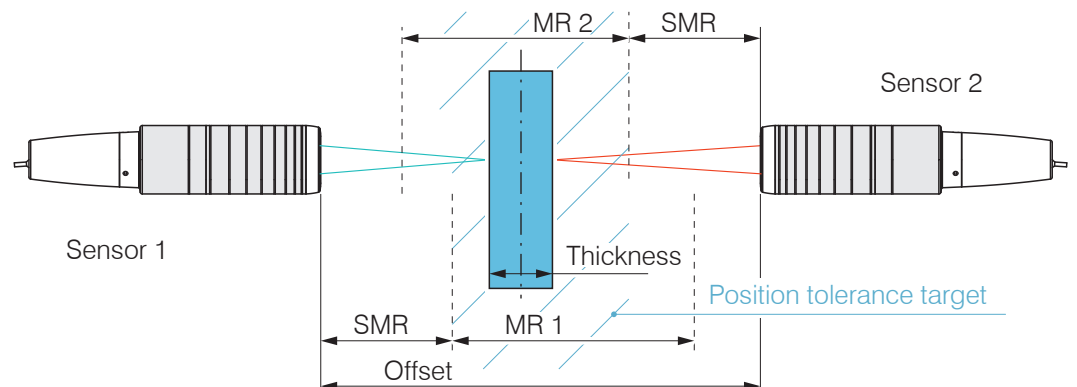


Fig. 76 Thickness measurement of a target from two sides

- SMR Start of measuring range
- MR Measuring range
- Maximum target thickness Intersection of both sensor measuring ranges

7.2.2 Preset

- ➡ Change to the Home menu.
- ➡ Select Two side thickness in the Measurement configuration.

This preset commands the controller to use the first peak in the video signal to calculate the thickness.

7.2.3 Video Signal

If one target surface is outside the measuring range, the controller provides only one signal for distance, intensity and focus. This might also happen, if one signal is below the detection threshold.

Even if the detection threshold is just below the saddle between the two peaks, the controller can determine both distances and use them to calculate the thickness.

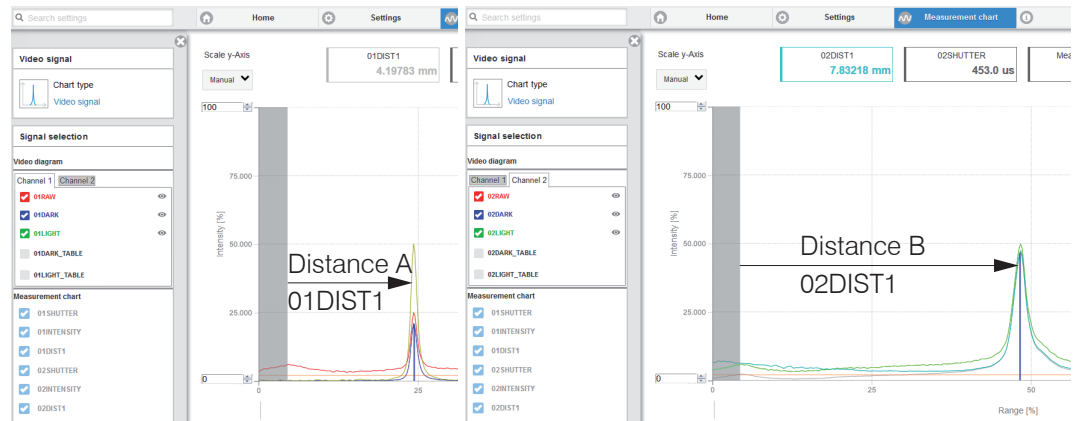


Fig. 77 Video signal web page displays both channels

- ➡ You can switch between both channels, monitor the intensity of the video signals and adjust, if required, the measuring rate in order to increase the intensity.

7.2.4 Postprocessing

The Two-sided thickness measurement configuration also contains presets for the thickness calculation based on the distance signals Distance 1 and Distance 2.

In the calculation block Calculation 1, the distance signals 01DIST1 and 02DIST1 are subtracted from the Offset distance between the sensors.

- ➡ Adapt the offset value to your measurement arrangement. Value range [-2048 ... 2047].
- ➡ Save the change by clicking on Store calculation.

In the downstream calculation block Calculation 2, the thickness values are subject to a moving average based on a 16 values.

- ➡ Adapt the postprocessing to your measurement task.

7.2.5 Measurement Chart

➡ Change to the Measurement chart and choose the Mess type.



Fig. 78 Results from two-sided thickness measurement using two sensors

The website displays the distances (01DIST2 and 01DIST1) and the thickness Thick in graphical and numerical form. The intensities for both peaks (peak 1 = close, peak 2 = far) can be optionally displayed.

8. Errors, Repair

8.1 Web Interface Communication

- If an error page is displayed in the web browser, please check the following:
 - Check if the controller is connected correctly, see Chap. 5.1.
 - Check the IP configuration for PC and controller, and check if `sensorFINDER.exe` (application on the CD-ROM) can locate the controller .
If controller and PC are connected directly, IP address detection may take up to 2 minutes.
 - Check the proxy settings. If the controller uses a separate network adapter to connect to the PC, you need to disable the use of a proxy server for this connection. Contact your network specialist or administrator!

8.2 Changing the Sensor Cable for IFS2405 and IFS2406 Sensor

- Disconnect the protective sleeve from the sensor. Remove the damaged sensor cable.
- Guide the new sensor cable through the protective sleeve.
- Remove the protective cap on the sensor cable and keep it.
- Guide the locking pin of the sensor cable into the connector cavity.
- Screw together the sensor's connector and socket ends.
- Screw the protective sleeve back onto the sensor.
- Run the dark reference, see Chap. 5.5.



8.3 Changing the Protective Glass for IFS2405 and IFS2406 Sensors

Changing the protective glass is required for

- irreversible pollution.
- scratches.

i Do not use the sensor without a protective glass, because this leads to a lower measurement accuracy..

8.3.1 IFS2405/IFS2406

- Loose the front socket with the protective glass from the sensor.



- Remove the seal and place the O-ring into the frame groove of the new socket.
- Screw the new socket with the protective glass back onto the sensor.

8.3.2 IFS2406/90-2,5

- ➡ Loosen the grub screws on the sensor, see Fig. 79, and slide the protective glass aside, see Fig. 80.



Fig. 79 View on sensor from above



Fig. 80 View on sensor from below

- ➡ Slide the new protective glass flush back and clamp the protective glass with the two grub screws again firmly.

9. Software Update

Requirements for software update

➡ Connect the controller („Ethernet“ female connector) to a PC using an Ethernet direct connection (LAN). Use a LAN cable with RJ-45 connectors.

• A software update does not affect the parameter settings. Newly added parameters are set to default values.

Update

You will find the latest firmware update tool UpdateSensor.exe on our website:

www.micro-epsilon.com/displacement-position-sensors/confocal-sensor/index.html

Obtain the firmware at the appropriate sales representatives in our house.

10. Software Support with MEDAQLib

The Micro-Epsilon Data Acquisition Library offers you a high level interface library to access confocal displacement sensors from your Windows application in combination with The Micro-Epsilon Data Acquisition Library offers you a high level interface library to access confocal displacement sensors from your Windows application in combination with into an existing or a customized PC software.

The Micro-Epsilon Data Acquisition Library offers you a high level interface library to access confocal displacement sensors from your Windows application in combination with

- RS422/USB converter (optional accessory) and a suitable SC2471-x/USB/IND cable or
- IF2008 PCI interface card and SC2471-x/IF2008 cable or
- Ethernet

You need no knowledge about the controller protocol to communicate with the individual controllers. The individual commands and parameters for the controller to be addressed will be set with abstract functions. MEDAQLib translates the abstract functions in comprehensible instructions for the controller.

MEDAQLib

- contains a DLL, which can be imported into C, C++, VB, Delphi and many additional programs,
- makes data conversion for you,
- works independent of the used interface type,
- features by identical functions for the communication (commands),
- provides a consistent transmission format for all MICRO-EPSILON sensors.

For C/C++ programmers MEDAQLib contains an additional header file and a library file,

You will find the latest driver / program routine at:

www.micro-epsilon.com/download

www.micro-epsilon.com/link/software/medaqlib

11. Liability for Material Defects

All components of the device have been checked and tested for functionality at the factory. However, if defects occur despite our careful quality control, MICRO-EPSILON or your dealer must be notified immediately.

The liability for material defects is 12 months from delivery. Within this period, defective parts, except for wearing parts, will be repaired or replaced free of charge, if the device is returned to MICRO-EPSILON with shipping costs prepaid. Any damage that is caused by improper handling, the use of force or by repairs or modifications by third parties is not covered by the liability for material defects. Repairs are carried out exclusively by MICRO-EPSILON.

Further claims can not be made. Claims arising from the purchase contract remain unaffected. In particular, MICRO-EPSILON shall not be liable for any consequential, special, indirect or incidental damage. In the interest of further development, MICRO-EPSILON reserves the right to make design changes without notification.

For translations into other languages, the German version shall prevail.

12. Service, Repair

If the sensor, controller or sensor cable is defective:

- If possible, save the current controller settings in a parameter set, see Chap. 5.11, in order to load again the settings back into the controller after the repair.
- Please send us the affected parts for repair or exchange.

If the cause of a fault cannot be clearly identified, please send the entire measuring system to

MICRO-EPSILON
MESSTECHNIK GmbH & Co. KG
Koenigbacher Str. 15
94496 Ortenburg / Germany

Tel. +49 (0) 8542 / 168-0
Fax +49 (0) 8542 / 168-90
info@micro-epsilon.com
www.micro-epsilon.com

13. Decommissioning, Disposal

- ➡ Remove the sensor cable as well as the controller's supply and output cables. Insert the dummy connectors.

Incorrect disposal may cause harm to the environment.

- ➡ Dispose of the device, its components and accessories, as well as the packaging materials in compliance with the applicable country-specific waste treatment and disposal regulations of the region of use.

Appendix

A 1 Accessories, Services

Accessories IFS2402, IFS2403

| | |
|-------------|---|
| CE2402-x | Sensor cable extension for IFS2402 sensors, length x = 3 m, 10 m, 30 m, 50 m |
| CE2402-x/PT | Sensor with protective tubing, length x = 3 or 10 m, customer-specific up to 50 m |
| MA2402-4 | Installation bracket for IFS2402-x sensors |
| MA2403-8 | Installation bracket for IFS2403-x sensors |

Accessories IFS2404

| | |
|-----------|--|
| C2404-2 | Sensor cable IFS2404 sensors, length x = 2 m |
| MA2404-12 | Installation bracket for IFS2404-x sensors |

Accessories IFS2405, IFS2406, IFS2407-0,1

C2401 cable with FC/APC and E2000/APC connectors

| | |
|-------------|--|
| C2401-x | Optical fiber (3 m, 5 m, 10 m, customer-specific length up to 50 m) |
| C2401/PT-x | Optical fiber with protection tube for mechanical stress (3 m, 5 m, 10 m, customer-specific length up to 50 m) |
| C2401-x(01) | Optical fiber core diameter 26 μm (3 m, 5 m, 15 m) |
| C2401-x(10) | Drag-chain suitable optical fiber (3 m, 5 m, 10 m) |

C2400 cable with 2x FC/APC connector

| | |
|----------------|---|
| C2400-x | Optical fiber (3 m, 5 m, 10 m, customer-specific length up to 50 m) |
| C2400/PT-x | Optical fiber with protection tube for mechanical stress (3 m, 5 m, 10 m, customer-specific length up to 50 m) |
| C2400/PT-x.Vac | Optical fiber with protection tube suitable for use in vacuum (3 m, 5 m, 10 m, customer-specific length up to 50 m) |

Installation bracket

| | |
|-----------|---|
| MA2400-27 | Installation bracket for IFS2405-0,3 / IFS2405-1 / IFS2406-3 / IFS2406-10 sensors |
| MA2404-12 | Installation bracket for IFS2404-2, IFS2407-0,1 sensors |
| MA2405-34 | Installation bracket for IFS2405-3 sensors |
| MA2405-40 | Installation bracket for IFS2405-6 sensors |
| MA2405-54 | Installation bracket for IFS2405-10 sensors |
| MA2405-62 | Installation bracket for IFS2405-28, IFS2405-30 sensors |
| MA2406-20 | Installation bracket for IFS2406-2,5 sensors |

Accessories IFS2407/90-0,3

| | |
|---------|---|
| C2407-x | Optical fiber with DIN connector and E2000/APC (2 m, 5 m) |
|---------|---|

Accessories light source

| | |
|-------------------------|-------------------------|
| IFL2422/LED | Lamp module for IFC2422 |
| IFL24x1/LED | Lamp module for IFC24x1 |
| Optical fiber reflector | Reflector for E2000/APC |

Other accessories

| | |
|--------------------|--|
| SC2471-x/IF2008 | Connector cable IFC2451/61/71-IF2008, length 3 m, 10 m or 20 m |
| SC2471-x/RS422/OE | Interface cable for interface IF2030, length 3 m, 10 m |
| SC2471-3/IF2008ETH | Interface cable for interface IF2008/ETH, length 3 m |
| IF2008 | Interface card IF2008 to capture four digital sensor signals synchronously, confocalDT 2421/2422/2451/2461/2471 series and two encoders. In conjunction with IF2008E a total of six digital signals, two encoders, two analog signals and eight I/O signals can be captured synchronously. |
| IF2008/ETH | 8-fold RS422/Ethernet converter with industrial M12 plug/socket to connect up to 8 IFC242x/2451/2461/2471 controllers |
| IF2030/PNET | Interface component to connect an IFC242x/2451/2461/2471 controller to Profinet, housing for top-hat rail, software integration into PLC with GSDML file, certified according to PNIO V2.33 |
| PS2020 | Power supply unit for DIN rail mounting, input 230 VAC, output 24 VDC/2.5 A |
| EC2471-3/OE | Encoder cable, 3 m |

Vacuum feed trough

| | |
|------------------|---|
| C2402/Vac/KF16 | Vacuum feed trough for optical fiber, 1 channel, vacuum side FC/APC non-vacuum side E2000/APC, clamping flange type KF 16 |
| C2405/Vac/1/KF16 | Vacuum feed through on both sides FC/APC socket, 1 channel, clamping flange type KF 16 |
| C2405/Vac/1/CF16 | Vacuum feed through on both sides FC/APC socket, 1 channel, flange type CF 16 |
| C2405/Vac/6/CF63 | Vacuum feed through for optical fiber, on both sides FC/APC socket, 6 channels, flange type CF 63 |

Services:

- Linearity tests and adjustments for the confocalDT measuring system
- Calibration of the confocalDT measuring system

A 2 Factory Settings

| | |
|-----------------|------------------------------|
| User level | Professional, password „000“ |
| Number of peaks | 1 measurement, highest peak |
| Peak separation | 2 % |
| RS422 | 115.200 Kbaud |
| Triggering | no trigger |
| Language | de |
| Synchronization | Inactive |
| Key function 1 | Dark reference |
| Measuring rate | 1 kHz |
| Key lock | Inactive |

| | |
|----------------------|--|
| Measurement programm | Displacement measurement |
| Peak modulation | 50 % |
| Error handling | Error output, no measurement |
| Ethernet | Static IP, IP address 169.254.168.150 |
| Switching output 1 | Intensity error channel 1 |
| Switching output 2 | Measuring range error channel 1 |
| Exposure mode | Measurement mode |
| Key function 2 | Inactive |
| Data output | Webinterface and analog output with 4 ... 20 mA |

A 3 ASCII Communication with Controller

A 3.1 General

The ASCII commands can be sent to the controller via the RS422 interface or Ethernet (Port 23). All commands, inputs and error messages are in English. A command always consists of the command name and zero or more parameters, which are separated by spaces and are completed with LF. If spaces are used in parameters, the parameters must be placed in quotation marks (e.g. "password with spaces").

Example: Switch on the output via RS422

OUTPUT RS422 ←↵

Advice: ←↵ must include LF, but may also be CR LF.

Declaration: LF Line feed (line feed, hex 0A)

CR Carriage return (carriage return, hex 0D)

←↵ Enter (depending on the system hex 0A or hex 0D0A)

The currently set parameter value is returned, if a command is activated without parameters.

The output format is:

<Command name> <Parameter1> [<Parameter2> [...]]

The reply can be used again as command for the parameter setting without changes. In this case, optional parameters are returned only where necessary.

After processing a command, the system always returns a line break and a command prompt. In the event of an error, an error message starting with "Exx" will appear before the prompt, where xx represents a unique error number. In addition, the system may display a warning ("Wxx") instead of an error message. Warnings are structured like error messages, such as "If Xenon lamp is too hot..." Warnings do not prevent commands from being executed.

A 3.2 Commands Overview

| Group | Chapter | Command | Short description |
|----------------------|---------------------------------|--------------|--------------------------|
| General | | | |
| | Chap. A 3.3.1.1 | HELP | Help |
| | Chap. A 3.3.1.2 | GETINFO | Controller Information |
| | Chap. A 3.3.1.3 | ECHO | Reply Type |
| | Chap. A 3.3.1.4 | PRINT | Parameter Overview |
| | Chap. A 3.3.1.5 | SYNC | Synchronization |
| | Chap. A 3.3.1.6 | TERMINATION | Termination Resistor |
| | Chap. A 3.3.1.7 | RESET | Booting the Sensor |
| | Chap. A 3.3.1.8 | RESETCNT | Reset Controller |
| Web interface | | | |
| | Chap. A 3.3.2.1 | LANGUAGE | Language |
| | Chap. A 3.3.2.2 | UNIT | Unit Website, Language |
| User Level | | | |
| | Chap. A 3.3.3.1 | LOGIN | Changing the User Level |
| | Chap. A 3.3.3.2 | LOGOUT | Changing to User Level |
| | Chap. A 3.3.3.3 | GETUSERLEVEL | Querying the User Level |
| | Chap. A 3.3.3.4 | STDUSER | Defining a Standard User |
| | Chap. A 3.3.3.5 | PASSWD | Changing the Password |

| Sensor | | | |
|---|----------------------------------|--------------------|---|
| | Chap. A 3.3.4.1 | SENSORTABLE | Displays Available Sensors |
| | Chap. A 3.3.4.2 | SENSORHEAD | Sensor Selection |
| | Chap. A 3.3.4.3 | SENSORINFO | Sensor Information |
| | Chap. A 3.3.4.4 | DARKCORR | Starts Dark Correction |
| | Chap. A 3.3.4.5 | DARKCORRTHRES | Warning Threshold in the Event of Contamination |
| | Chap. A 3.3.4.6 | LED | LED On/Off |
| Triggering | | | |
| | Chap. A 3.3.5.1 | TRIGGERSOURCE | Select Trigger Source |
| | Chap. A 3.3.5.2 | TRIGGERAT | Effect of the Trigger Input |
| | Chap. A 3.3.5.3 | TRIGGERMODE | Trigger Type |
| | Chap. A 3.3.5.4 | TRIGGERLEVEL | Active Level Trigger Input |
| | Chap. A 3.3.5.5 | TRIGGERSW | Create a software trigger pulse |
| | Chap. A 3.3.5.6 | TRIGGERCOUNT | Number of Output Measurement Values |
| | Chap. A 3.3.5.7 | TRIGINLEVEL | Trigger Level TrigIn (TTL / HTL) |
| | Chap. A 3.3.5.8 | TRIGGERENCSTEPSIZE | Step Size Encoder Triggering |
| | Chap. A 3.3.5.9 | TRIGGERENCMIN | Minimum Encoder Triggering |
| | Chap. A 3.3.5.10 | TRIGGERENCMAX | Maximum Encoder Triggering |
| Encoder | | | |
| | Chap. A 3.3.6.1 | ENCINTERPOLn | Setting Interpolation Depth |
| | Chap. A 3.3.6.2 | ENCREFn | Setting the reference track |
| | Chap. A 3.3.6.3 | ENCVALUEn | Setting Encoder Value |
| | Chap. A 3.3.6.4 | ENCSET | Setting Encoder Value |
| | Chap. A 3.3.6.5 | ENCRESET | Reset Encoder Value |
| | Chap. A 3.3.6.6 | ENCMAXn | Setting Maximum Encoder Value |
| Interfaces | | | |
| | Chap. A 3.3.7.1 | IPCONFIG | Ethernet Settings |
| | Chap. A 3.3.7.2 | MEASTRANSFER | Setting the Measured Value Server |
| | Chap. A 3.3.7.3 | MEASCNT_ETH | Measurements per frame |
| | Chap. A 3.3.7.4 | BAUDRATE | RS422 Setting |
| | Chap. A 3.3.7.5 | ETHERMODE | Switching between Ethernet and EtherCAT |
| Parameter Management, Load / Save Settings | | | |
| | Chap. A 3.3.8.1 | BASICSETTINGS | Load Connection Settings |
| | Chap. A 3.3.8.2 | CHANGESETTINGS | Show Changed Parameters |
| | Chap. A 3.3.8.3 | EXPORT | Export of Parameter Sets |
| | Chap. A 3.3.8.4 | IMPORT | Import of Parameter Sets |
| | Chap. A 3.3.8.5 | SETDEFAULT | Reset to Factory Settings |
| | Chap. A 3.3.8.6 | MEASSETTINGS | Edit Measurement Settings |
| Measurement | | | |
| | Chap. A 3.3.9.1 | PEAKCOUNT | Number of Peaks |
| | Chap. A 3.3.9.2 | MEASPEAK | Peak Selection |
| | Chap. A 3.3.9.3 | REFRACCORR | Refractive Correction |
| | Chap. A 3.3.9.4 | SHUTTERMODE | Exposure Mode |
| | Chap. A 3.3.9.5 | MEASRATE | Measuring Rate |
| | Chap. A 3.3.9.6 | SHUTTER | Exposure Time |
| | Chap. A 3.3.9.7 | ROI | Masking the Evaluation Range |
| | Chap. A 3.3.9.8 | MIN_THRESHOLD | Peak Detection Threshold |
| | Chap. A 3.3.9.9 | PEAK_MODULATION | Peak Modulation |

| Material Data Base | | | |
|--|-----------------------------------|-----------------------|---|
| | Chap. A 3.3.10.1 | MATERIALTABLE | Material Table |
| | Chap. A 3.3.10.2 | MATERIAL | Select Material |
| | Chap. A 3.3.10.3 | MATERIALINFO | Display Material Properties |
| | Chap. A 3.3.10.4 | MATERIALEDIT | Edit Material Table |
| | Chap. A 3.3.10.5 | MATERIALDELETE | Delete a Material |
| | Chap. A 3.3.10.6 | MATERIALMP | Material Settings |
| Measurement Value Processing | | | |
| | Chap. A 3.3.11.1 | SPIKECORR | Spike Correction |
| | Chap. A 3.3.11.2 | STATISTIC | Selection of a Signal for the Statistics |
| | Chap. A 3.3.11.3 | META_STATISTIC | List of Possible Signals for the Statistics |
| | Chap. A 3.3.11.4 | RESETSTATISTIC | Reset the Statistics Calculation |
| | Chap. A 3.3.11.5 | STATISTICSIGNAL | Selection of a Signal for the Statistics |
| | Chap. A 3.3.11.6 | META_STATISTICSIGNAL | List of Possible Signal for the Statistics to be Selected |
| | Chap. A 3.3.11.7 | META_MASTERSIGNAL | List of Signals which can be Parameterized |
| | Chap. A 3.3.11.8 | MASTERSIGNAL | Master Signal Parameterization |
| | Chap. A 3.3.11.9 | META_MASTER | List of Possible Signals for Mastering |
| | Chap. A 3.3.11.10 | MASTER | Activate Mastering |
| | Chap. A 3.3.11.12 | COMP | Channel Selection |
| | Chap. A 3.3.11.13 | META_COMP | List of Possible Calculation Signals |
| | Chap. A 3.3.11.14 | SYSSIGNALRANGE | Two-Point Scaling Data Outputs |
| Data Output | | | |
| | Chap. A 3.3.12.1 | OUTPUT | Selection of Digital Output |
| | Chap. A 3.3.12.2 | OUTREDUCEDEVICE | Data Output Rate |
| | Chap. A 3.3.12.3 | OUTREDUCECOUNT | Reduction Counter |
| | Chap. A 3.3.12.4 | OUTHOLD | Error Processing |
| Select Measurement Values to be Output via Interfaces | | | |
| | Chap. A 3.3.13.2 | OUT_ETH | Data selection for Ethernet |
| | Chap. A 3.3.13.3 | META_OUT_ETH | List of Possible Ethernet Signals |
| | Chap. A 3.3.13.4 | GETOUTINFO_ETH | List of Selected Signals, Transfer Sequence via Ethernet |
| | Chap. A 3.3.13.5 | OUT_RS422 | Data selection for RS422 |
| | Chap. A 3.3.13.6 | META_OUT_RS422 | List of Possible RS422 Signals |
| | Chap. A 3.3.13.7 | GETOUTINFO_RS422 | List of Selected Signals, Transfer Sequence via RS422 |
| Switching Outputs | | | |
| | Chap. A 3.3.14.1 | ERROROUTn | Selection of Error Signal for Output |
| | Chap. A 3.3.14.2 | ERRORLIMITSIGNALn | Setting the Signal to be Evaluated |
| | Chap. A 3.3.14.3 | META_ERRORLIMITSIGNAL | List of Possible Signals for Error Output |
| | Chap. A 3.3.14.4 | ERRORLIMITCOMPARETO n | Setting Limit Values |
| | Chap. A 3.3.14.5 | ERRORLIMITVALUESn | Setting Value |
| | Chap. A 3.3.14.6 | ERRORLEVELOUTn | Switching Behavior of Error Outputs |

| Analog Output | | | |
|----------------------|----------------------------------|-----------------------|---|
| | Chap. A 3.3.15.1 | ANALOGOUT | Data Selection for Analog Output |
| | Chap. A 3.3.15.2 | META_ANALOGOUT | List of Possible Signals Analog Output |
| | Chap. A 3.3.15.3 | ANALOGRANGE | Setting Current/Voltage Range of Digital-Analog Converter (DAC) |
| | Chap. A 3.3.15.4 | ANALOGSCALEMODE | Setting the Scaling of DAC |
| | Chap. A 3.3.15.5 | ANALOGSCALERANGE | Setting the Scaling Range |
| Key Functions | | | |
| | Chap. A 3.3.16.1 | KEYFUNC | Activating Multifunction Button |
| | | KEYMASTERSIGNALSELECT | |
| | Chap. A 3.3.16.3 | KEYLOCK | Key lock configuration |

A 3.3 General Commands

A 3.3.1 General

A 3.3.1.1 Help

```
HELP [<command>]
```

Help is displayed for a command. If no command is specified, general help information is displayed.

A 3.3.1.2 Controller Information

```
GETINFO
```

Controller data are queried. Output as per example below:

```
->GETINFO
Name:          IFC2422
Serial:        12345678
Option:        000
Article:       1234567
MAC-Address:   00-0C-12-01-30-01
Version:       001.035.056
Hardware-rev:  02
Boot-version   001.018
BuildID        400
->
```

Name: Name of the controller model / controller series

Serial: Controller serial number

Option: Controller option number

Article: Controller article number

MAC Address: Network adapter address

Version: Version of the booted software

Hardware-rev: Used hardware revision

Boot-version: Version of the boot loader

BuildID: Identification number of the generated software

A 3.3.1.3 Reply Type

```
ECHO ON|OFF
```

The reply type describes the structure of a command reply.

ECHO ON: Displays command name and command reply or an error message

ECHO OFF: Only displays command reply or an error message

A 3.3.1.4 Parameter Overview

```
PRINT ALL
```

no parameter: This command outputs a list of all setting parameters and its values.

- ALL : This command outputs a list of all setting parameters and its values, as well as information such as sensor table or GETINFO.

A 3.3.1.5 Synchronization

```
SYNC NONE | MASTER | SLAVE_SYNTRIG | SLAVE_TRIGIN
```

Setting the type of synchronization:

- NONE: No synchronization
- MASTER: The controller is master, i.e. it transmits synchronization pulses on the Sync/Trig output.
- SLAVE_SYNTRIG: Controller is slave and expects synchronization pulses from e.g. another IFC242x or a similar pulse source at the Sync/Trig input.
- SLAVE_TRIGIN: Controller is slave and expects synchronization pulses from a frequency generator at the TrigIn input.

| Input | Characteristic |
|-----------|----------------|
| Sync/Trig | Differential |
| TrigIn | TTL / HTL |

Sync/Trig may be an input or output, so you need to ensure that one of the controllers is defined as a master and the other one as a slave.

The TrigIn input is also used as trigger input for flank and level triggering.

A 3.3.1.6 Termination Resistor at Sync/Trig Input

```
TERMINATION OFF | ON
```

Switches off/on the termination resistor with 120 Ohm at the Sync/Trig synchronization input.

A 3.3.1.7 Booting the Sensor

```
RESET
```

The controller restarts.

A 3.3.1.8 Reset Counter

```
RESETCNT [TIMESTAMP] [MEASCNT]
```

The counter is reset after the selected trigger edge has arrived.

- TIMESTAMP: resets the time stamp
- MEASCNT: resets the measured value counter

A 3.3.2 Web interface

A 3.3.2.1 Language

```
LANGUAGE DE|EN
```

Select website language.

- DE: German language
- EN: English language

The website is displayed in the selected language.

A 3.3.2.2 Unit

```
UNIT MM | INCH
```

Changes the display of measured values on the websites.

The command has no effect on the ASCII interface and the command units.

- MM: Values are displayed in mm (default)
- INCH: Values are displayed in inch

A 3.3.3 User Level

A 3.3.3.1 Changing the User Level

```
LOGIN <Password>
```

Enter the password to switch to a different user level. The following user levels exist:

- USER: Read-only access to all elements + use of the web diagrams
- PROFESSIONAL: Read/write access to all elements

A 3.3.3.2 Changing to User Level

```
LOGOUT
```

Sets the user level to USER.

A 3.3.3.3 Querying the User Level

```
GETUSERLEVEL
```

Request the current user level.

For possible responses, see Chap. A 3.3.3.1, “Changing the user level”.

A 3.3.3.4 Defining a Standard User

```
STDUSER USER|PROFESSIONAL
```

Sets the standard user, who is logged in after system start.

A 3.3.3.5 Changing the Password

```
PASSWD <Old Password> <New Password> <New Password>
```

Changes the password for the PROFESSIONAL level. The default (preset) password is “000”.

The old password must be entered once, and the new password twice. If the new passwords do not match, an error message is displayed. Passwords are case sensitive. A password may only contain letters (A to Z) and numbers, but no special characters and no letters with accents or umlauts. The maximum length is 31 characters.

A 3.3.4 Sensor

A 3.3.4.1 Info about Calibration Tables

```
SENSORTABLE
```

```
->SENSORTABLE
Pos, Sensor name,      Range,      Serial
 0, ifs-2405x,         3.000mm,   12345678
 8, ifs-2405x,         10.000mm,  12345678
 9, ifs-2405x,         3.000mm,   12345678
->
```

All available (learned) sensors are displayed.

A 3.3.4.2 Sensor Number

| IFC2421 | IFC2422 |
|------------------------------|-----------------------------------|
| SENSORHEAD <Sensor-Position> | SENSORHEAD_CH01 <Sensor-Position> |
| | SENSORHEAD_CH02 <Sensor-Position> |

Selects the current sensor from its position in the sensor table, see Chap. A 3.3.4.1.

Minimum 0, maximum 19.

A 3.3.4.3 Sensor Information

| IFC2421 | IFC2422 |
|------------|-----------------|
| SENSORINFO | SENSORINFO_CH01 |
| | SENSORINFO_CH02 |

Displays sensor data (name, measuring range and serial number).

```
->SENSORINFO
Position:          0
Name:             ifs-2405x
Measurement range: 3.000 mm
Serial:           12345678
->
```

A 3.3.4.4 Dark Correction

| IFC2421 | IFC2422 |
|----------|---------------|
| DARKCORR | DARKCORR_CH01 |
| | DARKCORR_CH02 |

Dark correction for the sensor selected with SENSORHEAD. The dark correction is sensor-dependent and is stored in the controller per channel for each sensor.

A 3.3.4.5 Warning Threshold in the Event of Contamination

DARKCORRTHRES <Schwelle>

Threshold: Deviation (in %) of the intensity/exposure time from the stored value, above which a warning message will appear. Default setting: 50 %.

The warning threshold is set in % with one decimal.

A 3.3.4.6 LED

| IFC2421 | IFC2422 |
|--------------|-------------------|
| LED OFF ON | LED_CH01 ON OFF |
| | LED_CH02 ON OFF |

Switches on/off the LED of the respective channel.

A 3.3.5 Triggering

A 3.3.5.1 Select Trigger Source

TRIGGERSOURCE NONE | SYNCTRIG | TRIGIN | SOFTWARE | ENCODER1 | ENCODER2

- NONE: No trigger source
- SYNCTRIG: Use Sync/Trig input
- TRIGIN: Use TrigIn input
- SOFTWARE: Triggering is caused by the TRIGGERSW command.
- ENCODER1: Encoder triggering of Encoder 1
- ENCODER2: Encoder triggering of Encoder 2

A 3.3.5.2 Output of Triggered Values, With/Without Averaging

TRIGGERAT INPUT | OUTPUT

INPUT: Triggering the measured value recording. When calculating the mean, measured values immediately before the trigger event are not included; instead older measured values are used, which were the output in previous trigger events.

OUTPUT: Triggering the measurement value output. When calculating the mean, measured values immediately before the trigger event are used.

Triggering of measured value recording is enabled as a factory default setting.

A 3.3.5.3 Trigger Type

```
TRIGGERMODE EDGE | PULSE
```

Defines the trigger type.

- PULSE: Level triggering
- EDGE: Edge triggering

A 3.3.5.4 Active Level Trigger Input

```
TRIGGERLEVEL HIGH | LOW
```

- HIGH: Edge triggering: Rising edge, level triggering: High-active
- LOW: Edge triggering: Falling edge, level triggering: Low-active

A 3.3.5.5 Software Trigger Pulse

```
TRIGGERSW
```

Creates a software trigger pulse, if SOFTWARE is selected as trigger source.

A 3.3.5.6 Number of Output Measurement Values

```
TRIGGERCOUNT NONE | INFINITE | <n>
```

- NONE: Stop triggering
- <n>: Number of measurement values which are displayed after a trigger impulse when edge triggering or software triggering.
- Infinite: Start infinite output of measurement values after a trigger impulse when edge triggering or software triggering.

A 3.3.5.7 Trigger Level TrigIn

```
TRIGINLEVEL TTL | HTL
```

The level selection only applies for the TrigIn input. The Sync/Trig input expects a differential signal.

- TTL: Input expects TTL signal.
- HTL: Input expects HTL signal.

A 3.3.5.8 Step Size Encoder Triggering

```
TRIGGERENCSTEP SIZE [value of step size]
```

Sets the number of encoder steps, after which each one a measured value is output (min: 0 max: 231-1).

Measured values are output continuously between min. and max at 0.

A 3.3.5.9 Minimum Encoder Triggering

```
TRIGGERENCMIN [minimum value]
```

Sets the minimal encoder value, up to that is triggered (min: 0 max: 232-1).

A 3.3.5.10 Maximum Encoder Triggering

```
TRIGGERENC MAX [maximum value]
```

Sets the maximum encoder value, up to that is triggered (min: 0 max: 232-1).

A 3.3.6 Encoder

A 3.3.6.1 Encoder Interpolation Depth

```
ENCINTERPOL1 1|2|4
```

```
ENCINTERPOL2 1|2|4
```

Set the interpolation depth of each encoder input.

A 3.3.6.2 Effect of the Reference Track

```
ENCREF1 NONE|ONE|EVER
```

```
ENCREF2 NONE|ONE|EVER
```

Setting the effect of encoder reference track.

- NONE: Reference mark of the encoder has no effect.
- ONE: Unique setting (the encoder value is taken over at first reaching of reference marker position, see Chap. A 3.3.6.3).
- EVER: Setting at all marker positions (the encoder value is taken over at first reaching of reference marker position), see Chap. A 3.3.6.3.

A 3.3.6.3 Encoder Value

```
ENCVALUE1 <Encoder value>
```

```
ENCVALUE2 <Encoder value>
```

Indicates, on which value the applicable encoder is to be set when reaching a reference marker position (or per software).

The encoder value can be set between 0 and $2^{32}-1$.

When setting the ENCVALUE, the algorithm for detecting the first reference marker position, see Chap. A 3.3.6.2, is reset automatically.

A 3.3.6.4 Setting Encoder Value per Software

```
ENCSET 1|2
```

Setting the encoder value, see Chap. A 3.3.6.3, in the specified encoder per software (only possible with ENCREF NONE, otherwise the command returns immediately without an error message).

A 3.3.6.5 Reset the Detection of the First Marker Position

```
ENCRESET 1|2
```

Reset the detection of the first reference marker position, see Chap. A 3.3.6.2 (only possible with ENCREF ONE, otherwise the command returns immediately without an error message).

A 3.3.6.6 Maximum Encoder Value

```
ENCMAX1 <Encoder value>
```

```
ENCMAX2 <Encoder value>
```

Specifies the maximum value of the encoder, after which the encoder returns to 0. Can be used e.g. for rotary encoder without reference track.

The encoder value can be set between 0 and $2^{32}-1$.

A 3.3.7 Interfaces

A 3.3.7.1 Ethernet IP Settings

```
IPCONFIG DHCP | STATIC [<IPAddress> [<Netmask> [<Gateway>]]]
```

Set Ethernet interface.

DHCP: IP address and gateway are automatically requested by DHCP. System looks for a LinkLocal address after approx.. 2 minutes if no DHCP server is available.

STATIC: Set IP address, net mask and gateway in format xxx.xxx.xxx.xxx.

Values stay the same if no IP address, net mask, and gateway is typed in.

A 3.3.7.2 Setting for Ethernet Transmission of Measured Values

```
MEASTRANSFER NONE | SERVER/TCP [<PORT>] | (CLIENT/TCP | CLIENT/UDP  
[<IPAdresse> [<Port>]])
```

The IFC242x can be operated as a server as well as a client for measurement output via Ethernet.

- NONE: No measurement transmission via Ethernet.
- SERVER/TCP: Controller provides a server for the typed in port, under which the measured values can be sent. This is only possible via TCP/IP.
- CLIENT/TCP: Controller sends measured values via TCP/IP connection oriented to server. The specifying of the IP address and server port are required, see Chap. [A 3.3.12.1](#).
- CLIENT/UDP: Controller sends measured values via UDP/IP connectionless to server. Therefore the IP address and the server port are specified.
- IPAddress: IP address of the server, to which measured values are sent when in client-mode, (only valid for CLIENT/TCP or CLIENT/UDP).
- Port: Port, to which the server gets assigned to in server-mode or to which the measured values are sent in client-mode (min: 1024, max: 65535).
- Commands are expected at port 23, the data port is factory-set to 1024.

A 3.3.7.3 Count of Measurements per Ethernet Frame

```
MEASCNT_ETH 0 | <count>
```

Set the maximum quantity of measurements per packet for Ethernet transfer.

- 0: Automatic assignment of frame count per packet
- count: Manual assignment of measurement count, range from 0 ... 350

A 3.3.7.4 Setting the RS422 Baud Rate

```
BAUDRATE <Baudrate>
```

Adjustable baud rates in examples:

9600, 115200, 230400, 460800, 691200, 921600, 2000000, 3000000, 4000000

A 3.3.7.5 Change Ethernet / EtherCAT

```
ETHERMODE ETHERNET | ETHERCAT
```

Select whether the controller starts with Ethernet or EtherCAT mode. The setting is active after save and reboot the controller only.

A 3.3.8 Parameter Management, Load / Save Settings

A 3.3.8.1 Safe / Load Connection Settings

```
BASICSETTINGS READ | STORE
```

- READ: Reads the connection settings from the controller flash.
- STORE: Saves the current connection settings from the controller RAM into the controller flash.

A 3.3.8.2 Show Changed Parameters

```
CHANGESETTINGS
```

Outputs all changed settings.

A 3.3.8.3 Export of Parameter Sets to PC

```
EXPORT (MEASSETTINGS <SetupName>) | BASICSETTINGS |  
MEASSETTINGS_ALL | MATERIALTABLE | ALL
```

Saving parameters in external device, e.g. PC.

The export file is output as readable JSON (JavaScript Object Notation).

- MEASSETTINGS <SetupName>: Export of indicated MeasSettings. Nothing is deleted before import.
- BASICSETTINGS: Export of current stored BasicSettings. BasicSettings are deleted before import.
- MEASSETTINGS_ALL: Export of all stored MeasSettings and initial setting. All MeasSettings are deleted before import.
- MATERIALTABLE: Export of stored material table. Material table is deleted before import.
- ALL: Export of all stored settings (Basic and Meas), the material table and all stored sensor data. Anything is deleted before import.

A 3.3.8.4 Import of Parameter Sets from PC

```
IMPORT [FORCE] [APPLY] <Daten>
```

Loading parameters from external device, e.g. PC.

The import file is a JSON file that was stored before during the export.

- FORCE: Overwriting `Meassettings` with the same name, otherwise an error message is displayed when the name is the same. When importing `Meassettings` or `Basicsettings`, Force must always be specified.
- APPLY : Activates the settings after importing and reading the Initial Settings.

A 3.3.8.5 Default Settings

```
SETDEFAULT ALL | MEASSETTINGS | BASICSETTINGS | MATERIAL
```

Sets the default values (reset to factory setting), deletes the corresponding settings in the Flash.

- ALL: All setups are deleted and the default parameters are loaded. In addition, the current material table is overwritten with the standard material table.
- MEASSETTINGS: Settings for measurement task
- BASICSETTINGS: Basic settings such as e.g. IP, baud rate, language, unit.
- MATERIAL: Overwrites only the current material table with the standard material table.

A 3.3.8.6 Safe, Show, Delete Measurement Settings

MEASSETTINGS <Unterkommando> [<Name>]

Settings for measurement task transferring application-depending measurement settings between controller RAM and controller Flash. Either the presets specified by the manufacturer or the user-specific settings are used. Each preset can be used as user-specific setting.

Subcommands:

| | |
|---|--|
| PRESETMODE <mode> | Defines the preset dynamics. |
| <mode> = NONE STATIC BALANCED DYNAMIC | NONE means that there is no selection for a preset. |
| PRESETLIST | Lists all existing presets (names): "Name1" "Name2" "..." |
| READ <Name> | Loads a basic setting or a meassetting / preset from the controller Flash. |
| STORE <Name> | Stores a basic setting or a meassetting in the controller Flash. If no name is specified, the setting is saved under the current name. |
| DELETE <Name> | Deletes the indicated measurement setting from the controller Flash. |
| RENAME <NameOld> <NameNew> [FORCE] | Changes the name of a measurement setting in the controller Flash. FORCE overwrites an existing measurement setting. |
| LIST | Lists all stored measurement settings (names) "Name1" "Name2" "...". The order is defined by the internal slot numbers and not by the order as they were stored. |
| CURRENT | Output of all current meassettings / presets (name) |
| INITIAL AUTO | When starting the controller, the settings which were saved last or the first preset are loaded if no setups exist. |
| INITIAL <Name> | Loads the indicated measurement settings when starting the controller. Presets cannot be indicated. |

A 3.3.9 Measurement

A 3.3.9.1 Number of Peaks

PEAKCOUNT <n>

Indicates the maximum number of peaks which should be evaluated.

- Distance measurement <n> = 1
- Thickness measurement <n> = 2
- Multilayer measurement <n> >2

A 3.3.9.2 Peak Selection

| IFC2421 | IFC2422 |
|----------------------------|--|
| MEASPEAK F_L L_SL F_S H_SH | MEASPEAK_CH01 F_L L_SL F_S H_SH MEASPEAK_CH02 F_L L_SL F_S H_SH |

Selection of the used peak for measurement.

| Distance measurement | | Thickness measurement | |
|----------------------|--------------|-----------------------|---------------------------------|
| F_L: | first peak | F_L: | first and last peak |
| L_SL: | last peak | L_SL: | second to last and last peak |
| F_S: | first peak | F_S: | first and second peak |
| H_SH: | highest peak | H_SH: | highest and second highest peak |

A 3.3.9.3 Number of Peaks and Enabling/Disabling Refractive Correction

| IFC2421 | IFC2422 |
|---------------------|--|
| REFRACCORR on off | REFRACCORR_CH01 on off REFRACCORR_CH02 on off |

- On: The refractive index correction is performed with the adjusted materials, default setting.
- Off: The refractive index 1.0 is expected for all layers.

A 3.3.9.4 Exposure Mode

| IFC2421 | IFC2422 |
|--|--|
| SHUTTERMODE MEAS MANUAL 2TIMEALT 2TIMES | SHUTTERMODE_CH01 MEAS MANUAL 2TIMEALT 2TIMES SHUTTERMODE_CH02 MEAS MANUAL 2TIMEALT 2TIMES |

- MEAS: Exposure time is controlled automatically, measuring rate is fixed. Recommended for measurements.
- MANUAL: User can select exposure time and measuring rate.
- 2TIMEALT: Mode with 2 manually defined exposure times that are used alternately for two distinctly differently high peaks (for thickness measurements). We recommend using this mode in particular, if the smaller peak disappears or the higher peak overshoots.
- 2TIMES: Fastest mode with two manually preset exposure times. The more suitable time is automatically selected. Recommended to measure distances for fast changing surface properties, such as mirrored or anti-glare glass.

A 3.3.9.5 Measuring Rate

MEASRATE <Messrate>

Specifies the measuring rate in kHz, range 0.100 ... 6.500.

A maximum of three decimal places may be specified, e. g. 0.100 for 0.1 kHz.

A 3.3.9.6 Exposure Time

| IFC2421 | IFC2422 |
|--|--|
| SHUTTER <Exposure Time1> [<Exposure Time2>] | SHUTTER_CH01 <Exposure Time1> [<Exposure Time2>] SHUTTER_CH02 <Exposure Time1> [<Exposure Time2>] |

Specifies the exposure times for the manual and the two-times exposure mode.

The exposure time is indicated in μs . Range: 1 μs ... 10000 μs .

The exposure time is processed with three decimal places. The minimum increment is 0.1 μs .

A 3.3.9.7 Masking the Evaluation Range

| IFC2421 | IFC2422 |
|--------------------|--|
| ROI <Start> <Ende> | ROI_CH01 <Start> <Ende> ROI_CH02 <Start> <Ende> |

Setting the evaluating range for the „Range of interest“ of the respective channel. Start and end must be between 0 and 511. The figure is given in pixels. The start value must be less than the end value.

A 3.3.9.8 Peak Detection Threshold

| IFC2421 | IFC2422 |
|-------------------|--|
| MIN_THRESHOLD <n> | MIN_THRESHOLD_CH01 <n> MIN_THRESHOLD_CH02 <n> |

Sets the minimum detection threshold. A peak must be above this threshold in order to be detected as peak.

The values is entered in % and refers to the dark corrected signal.

A 3.3.9.9 Peak Modulation

| IFC2421 | IFC2422 |
|---------------------|--|
| PEAK_MODULATION <n> | PEAK_MODULATION_CH01 <n> PEAK_MODULATION_CH02 <n> |

Indicates the magnitude of the modulation in order to separate interleaved peaks. With 100 % there is no peak separation and with 0 % (default setting) all peaks are separated.

This is how peak artifacts can be removed or are not regarded as individual peaks.

A 3.3.10 Material Data Base

A 3.3.10.1 Material Table

MATERIALTABLE

Output of material table that is stored in the controller.

```
->MATERIALTABLE
```

| Pos, | Name, | Refraction index | | | Abbenumber | Description |
|------|------------|------------------|--------------|--------------|------------|-----------------------------|
| | | nF at 486nm, | nd at 587nm, | nC at 656nm, | | |
| 0 | Vakuum, | 1.000000, | 1.000000, | 1.000000, | 0.000000 | Vacuum; air (approximately) |
| 1 | Wasser, | 1.337121, | 1.333044, | 1.331152, | 0.000000 | |
| 1 | Ethanol, | 1.361400, | 1.361400, | 1.361400, | 0.000000 | |
| 7 | PC, | 1.599439, | 1.585470, | 1.579864, | 0.000000 | Polycarbonate |
| 8 | Quarzglas, | 1.463126, | 1.458464, | 1.456367, | 0.000000 | Silica, Fused Silica |
| 9 | BK7, | 1.522380, | 1.516800, | 1.514320, | 0.000000 | Crown glass |

```
->
```

A 3.3.10.2 Select Material

MATERIAL <Materialname>

| IFC2421 | IFC2422 |
|-------------------------|------------------------------|
| MATERIAL <Materialname> | MATERIAL_CH01 <Materialname> |
| | MATERIAL_CH02 <Materialname> |

Change of material between displacement 1 and 2 for each particular channel.

Material name must be typed in with a blank. The command supports case sensitive inputs. The maximum length of material name is 30 characters.

A 3.3.10.3 Display Material Properties

MATERIALINFO

| IFC2421 | IFC2422 |
|------------------------|-----------------------------|
| MATERIALINFO [<layer>] | MATERIALINFO_CH01 [<layer>] |
| | MATERIALINFO_CH02 [<layer>] |

Output of material properties of the selected layer. Layer 1 is between distance 1 and 2, layer 2 is between distance 2 and 3 etc. If no parameters are specified, the data for layer 1 are output.

Example:

```
->MATERIALINFO
```

| | |
|-------------------------------|-------------|
| Name: | BK7 |
| Description: | Crown glass |
| Refraction index nF at 486nm: | 1.522380 |
| Refraction index nd at 587nm: | 1.516800 |
| Refraction index nC at 656nm: | 1.514320 |
| Abbe value vd: | 0.000000 |

```
->
```

A 3.3.10.4 Edit Material Table

```
MATERIALEDIT <Name> <Description> (NX <nF> <nd> <nC>) | (ABBE <nd>
<Abbezahl>)
```

Add or edit material for multilayer measurement, see Chap. A 3.3.10.6.

- Name: Name of material (Length: max. 30 characters)
- Description: Description of material (Length: max. 62 characters)
- NX: Material is characterized by three refractive indices
- ABBE: Material is characterized by a refractive index and the Abbe number
- nF: Refractive index nF at 486 nm (min: 1.0, max: 4.0)
- nd: Refractive index nd at 587 nm (min: 1.0, max: 4.0)
- nC: Refractive index nC at 656 nm (min: 1.0, max: 4.0)
- Abbe number: Abbe number vd (min: 10.0, max: 200.0)

The refractive indices and Abbe number are processed with six decimal places.

If the material name is already assigned, this material is being edited. Otherwise a new material is applied.

There is a maximum of 20 materials.

A 3.3.10.5 Delete a Material

```
MATERIALDELETE <Name>
```

Delete a material

- Name: Name of material (Length: max. 30 characters)

A 3.3.10.6 Material Settings Multilayer Measurement

| IFC2421 | IFC2422 |
|--|--|
| MATERIALMP [<Material1> [<Material2>[<Material3> [<Material4>[<Material5>]]]]] | MATERIALMP_CH01 [<Material1> [<Material2>[<Material3> [<Material4>[<Material5>]]]]] |
| | MATERIALMP_CH02 [[<Material1> [<Material2>[<Material3> [<Material4>[<Material5>]]]]] |

Displaying and setting the materials for the layers between the peaks 1 up to 6.

The existing material is maintained with input from „“.

A 3.3.11 Measurement Value Processing

A 3.3.11.1 Spike Correction

| IFC2421 | IFC2422 |
|---|---|
| <pre>SPIKECORR [ON OFF][[<Number of evaluated measured values>] [[<Tolerance range in mm>] [<Number of corrected val- ues>]]]</pre> | <pre>SPIKECORR_CH01 [ON OFF][[<Number of evaluated measured values>] [[<Tolerance range>][<Number of corrected values>]]] SPIKECORR_CH02 [ON OFF][[<Number of evaluated measured values>] [[<Tolerance range in mm>][<Num- ber of corrected values>]]]</pre> |

Activate and parametrize spike correction. Spike correction is not enabled in the factory default settings.

| | Factory settings | Min | Max |
|----------------------------------|------------------|-----------|-------------|
| Number of evaluated measurements | 3 | 1 | 10 |
| Tolerance range in mm | 0.1000000 | 0.0000000 | 100.0000000 |
| Number of corrected values | 1 | 1 | 100 |

The tolerance range is set in mm with seven decimals.

A 3.3.11.2 Statistics Calculation

```
STATISTIC <signal> RESET
```

Resets an individual statistics.

- <signal>: Statistical data minimum, maximum or peak-peak

A 3.3.11.3 List of Signals for the Statistics

```
META_STATISTIC
```

Displays a list with the active statistical signals.

These signals were defined under STATISTICSIGNAL.

A 3.3.11.4 Reset the Statistics Calculation

```
RESETSTATISTIC
```

Reset the statistics (of the current min and max value).

A 3.3.11.5 Selection of a Signal for the Statistics

```
STATISTICSIGNAL <signal>
```

For this selected signal the statistics are generated. A list with possible signals can be found with the META_STATISTICSIGNAL command.

New signals are created which can then be output via the interfaces.

- <signal>_MIN --> Minimum signal
- <signal>_MAX --> Maximum signal
- <signal>_PEAK --> <signal>_max - <signal>_min

A 3.3.11.6 List of Possible Signal for the Statistics to be Selected

```
META_STATISTICSIGNAL
```

Lists all possible signals that can be included in the statistics.

A 3.3.11.7 List of Signals which can be Parameterized

```
META_MASTERSIGNAL
```

Lists all possible signals which can be used for mastering.

A 3.3.11.8 Master Signal Parameterization

```
MASTERSIGNAL [<signal>] <master value> | NONE
```

Defines the signal to be mastered. The `NONE` parameter resets the signal.

- `<signal>`: Selecting a specific measured or calculated signal on which the master value should be set
- `<master value>` Master value in mm, value range: -2147.0 ... 2147.0

A 3.3.11.9 List of Possible Signals for Mastering

```
META_MASTER
```

Lists all defined master signals from the `MASTERSIGNAL` command and can be used with the `MASTER` command.

A 3.3.11.10 Masters / Zero

```
MASTER [<signal>]
```

```
MASTER ALL|<signal> SET|RESET
```

The `MASTER` is not channel specific. Up to 10 master signals are in the controller which can be applied on all internally determined values and calculated values.

This command sets/resets the mastering process for the corresponding signal.

- `ALL`: Use all signals for mastering
- `<signal>`: `<signal>`: Use a specific measured or calculated signal for the mastering process
- `SET|RESET`: Start or stop the function

If the master value is 0, the mastering function has the same functionality as the zero setting.

The master command waits for a maximum of 2 seconds for the next measurement value and uses this as master value. If no value is measured within this time, e.g. in case of external triggering, the command returns with the error „E32 Timeout“. The master value is processed with six decimal places.

A 3.3.11.11 Mastering Example

This example is based on the `Two-sided thickness measurement` preset in the controller. The commands are executed with the Telnet program, no variables defined.

```
->o 169.254.168.150
```

```

_____
/  ___ \
/|  ||  \
|  ||  |
|  ||  |
\|  ||  /
 \  ___ /
  \  ___ /

```

```
Connected with the MICRO-OPTRONIC terminal server. Your
IP 169.254.168.2, your local port number 54532 and you are
connected to port number 23
```

| | |
|--|---|
| <pre>->META_MASTERSIGNAL META_MASTERSIGNAL 01DIST1 02DIST1 Thick</pre> | <pre>// Lists all variables which can be mastered</pre> |
| <pre>->META_MASTER META_MASTER NONE</pre> | <pre>// Lists all variables which are assigned with a master value</pre> |
| <pre>->MASTERSIGNAL Thick 16.5 ->MASTERSIGNAL 01DIST1 10</pre> | <pre>// Setting Variable Thick to 16.5 // Setting Variable 01DIST1 to 10</pre> |
| <pre>->META_MASTER META_MASTER 01DIST1 Thick</pre> | <pre>// Lists all variables which are assigned with a master value; the variables 01DIST1 and Thick are now assigned with a master value</pre> |
| <pre>->MASTER ALL MASTER Thick INACTIVE MASTER 01DIST1 INACTIVE MASTER NONE MASTER NONE ... MASTER NONE MASTER NONE MASTER NONE MASTER NONE</pre> | <pre>// Lists the 10 possible variables and shows their status</pre> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">01DIST1 3.97188 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">02DIST1 4.07372 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">Thick 1.96904 mm</div> </div> |
| <pre>->MASTER ALL SET</pre> | <pre>// Triggers a master measurement for all assigned variables</pre> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">01DIST1 10.03861 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">02DIST1 2.22141 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">Thick 16.00510 mm</div> </div> |
| <pre>->MASTER 01DIST1 RESET</pre> | <pre>// Resets the offset (master value) for the variable 01DIST1</pre> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">01DIST1 3.68267 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">02DIST1 3.53795 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">Thick 16.14950 mm</div> </div> |
| <pre>->MASTER ALL MASTER Thick ACTIVE MASTER 01DIST1 INACTIVE MASTER NONE MASTER NONE ... MASTER NONE MASTER NONE MASTER NONE MASTER NONE</pre> | |
| <pre>->MASTER Thick RESET</pre> | <pre>// Resets the offset (master value) for the variable Thick</pre> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">01DIST1 3.65359 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">02DIST1 3.56958 mm</div> <div style="border: 1px solid #ccc; padding: 5px; text-align: center;">Thick 2.77601 mm</div> </div> |
| <pre>->MASTERSIGNAL 01DIST1 NONE ->MASTERSIGNAL Thick NONE</pre> | <pre>// The variable 01DIST1 is deleted // The variable Thick is deleted</pre> |
| <pre>->MASTER ALL MASTER NONE ... MASTER NONE</pre> | <pre>// No variable on which a master measurement could be applied</pre> |

A 3.3.11.12 Channel Selection

```

COMP [<channel> [<id>]]
COMP <channel> <id> MEDIAN <signal> <median data count>
COMP <channel> <id> MOVING <signal> <moving data count>
COMP <channel> <id> RECURSIVE <signal> <recursive data count>
COMP <channel> <id> CALC <factor1> <signal> <factor2> <signal>
<offset> <name>
COMP <channel> <id> THICKNESS <signal> <signal> <name>
COMP <channel> <id> COPY <signal> <name>
COMP <channel> <id> NONE

```

This command defines all channel-specific and controller-specific calculations.

- <channel> CH01|CH02|SYS *Channel selection*
- <id> 1...10 *Number of calculation block*
- <signal> *Measurement signal; query the available signals with the META_COMP command*

- <median data count> 3|5|7|9 *Averaging depth Median*
- <moving data count> 2|4|8|16|32|64|128|256|512|1024|2048|4096 *Averaging depth of moving average*
- <recursive data count> 2 ... 32000 *Averaging depth of recursive average*
- <factor1>, <factor2> -32768,0 ... 32767,0 *Multiplication factor*
- <offset> -2147,0 ... 2147,0 *Correction value in mm*
- <name> *Name of calculation block; min. length 2 characters, max. length 15 characters
Permitted characters a-zA-Z0-9, the name must begin with a letter.
Command names are not permitted, e.g. STATISTIC, MASTER, CALC, NONE, ALL.*

The COMP command enables you to create, modify and delete calculation blocks.

Functions:

- MEDIAN, MOVING and RECURSIVE: averaging functions
- CALC: calculation function based on formula
(<factor1> * <signal>) + (<factor2> * <signal>) + <offset>
- Thickness: Thickness calculation based on formula <signal B> - <signal A> on condition that signal B is larger than signal A.
- COPY: Duplicates a signal; this effect can also be achieved with the CALC command, e.g. with (1 * <signal>) + (0 * <signal>) + 0
- NONE: Deletes a calculation block

A 3.3.11.13 List of possible calculation signals

```
META_COMP
```

Lists all possible signals which can be used in the calculation.

A 3.3.11.14 Two-Point Scaling Data Outputs

```
SYSSIGNALRANGE <Start of range> <End of range>
```

The determined values from the calculation can be larger than the values displayed by the controller This command stipulates the range of values.

Default is 0 to 10 mm.

A 3.3.12 Data Output

A 3.3.12.1 Selection of Digital Output

```
OUTPUT NONE | RS422 | ETHERNET | ANALOG | ERRORROUT
```

- NONE: No measurement value output
- RS422: Output of measurement values via RS422
- ETHERNET: Output of measurement values via Ethernet
- ANALOG: Output of measurement values via analog output
- ERRORROUT: Error or status information about the switching outputs

Command starts the measurement value output. If not yet done, connect the controller now to the measurement server.

A 3.3.12.2 Data output Rate

```
OUTREDUCEDEVICE NONE | [RS422] [ANALOG] [ETHERNET]
```

Reduces the measured value output via the indicated interfaces.

- NONE: No reduction of measurement value output
- RS422: Reduction of measurement value output via RS422
- ETHERNET: Reduction of measurement value output via Ethernet

A 3.3.12.3 Reduction Counter of Measurement Value Output

```
OUTREDUCECOUNT <Number>
```

Reduction counter of measurement value output.

Only every n-th measured value is output. The other measurement values are rejected.

- Number: 1...3000000 (1 means all frames)

A 3.3.12.4 Error Processing

```
OUTHOLD NONE | INFINITE | <Number>
```

Setting the behavior of the measurement value output in case of error.

- NONE: No holding the last measurement value, output of error value
- INFINITE: Infinite holding of the last measurement value
- Number: Holding the last measurement value on the number of measuring cycles; then an error value (maximum of 1024) is output.

A 3.3.13 Select Measurement Values to be Output

A 3.3.13.1 General

Setting the values to be output via the RS422 and Ethernet interface.

Limiting the data volume via RS422 depends on the measurement frequency and the baud rate.

The maximum output rate via the Ethernet interface depends on the number of output values.

Any distances and differences can be selected for the output in the multilayer measurement mode. All measurement values required for the difference calculations are output in addition to the Ethernet measuring value transmission.

Via the Ethernet interface always the displacement 1 and in case of thickness measurement the displacement 1 and 2 and the difference 1-2 is output.

A 3.3.13.2 Data selection for Ethernet

```
OUT_ETH <signal1> <signal2> ... <signalN>
```

Describes which data are output via these interfaces.

A 3.3.13.3 List of Possible Ethernet Signals

```
META_OUT_ETH
```

List of possible data for Ethernet.

A 3.3.13.4 List of Selected Signals, Transfer Sequence via Ethernet

```
GETOUTINFO_ETH
```

Indicates the signal sequence via these interfaces.

A 3.3.13.5 Data selection for RS422

```
OUT_RS422
```

Describes which data are output via these interfaces.

A 3.3.13.6 List of Possible RS422 Signals

```
META_OUT_RS422
```

List of possible data for RS422.

A 3.3.13.7 List of Selected Signals, Transfer Sequence via RS422

```
GETOUTINFO_RS422
```

Indicates the signal sequence via these interfaces.

A 3.3.14 Switching Outputs

A 3.3.14.1 Error Switching Outputs

```
ERRORROUT1 NONE|ER1|ER2|ER12|LI1|LI2|LI12
```

```
ERRORROUT2 NONE|ER1|ER2|ER12|LI1|LI2|LI12
```

Setting the error switching outputs.

- NONE: No output on the error switching outputs
- ER1: Switching output is switched in case of intensity error
- ER2: Switching output is switched in case of a measured value outside of the measuring range
- ER12: Switching output is switched in case of an intensity error or a measured value outside of the measuring range
- LI1: Switching output is switched in case of deceeding the lower limit
- LI2: Switching output is switched in case of exceeding the upper limit
- LI12: Switching output is switched in case of deceeding the lower limit or exceeding the upper limit

A 3.3.14.2 Setting the Signal to be Evaluated

```
ERRORLIMITSIGNALn
```

Selecting the signal which should be used for the limit value consideration.

A 3.3.14.3 List of Possible Signals for Error Output

```
META_ERRORLIMITSIGNAL
```

List with all possible signals that could have effects on the error outputs.

A 3.3.14.4 Setting Limit Values

```
ERRORLIMITCOMPARETO n [LOWER | UPPER | BOTH]
```

Indicates if the output should switch to active with

- LOWER --> shortfall
- UPPER --> exceedance
- BOTH --> shortfall and exceedance

A 3.3.14.5 Setting Value

```
ERRORLIMITVALUESn
```

Sets the values for the Lower and Upper limit values.

A 3.3.14.6 Switching Behavior of Error Outputs

```
ERRORLEVELOUT1 PNP|NPN|PUSHPULL|PUSHPULLNEG
```

```
ERRORLEVELOUT2 PNP|NPN|PUSHPULL|PUSHPULLNEG
```

Switching behavior of error outputs Error 1 and Error 2.

- PNP: Switching output is High with error and open without error
- NPN: Switching output is Low with error and open without error
- PUSHPULL: Switching output is High with error and Low without error
- PUSHPULLNEG: Switching output is Low with error and High without error

A 3.3.15 Analog Output

A 3.3.15.1 Data Selection

`ANALOGOUT Signal`

Selection of the signal which should be output via the analog output. As parameter, the signal is indicated. A list of possible signals can be seen with `META_ANALOGOUT`, see Chap. A 3.3.15.2.

A 3.3.15.2 List of Possible Signals for Analog Output

`META_ANALOGOUT`

Lists all signals that can be sent to the analog output.

A 3.3.15.3 Output range

`ANALOGRANGE 0-5V | 0-10V | 4-20mA`

- 0 - 5 V: The analog output outputs a voltage of 0 to 5 volts.
- 0 - 10 V: The analog output outputs a voltage of 0 to 10 volts.
- 4 - 20 mA: The analog output outputs a current of 4 to 20 mA.

A 3.3.15.4 Setting the Scaling of DAC

`ANALOGSCALEMODE STANDARD | TWOPOINT`

Decides between either a one-point or two-point scaling of the analog output.

- `STANDARD` --> One-point scaling
- `TWOPOINT` --> Two-point scaling

The default scaling is for displacements $-MR/2$ up to $MR/2$ and for thickness measurement on 0 up to 2 MR (MR=Measuring range).

The minimum and maximum measured value is to output in millimeters. The available output range of the analog output is then spread between the minimum and maximum measured value. The minimum and maximum measured value must be between -2147.0 and 2147.0.

The minimum and maximum measured value is processed with three decimal places.

A 3.3.15.5 Setting the Scaling Range

`ANALOGSCALERANGE <lower limit> < upper limit>`

Indicates the limits for two-point scaling.

A 3.3.16 Key Functions

A 3.3.16.1 Multifunction Button

| IFC2421 | IFC2422 |
|--|---|
| <p>KEYFUNC1 NONE DARKCORR MASTERSET MASTERRESET LED</p> <p>KEYFUNC2 NONE DARKCORR MASTERSET MASTERRESET LED</p> | <p>KEYFUNC1 NONE DARKCORR DARKCORR_CH01 DARKCORR_CH02 MASTER MASTERRESET LED LED_CH01 LED_CH02</p> <p>KEYFUNC2 NONE DARKCORR DARKCORR_CH01 DARKCORR_CH02 MASTER MASTERRESET LED LED_CH01 LED_CH02</p> |
| Time range 0 ... 2 s | |
| <ul style="list-style-type: none"> - NONE: No function - DARKCORR: Dark correction, see DARKCORR command - MASTERSET: Activates the master function, see Chap. 6.4.2. Applies for all signals which were selected with the KEYMASTERSIGNALSELECT command. - MASTERRESET: Deactivates the master function. - LED: Switches the sensor light source alternately on/off. | <ul style="list-style-type: none"> - NONE: No function - DARKCORR_CH01: Dark correction for channel/sensor 1. - DARKCORR_CH02: Dark correction for channel/sensor 2. - MASTERSET: Activates the master function, see Chap. 6.4.2. Applies for all signals which were selected with the KEYMASTERSIGNALSELECT command. - MASTERRESET: Deactivates the master function. - LED_CH01: Switches the sensor 1 light source alternately on/off. - LED_CH02: LED: Switches the sensor 2 light source alternately on/off. |
| Time range 2 ... 5 s | |
| <ul style="list-style-type: none"> - NONE: No function - DARKCORR: Dark correction, see DARKCORR command - MASTERSET: Activates the master function, see Chap. 6.4.2. Applies for all signals which were selected with the KEYMASTERSIGNALSELECT command. - MASTERRESET: Deactivates the master function. - LED: Switches the sensor light source alternately on/off. | <ul style="list-style-type: none"> - NONE: No function - DARKCORR_CH01: Dark correction for channel/sensor 1. - DARKCORR_CH02: Dark correction for channel/sensor 2. - MASTERSET: Activates the master function, see Chap. 6.4.2. Applies for all signals which were selected with the KEYMASTERSIGNALSELECT command. - MASTERRESET: Deactivates the master function. - LED_CH01: Switches the sensor 1 light source alternately on/off. - LED_CH02: LED: Switches the sensor 2 light source alternately on/off. |

A 3.3.16.2 Signal Selection for Mastering with Multifunction Button

```
KEYMASTERSIGNALSELECT ALL | <signal> [<signal2> [...]]
```

Selecting the measurement signals which should be mastered by key actuation. The available signals can be queried with the META_MASTER command. MASTERSIGNAL configures the signals that can be mastered.

A 3.3.16.3 Key Lock

```
KEYLOCK NONE | ACTIVE | (AUTO [<value>])
```

Key lock configuration

- NONE: Key is active, no key lock
- ACTIVE: Key lock is activated immediately after restart
- AUTO: Key lock is activated only <time> seconds after restart

A 3.4 Measured Value Format

A 3.4.1 Structure

The structure of measurement frames, see Chap. A 3.5.2.2, depends on the selected measurement values or the selected preset. See below for a summary of commands which enable you to query the available measurement values via Ethernet or RS422.

| | | |
|------------------|------------------|--|
| Chap. A 3.3.13.2 | OUT_ETH | Data selection for Ethernet |
| Chap. A 3.3.13.3 | META_OUT_ETH | List of Possible Ethernet Signals |
| Chap. A 3.3.13.4 | GETOUTINFO_ETH | List of Selected Signals, Transfer Sequence via Ethernet |
| Chap. A 3.3.13.5 | OUT_RS422 | Data selection for RS422 |
| Chap. A 3.3.13.6 | META_OUT_RS422 | List of Possible RS422 Signals |
| Chap. A 3.3.13.7 | GETOUTINFO_RS422 | List of Selected Signals, Transfer Sequence via RS422 |

Example for the structure of a data block, query with Telnet:

| | |
|---|--|
| Preset Standard matt | Preset One-sided thickness measurement |
| ->META_OUT_ETH META_OUT_ETH 01RAW 01DARK 01LIGHT 02RAW 02DARK 02LIGHT 01SHUTTER 01ENCODER1 01ENCODER2 01INTENSITY 01DIST1 02SHUTTER 02ENCODER1 02ENCODER2 02INTENSITY 02DIST1 MEASRATE TRIGTIMEDIFF TIMESTAMP TIMESTAMP_HIGH TIMESTAMP_LOW COUNTER | ->META_OUT_ETH META_OUT_ETH 01RAW 01DARK 01LIGHT 02RAW 02DARK 02LIGHT 01SHUTTER 01ENCODER1 01ENCODER2 01INTENSITY 01DIST1 01DIST2 02SHUTTER 02ENCODER1 02ENCODER2 02INTENSITY 02DIST1 02DIST2 MEASRATE TRIGTIMEDIFF TIMESTAMP TIMESTAMP_HIGH TIMESTAMP_LOW COUNTER Ch- 01Thick12 Ch02Thick12 -> |
| ->GETOUTINFO_ETH GETOUTINFO_ETH 01SHUTTER 01INTENSITY1 01DIST1 02SHUTTER 02INTENSITY1 02DIST1 -> | ->GETOUTINFO_ETH GETOUTINFO_ETH 01SHUTTER 01INTENSITY1 01DIST1 01INTENSITY2 01DIST2 02SHUTTER 02INTENSITY1 02DIST1 02INTENSITY2 02DIST2 Ch01Thick12 Ch02Thick12 -> |

A measurement value frame is dynamically structured, i.e. values not selected are not transferred.

A 3.4.2 Video Signal

Video signals, which were calculated in signal processing, can be transmitted. A video signal consists of 512 pixel. A pixel is described by a 16-bit word. The used value range is 0 ...16383.

There are five available video signals:

- Raw signal
- Dark-corrected signal
- Light source corrected signal

The dark value table and light value table can be queried with the commands `DARKCORR_PRINT` or `LIGHTCORR_PRINT`.

| Pixel 0 | Pixel 1 | .. | Pixel 511 |
|---------------------------------------|-------------------------------|----|-------------------------------|
| Raw signal, 16 bit | Raw signal | | Raw signal |
| Dark corrected signal, 16 bit | Dark corrected signal | .. | Dark corrected signal |
| Light source corrected signal, 16 bit | Light source corrected signal | | Light source corrected signal |

Fig. 81 Data structure of video signals

A 3.4.3 Exposure Time

The data word to the exposure time is 32-bit wide during transmission via Ethernet. The resolution is 100 ns.

The output of the exposure time via the RS422 interface is effected by a resolution of 100 ns. For that the data word is 18 bits wide.

A 3.4.4 Encoder

The encoder values for transmission can be selected individually. A 32 bit data word (unsigned integer) with the encoder position is output via Ethernet. Only the lower 18 bits of the encoder values are transmitted by the transmission via RS422.

A 3.4.5 Measured Value Counter

The transmission of the measured value counter via Ethernet is effected as 32 bit value (unsigned integer). On the RS422 interface, only the lower 18 bits of the profile counter are transmitted.

A 3.4.6 Time Stamp

Intrasystem the resolution of time stamp is 1 μ s. For the Ethernet transfer a 32 bit data word (unsigned integer) with the intrasystem resolution is output.

For the transmission via RS422, two 18 bit data words are provided (`TIMESTAMP_LOW` and `TIMESTAMP_HIGH`).

A 3.4.7 Measurement Data (Displacements and Intensities)

An intensity (if selected) and a measurement value are transmitted for each selected displacement. For the Ethernet transmission 32 bit for each are used. The assembly of the data word for the intensity is shown in the following table, see Fig. 82. The resolution of the displacement values is 1 nm on the Ethernet line, the output is signed. The format for RS422 is described, see Chap. A 3.5.1.

| Bit position | Description |
|--------------|--|
| 0 - 10 | Intensity of peak (100 % comply with 1024) |
| 11 - 15 | Reserved |
| 16 - 29 | Maximum of peak (from dark corrected signal) |
| 30 - 31 | Reserved |

Fig. 82 Table Intensity

During transmission via RS422 only the 'Intensity of peak' is transmitted (the lower 10 bit).

The intensity value is determined using the following calculation rule:

$$\text{Intensität} = \frac{\text{Max_dark}}{\text{Sättigung} - \text{Max_raw} + \text{Max_dark}}$$

- Max_dark refers to the dark corrected signal.
- Max_raw refers to the raw signal.
- Saturation refers to the AD range ($2^{14}-1$).

A 3.4.8 Trigger Time Difference

The trigger time difference is output via Ethernet as an unsigned 32 bit integer or via RS422 as an unsigned 18 bit integer with a resolution of 100 ns.

Range 0...100000

A 3.4.9 Differences (thicknesses)

Calculated differences between two distances have the same format as the distances.

First, the selected differences between distance 1 and the other distances are output, then those of distances 2, ...

The difference values are provided as 32 bit signed integer with 1 nm resolution. Please refer to , see Chap. A 3.5.1 for the RS422 format.

A 3.4.10 Statistical values

Statistical values have the same format as the distances.

The transmission sequence (if selected) starts with minimum, then maximum and peak-to-peak.

Statistical values are provided as 32 bit signed integer with 1 nm resolution or in the format for the RS422 interface.

A 3.5 Measurement Data Format

A 3.5.1 Data Format RS422 Interface

A 3.5.1.1 Video Data

| <Preamble> | <Size> | <video data> | <End> |
|---|--|-----------------|---|
| Start recognition 64 Bit 0xFFFF00FFFF000000 | Size 32 Bit Size of video data in Byte | 16 Bit unsigned | End recognition 32 Bit 0xFEFE0000 |

Fig. 83 Structure of a video frame

Data structure, see Fig. 81.

A 3.5.1.2 Measurements

The output of displacement measurement values, differences between measurement values and statistic values via RS422 need a subsequent conversion in mm. Other values as exposure time, time stamp, profile counter, encoder, intensities or status data are transmitted as 18 bit data words, a conversion is not required.

The measured value data, if requested, always follow a video frame.


Measurement value 1:

| | Preamble | | Data bits | | | | | |
|--------|----------|---|-----------|-----|-----|-----|-----|-----|
| L-Byte | 0 | 0 | D5 | D4 | D3 | D2 | D1 | D0 |
| M-Byte | 0 | 1 | D11 | D10 | D9 | D8 | D7 | D6 |
| H-Byte | 1 | 0 | D17 | D16 | D15 | D14 | D13 | D12 |

Measurement value 2 ... 32:

| | Preamble | | Data bits | | | | | |
|--------|----------|---|-----------|-----|-----|-----|-----|-----|
| L-Byte | 0 | 0 | D5 | D4 | D3 | D2 | D1 | D0 |
| M-Byte | 0 | 1 | D11 | D10 | D9 | D8 | D7 | D6 |
| H-Byte | 1 | 1 | D17 | D16 | D15 | D14 | D13 | D12 |

Value range for the displacement and thickness measurement:

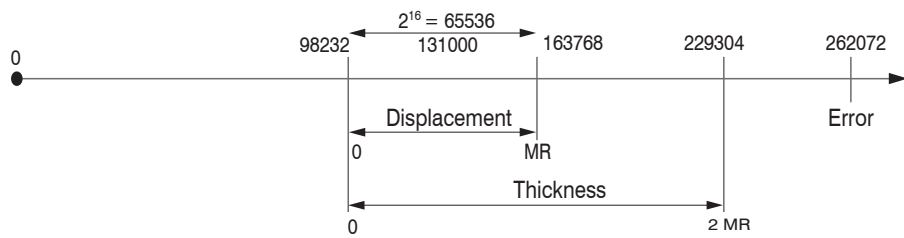

131000 = Midrange for the displacement measurement

MR = Measuring range

The linearized measurement values can be converted in millimeters using the subsequent formula:

$$x = \frac{(d_{OUT} - 98232) * MR}{65536}$$

x = Displacement / Thickness in mm

d_{OUT} = digital output value

MR = Measuring range in mm

All values greater than 262072 are error values and are defined as follows:

| Error code | Description |
|------------|--|
| 262073 | Scaling error RS422 interface underflow |
| 262074 | Scaling errors RS422 interface overflow |
| 262075 | Too much data for selected baud rate ¹⁾ |
| 262076 | There is no peak present. |
| 262077 | Peak is located in front of the measuring range (MR) |
| 262078 | Peak is located behind the measuring range (MR) |
| 262079 | Measuring value cannot be calculated. |

The restrictions for all other data outputs except the measurement value data are defined in the relevant Chapters, see Chap. 5.

1) This error occurs when more data are to be output as with selected baud rate for the selected measuring can be transmitted. To remove the error, there are the following possibilities:

- Increase the baud rate, see Chap. [A 3.3.7.4](#)
- Decrease measuring rate, see Chap. [A 3.3.9.5](#)
- Decrease data; if 2 data words have been selected, then reduce to a data word, see Chap. [A 3.3.13](#)
- Reduce output data rate, see Chap. [A 3.3.12.2](#)

A 3.5.2 Measurement Data Transmission to a Server via Ethernet

A 3.5.2.1 General

During the measurement data transmission to a measurement value server the sensor transmits each measurement value to the measurement value server or to the connected client after successful connection (TCP or UDP). Therefore no explicit requirement is necessary. measurement

Any distances and additional information to be transmitted that are logged at one point in time are combined to form a value frame. Different measurement value frames are combined to a measurement value block, which contains a header and fits a TCP/IP or UDP/IP packet. The header is mandatory at the start of a UDP or TCP packet. In case of changes of the transferred data or the frame rate a new header is automatically sent.

All measurement data and the header are transmitted in the little Endian format.

| |
|----------------------------------|
| Preamble (32 Bit) |
| Order number (32 Bit) |
| Serial number (32 Bit) |
| Length video data (32 Bit) |
| Length measurement data (32 Bit) |
| Frame number (32 Bit) |
| Counter (32 Bit) |

The structure of a header for video and measurement data transfer is the same.

| Header entry | Description |
|-------------------------|--|
| Preamble | uint32_t - 0x41544144 "DATA" |
| Order number | |
| Serial number | |
| Length video data | [Byte] |
| Length measurement data | [Byte] |
| Frame number | Number of frames, that cover this header. With video output, the field for the number of measurement data frames is set to one in the packet. |
| Counter | Counter on the number of processed measurement values |

Example: The data encoder 1, distance and intensity are transmitted.

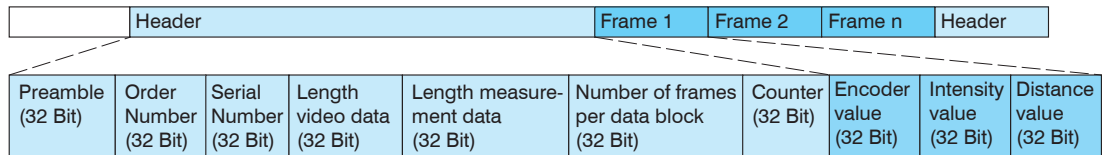


Fig. 84 Example for data transmission with Ethernet

A 3.5.2.2 Measurement Frame

A data packet typically contains one or more measurement data frames.

A measurement data frame comprises one or more signals. The content of a measurement data frame can be set using the `out_eth` command. `getoutinfo_eth` queries the structure of a measurement frame.

| out_eth Parameter | Signal designation | Data type/ range | Scaling | Unit |
|--|--|--|------------------------|------------|
| 01RAW | Raw video signal channel 1 | 512 x uint16_t 0 ... 4095 | - | ADC digits |
| 01DARK | Dark corrected VS channel 1 | 512 x uint16_t 0 ... 4095 | - | |
| 01LIGHT | Light source corrected VS channel 1 | 512 x uint16_t 0 ... 65535 | - | |
| 02RAW | Raw video signal channel 2 | 512 x uint16_t 0 ... 4095 | - | |
| 02DARK | Dark corrected VS channel 2 | 512 x uint16_t 0 ... 4095 | - | |
| 02LIGHT | Light source corrected VS channel 2 | 512 x uint16_t 0 ... 65535 | - | |
| 01SHUTTER | Exposure Time channel 1 | uint32_t 10 ... 100000 | value / 10 | μ s |
| 01ENCODER1 | Encoder 1 channel 1 | uint32_t 0 ... 2^{32-1} | - | Ticks |
| 01ENCODER2 | Encoder 2 channel 1 | uint32_t 0 ... 2^{32-1} | - | Ticks |
| 01INTENSITY | Intensity of peaks on channel 1 | uint32_t 0 ... 1024 | (value&7FF) / 1024*100 | % |
| 01DIST1 01DIST2 01DIST3 01DIST4 01DIST5 01DIST6 | Distances of peak 1 to 6 for channel 1 Error codes, see Chap. A 3.5.2.4 | int32_t INT32_MIN ... INT32_MAX | - | nm |
| 02SHUTTER | Exposure Time channel 2 | uint32_t 10 ... 100000 | value / 10 | μ s |
| 02ENCODER1 | Encoder 1 channel 2 | uint32_t 0 ... 2^{32-1} | - | Ticks |
| 02ENCODER2 | Encoder 2 channel 2 | uint32_t 0 ... 2^{32-1} | - | Ticks |
| 02INTENSITY | Intensity of peaks on channel 2 | uint32_t 0 ... 1024 | (value&7FF) / 1024*100 | % |
| 02DIST1 02DIST2 02DIST3 02DIST4 02DIST5 02DIST6 | Distances of peak 1 to 6 for channel 2 Error codes, see Chap. A 3.5.2.4 | int32_t INT32_MIN ... INT32_MAX | - | nm |
| MEASRATE | Sample rate | uint32_t 1538 ... 100000 | 10*1000 /value | kHz |
| TIMESTAMP | Time Stamp | uint32_t 0 ... 2^{32-1} | value / 1000000 | s |
| COUNTER | Measurement frame counter | uint32_t 0 ... 2^{32-1} | | |

Signals configured and calculated by the COMP module are identical to the distance values regarding the data type and the range of values.

A 3.5.2.3 Example

The following example explains how to output the exposure time, distance 1, distance 2 and the intensity for channel 1 and channel 2.

- Determine two peaks to be evaluated:

```
PEAKCOUNT_CH01 2
```

```
PEAKCOUNT_CH02 2
```

- Set the signals with OUT_ETH:

```
OUT_ETH 01SHUTTER 01DIST1 01DIST2 01INTENSITY 02SHUTTER 02DIST1
02DIST2 02INTENSITY
```

- Query the signal sequence in the measurement frame:

```
GETOUTINFO_ETH 01SHUTTER 01INTENSITY1 01DIST1 01INTENSITY2 01DIST2
02SHUTTER 02INTENSITY1 02DIST1 02INTENSITY2 02DIST2
```

- Start the output:

```
OUTPUT Ethernet
```

A 3.5.2.4 Error Codes Ethernet Interface

Within the distance values, see Chap. A 3.5.2.2, a range from 0x7FFFFFF0 to 0x7FFFFFFF is reserved for error values/codes. The following error codes are defined:

| Error code | Description |
|-------------|--|
| 0x7FFFFFF04 | There is no peak present |
| 0x7FFFFFF05 | Peak is located in front of the measuring range (MR) |
| 0x7FFFFFF06 | Peak is located behind of the measuring range (MR) |
| 0x7FFFFFF07 | Measuring value cannot be calculated |
| 0x7FFFFFF08 | Measuring value is outside the representable area |

A 3.5.3 Ethernet Video Signal Transmission

The video signal transmission is effected to a measurement value server via Ethernet analog to the measurement data transmission, see Chap. A 3.5.2, except, that only one video signal is transmitted in a measurement value block and each video signal must be requested individually.

This measurement value block can vary also over different TCP/IP or UDP/IP packets depending on the size of the video signal.

The preamble for the video signals is 0x41544144 "DATA".

Request a video signal:

Use the commands OUT_ETH and OUT_RS422.

| | |
|-----------------|----------------------------|
| OUTPUT ETHERNET | -> Output via the Ethernet |
|-----------------|----------------------------|

A 3.6 Warning and Error Messages

- E200 I/O operation failed
- E202 Access denied
- E204 Received unsupported character
- E205 Unexpected quotation mark
- E210 Unknown command
- E212 Command not available in current context
- E214 Entered command is too long to be processed
- E230 Unknown parameter
- E231 Empty parameters are not allowed
- E232 Wrong parameter count
- E233 Command has too many parameters
- E234 Wrong or unknown parameter type
- E236 Value is out of range or the format is invalid
- E262 Active signal transfer, please stop before
- E270 No signals selected
- E272 Invalid combination of signal parameters, please check measure mode and signal selection
- E276 Given signal is not selected for output
- E277 One or more values were unavailable. Please check output signal selection
- E281 Not enough memory available
- E282 Unknown output signal
- E283 Output signal is unavailable with the current configuration
- E284 No configuration entry was found for the given signal
- E285 Name is too long
- E286 Names must begin with an alphabetic character, and be 2 to 15 characters long. Permitted characters are: a-zA-Z0-9_
- E320 Wrong info-data of the update
- E321 Update file is too large
- E322 Error during data transmission of the update
- E323 Timeout during the update
- E324 File is not valid for this sensor
- E325 Invalid file type
- E327 Invalid checksum
- E331 Validation of import file failed
- E332 Error during import
- E333 No overwrite during import allowed
- E340 Too many output values for RS422 selected
- E350 The new passwords are not identical
- E351 No password given
- E360 Name already exists or not allowed
- E361 Name begins or ends with spaces or is empty
- E362 Storage region is full
- E363 Setting name not found

- E364 Setting is invalid
 - E500 Material table is empty
 - E502 Material table is full
 - E504 Material name not found
 - E600 ROI begin must be less than ROI end
 - E602 Master value is out of range
 - E603 One or more values were out of range
 - E610 Encoder: minimum is greater than maximum
 - E611 Encoder's start value must be less than the maximum value
 - E615 Synchronization as slave and triggering at level or edge are not possible at the same time
 - E616 Software triggering is not active
 - E618 Sensor head not available
 - E621 The entry already exists
 - E622 The requested dataset/table doesn't exist.
 - E623 Not available in EtherCAT mode
 - E624 Not allowed when EtherCAT SYNC0 synchronization is active
-
- W505 Refractivity correction deactivated, vacuum is used as material
 - W526 Output signal selection modified by the system
 - W528 The shutter time has been changed to match the measurement rate and the system requirements.
 - W530 The IP settings has been changed.

A 4 EtherCAT Documentation


A 4.1 General

EtherCAT® is, from the Ethernet viewpoint, a single, large Ethernet station that transmits and receives Ethernet telegrams. Such an EtherCAT system consists of an EtherCAT master and up to 65,535 EtherCAT slaves.

Master and slaves communicate via standard Ethernet wiring. On-the-fly processing hardware is used in each slave. The incoming Ethernet frames are directly processed by the hardware. Relevant data are extracted from the frame or used based on the frame. The frame is then sent on to the next EtherCAT® slave device. The last slave device sends back the fully processed frame. Various protocols can be used on application level. CANopen over EtherCAT technology (CoE) is supported here. The CANopen protocol uses an object tree with Service Data Objects (SDOs) and Process Data Objects (PDOs) to manage the data. Further information can be obtained from ® Technology Group (www.ethercat.org) or Beckhoff GmbH (www.beckhoff.com).

A 4.2 Switching between Ethernet and EtherCAT

You can switch between Ethernet and EtherCAT via an ASCII command, see Chap. A 3.3.7.5, or EtherCAT object, see Chap. A 4.4.2.21. The switch becomes active only after restarting the controller. Note: Save the current settings before switching to EtherCAT.

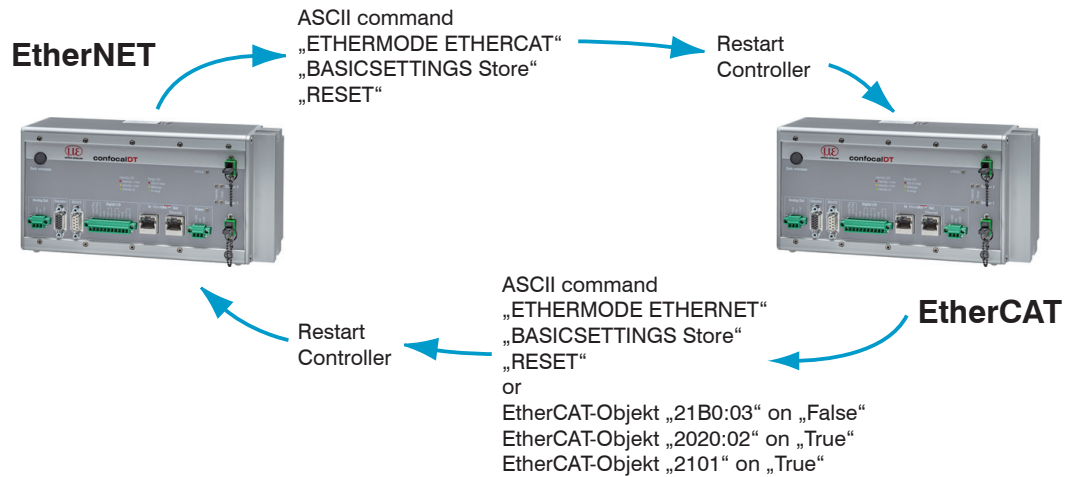

The RS422 interface for sending an ASCII command is available both in Ethernet mode and in EtherCAT mode.

A 4.3 Introduction

A 4.3.1 Structure of EtherCAT® Frames

Data are transferred in Ethernet frames with a special Ether type (0x88A4). Such an EtherCAT® frame consists of one or several EtherCAT® telegrams, each of which is addressed to individual slaves/storage areas. The telegrams are either transmitted directly in the data area of the Ethernet frame or in the data area of the UDP datagram. An EtherCAT® telegram consists of an EtherCAT® header, the data area and the work counter (WC). The work counter is incremented by each addressed EtherCAT® slave that exchanged the corresponding data.

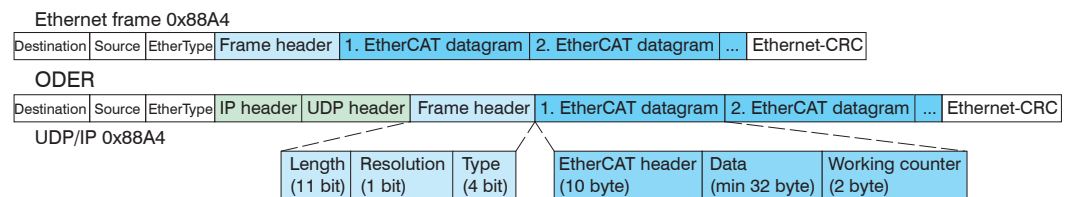


Fig. 86 Design of EtherCAT frames

A 4.3.2 EtherCAT® services

Within EtherCAT®, the services for reading and writing data are specified in the physical memory of the slave hardware. The following EtherCAT® services are supported by the slave hardware:

- APRD (Auto-Increment Physical Read, reading of a physical area with auto-increment addressing)
- APWR (Auto-Increment Physical Write, writing of a physical area with auto-increment addressing)
- APRW (Auto-Increment Physical Read Write, reading and writing of a physical area with auto-increment addressing)
- FPRD (Configured Address Read, reading of a physical area with fixed addressing)
- FPWR (Configured Address Write, writing of a physical area with fixed addressing)
- FPRW (Configured Address Read Write, reading and writing of a physical area with fixed addressing)
- BRD (Broadcast Read, broadcast-reading of a physical area for all slaves)
- BWR (Broadcast Write, broadcast-writing of a physical area for all slaves)
- LRD (Logical Read, reading of a logical storage area)
- LWR (Logical Write, writing of a logical storage area)
- LRW (Logical Read Write, reading and writing of a logical storage area)
- ARMW (Auto-Increment Physical Read Multiple Write, reading of a physical area with auto-increment addressing, multiple writing)
- FRMW (Configured Address Read Multiple Write, reading of a physical area with fixed addressing, multiple writing)

A 4.3.3 Addressing and FMMUs

The master can use a variety of methods to address a slave in the EtherCAT® system. The confocalDT 242x supports as full slave:

- Position addressing
The slave device is addressed via its physical position in the EtherCAT® segment. The services used for this are APRD, APWR, APRW.
- Node addressing
The slave device is addressed via a configured node address, which was assigned by the master during the commissioning phase. The services used for this are FPRD, FPWR and FPRW.
- Logical addressing
The slaves are not addressed individually; instead, a segment of the segment-wide logical 4-GB address is addressed. This segment can be used by a number of slaves. The services used for this are LRD, LWR and LRW.

The local assignment of physical slave memory addresses and logical segment-wide addresses is implemented via the Fieldbus Memory Management Units (FMMUs). The configuration of the slave FMMUs is implemented by the master. The FMMU configuration contains a start address for the physical memory in the slave, a logical start address in the global address space, length and type of the data, as well as the direction (input or output) of the process data.

A 4.3.4 Sync managers

Sync managers support data consistency during the data exchange between EtherCAT® master and slaves. Each sync manager channel defines a specific application memory area. The confocalDT 242x has four channels:

- Sync manager channel 0: Sync manager 0 is used for mailbox write transfers (mailbox from master to slave).
- Sync manager channel 1: Sync manager 1 is used for mailbox read transfers (mailbox from slave to master).
- Sync manager channel 2: Sync Manager 2 is typically used for process output data. Not used in the controller.
- Sync manager channel 3: Sync Manager 3 is typically used for process input data. It contains the Tx PDOs that are specified by the PDO assignment object 0x1C13 (hex.).

A 4.3.5 EtherCAT state machine

The EtherCAT® state machine is part of each EtherCAT® slave. Directly after switching on the confocalDT 242x, the state machine is in the “initialization” state. In this state, the master has access to the DLL information register of the slave hardware. The mailbox is not yet initialized, i.e. communication with the application (controller software) is not yet possible. During the transition to the pre-operational state, the sync manager channels are configured for mailbox communication. In the pre-operational state, communication via the mailbox is possible and the object directory and its objects can be accessed. In this state, no process data communication occurs. During the transition to the safe-operational state, the master configures the process-data mapping, the sync manager channel of the process inputs and the corresponding FMMU. Mailbox communication continues to be supported in the safe-operational state. Process data communication is enabled for the inputs. The outputs are in a “safe” state. In the operational state, process data communication is enabled for inputs and outputs.

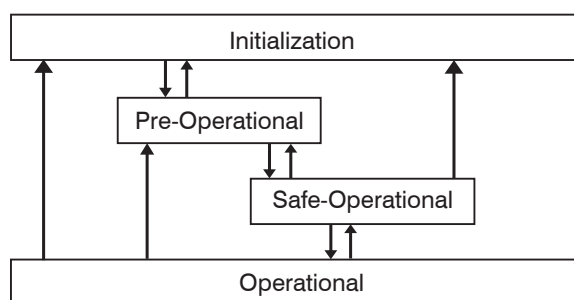


Fig. 87 EtherCAT state machine

A 4.3.6 CANopen over EtherCAT

The application level communication protocol in EtherCAT is based on the communication profile CANopen DS 301. It is called “CANopen over EtherCAT” or CoE. The protocol specifies the object directory in the controller as well as the communication objects for the exchange of process data and acyclic messages. The controller uses the following message types:

- Process Data Object (PDO). The PDO is used for cyclic I/O communication (i. e. for process data).
- Service Data Object (SDO). The SDO is used for acyclic data transfer.

The object directory is described in Chapter “CoE Object Directory”.

A 4.3.7 Process data PDO mapping

Process data objects (PDOs) are used for the exchange of time-critical process data between master and slave. Tx PDOs are used to transfer data from the slave to the master (inputs). Rx PDOs are used to transfer data from the master to the slave (outputs); this concept is not used in the confocalDT 242x. The PDO mapping defines which application objects (measurement data) are transmitted into a PDO.

The confocalDT 242x lets the user choose from a selection of Tx PDO mapping objects, see Chap. A 4.4.1.7.

In EtherCAT the PDOs are transported in sync manager channel objects. The controller uses the sync manager channel SM3 for input data (Tx data). The PDO assignments of the sync manager can only be modified in the pre-operational state.

Note: Sub-index 0h of the object 0x1A00 contains the number of valid entries within the mapping report. This figure also represents the number of application variables (parameters) that should be transmitted/received with corresponding PDO. The sub-indices from 1h up to the number of objects contain information about the depicted application variables. The mapping values in the CANopen objects are coded in hexadecimal form. The following table contains an example of the entry structure for the PDO mapping:

| MSB | | | LSB | | |
|--------------------------------|----|---------------------|-----|---|---|
| 31 | 16 | 15 | 8 | 7 | 0 |
| Index e. g. 0x6000 (16 bit) | | Sub-index e.g. 0x01 | | Object length in bits, e. g. 20h = 32 bits | |

Fig. 88 Sample entry structure for the PDO mapping

A 4.3.8 Service data SDO service

Service Data Objects (SDOs) are primarily used for the transmission of data that are not time-critical, e.g. parameter values.

EtherCAT specifications

- SDO services make possible the read/write access to entries in the CoE object directory of the device.
- SDO information services make it possible to read the object directory itself and to access the properties of the objects.

All parameters of the measuring device can be read or changed in this way, and measurements can be transmitted. A desired parameter is addressed via index and sub-index within the object directory.

A 4.4 CoE object directory

The CoE object directory (CANopen over EtherCAT) contains all configuration data of the controller. The objects in the CoE object directory can be called with the SDO services. Each object is addressed based on a 16-bit index.

A 4.4.1 Communication-specific standard objects

A 4.4.1.1 Overview

| Index (h) | Name | Description |
|---------------------|------------------------------|---|
| 1001 | Device type | Device type |
| 1008 | Device name | Manufacturer's device name |
| 1009 | Hardware version | Hardware version |
| 100A | Software version | Software version |
| 1018 | Identity | Device identification |
| 1A00 ... 1BAB | | TxPDO Mapping, see Chap. A 4.4.1.7 PDO mapping objects may contain merged process data (mappable objects). |
| 1C00 | Sync. manager type | Type of synchronization manager |
| 1C12 | RxPDO assign | |
| 1C13 | TxPDO assign | TxPDO assign |
| 1C33 | Sync manager input parameter | Synchronous mode parameter (DC) |

Fig. 89 Standard objects - Overview

A 4.4.1.2 Object 1001h: Device type

| | | | | | |
|------|-----|-------------|------------|------------|----|
| 1001 | VAR | Device type | 0x00000000 | Unsigned32 | ro |
|------|-----|-------------|------------|------------|----|

Supplies information about the device profile and the device type used.

A 4.4.1.3 Object 1008h: Manufacturer's device name

| | | | | | |
|------|-----|-------------|---------|----------------|----|
| 1008 | VAR | Device name | IFC242x | Visible string | ro |
|------|-----|-------------|---------|----------------|----|

A 4.4.1.4 Object 1009h: Hardware version

| | | | | | |
|------|-----|------------------|----|----------------|----|
| 1009 | VAR | Hardware version | xx | Visible string | ro |
|------|-----|------------------|----|----------------|----|

A 4.4.1.5 Object 100Ah: Software version

| | | | | | |
|------|-----|------------------|---------|----------------|----|
| 100A | VAR | Software version | xxx.xxx | Visible string | ro |
|------|-----|------------------|---------|----------------|----|

A 4.4.1.6 Object 1018h: Device identification

| | | | | | |
|------|--------|----------|--|--|--|
| 1018 | RECORD | Identity | | | |
|------|--------|----------|--|--|--|

Sub-indices

| | | | | | |
|---|-----|-------------------|------------|------------|----|
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | Vendor ID | 0x00000607 | Unsigned32 | ro |
| 2 | VAR | Product code | 0x0024E555 | Unsigned32 | ro |
| 3 | VAR | Revision | 0x00010000 | Unsigned32 | ro |
| 4 | VAR | Serial number | 0x009A4435 | Unsigned32 | ro |

The article number is defined in the `product code`; the serial number of the controller is defined in the `serial number`.

A 4.4.1.7 TxPDO Mapping

| | | | | | | |
|------|----------------------------|--------------------------|--------------------------|--------------------------|--|--|
| 1A00 | Ch01Dist1 TxPDOMap | | | | | |
| | CH01DIST1 0x6000 | | | | | |
| 1A08 | Ch02Dist1 TxPDOMap | | | | | |
| | CH02DIST1 0x6800 | | | | | |
| 1A10 | Ch01Dist2 TxPDOMap | | | | | |
| | CH01DIST2 0x6001 | | | | | |
| 1A18 | Ch02Dist2 TxPDOMap | | | | | |
| | CH02DIST2 0x6801 | | | | | |
| 1A20 | Ch01Dist3to6 TxPDOMap | | | | | |
| | CH01DIST3 0x6002 | CH01DIST4 0x6003 | CH01DIST5 0x6004 | CH01DIST6 0x6005 | | |
| 1A28 | Ch02Dist2 TxPDOMap | | | | | |
| | CH02DIST2 0x6802 | CH02DIST4 0x6803 | CH02DIST5 0x6804 | CH02DIST6 0x6805 | | |
| 1A30 | Ch01Intensity1 TxPDOMap | | | | | |
| | CH01INTENSITY1 0x6010 | | | | | |
| 1A38 | Ch02Intensity1 TxPDOMap | | | | | |
| | CH02INTENSITY1 0x6810 | | | | | |
| 1A40 | Ch01Intensity2 TxPDOMap | | | | | |
| | CH01INTENSITY2 0x6011 | | | | | |
| 1A48 | Ch02Intensity2 TxPDOMap | | | | | |
| | CH02INTENSITY2 0x6811 | | | | | |
| 1A50 | Ch01Intensity3to6 TxPDOMap | | | | | |
| | CH01INTENSITY3 0x6012 | CH01INTENSITY4 0x6013 | CH01INTENSITY5 0x6014 | CH01INTENSITY6 0x6015 | | |
| 1A58 | Ch02Intensity3to6 TxPDOMap | | | | | |
| | CH02INTENSITY3 0x6812 | CH02INTENSITY4 0x6813 | CH02INTENSITY5 0x6814 | CH02INTENSITY6 0x6815 | | |
| 1A60 | Ch01Unlin1and2 | | | | | |
| | CH01UNLIN1 0x6020 | CH01UNLIN2 0x6021 | | | | |
| 1A68 | Ch02Unlin1and2 | | | | | |
| | CH02UNLIN1 0x6820 | CH02UNLIN2 0x6821 | | | | |
| 1A70 | Ch01Unlin3to6 TxPDOMap | | | | | |
| | CH01UNLIN3 0x6022 | CH01UNLIN4 0x6023 | CH01UNLIN5 0x6024 | CH01UNLIN6 0x6025 | | |
| 1A78 | Ch02Unlin3to6 TxPDOMap | | | | | |
| | CH02UNLIN3 0x6822 | CH02UNLIN4 0x6823 | CH02UNLIN5 0x6824 | CH02UNLIN6 0x6825 | | |
| 1A80 | Ch01States TxPDOMap | | | | | |
| | CH01SHUTTER 0x6030 | CH01ENCODER1 0x6050 | CH01ENCODER2 0x6051 | | | |
| 1A88 | Ch02States TxPDOMap | | | | | |
| | CH02SHUTTER 0x6830 | CH02ENCODER1 0x6850 | CH02ENCODER2 0x6851 | | | |
| 1AE0 | Counter TxPDOMap | | | | | |
| | COUNTER 0x7000 | | | | | |

| | | | | | | |
|------|----------------------------|----------------------------|----------------------------|----------------------------|--|--|
| 1AE8 | States TxPDOMap | | | | | |
| | TIMESTAMP 0x7001 | | | | | |
| 1AF0 | Frequency TxPDOMap | | | | | |
| | FREQUENCY 0x7002 | | | | | |
| 1B00 | UserCalc01 TxPDOMap | | | | | |
| | UserCalcOutput01 0x7C00 | | | | | |
| 1B08 | UserCalc02 TxPDOMap | | | | | |
| | UserCalcOutput02 0x7C01 | | | | | |
| 1B10 | UserCalc03 TxPDOMap | | | | | |
| | UserCalcOutput03 0x7C02 | | | | | |
| 1B18 | UserCalc04 TxPDOMap | | | | | |
| | UserCalcOutput04 0x7C03 | | | | | |
| 1B20 | UserCalc05and06 TxPDOMap | | | | | |
| | UserCalcOutput05 0x7C04 | UserCalcOutput06 0x7C05 | | | | |
| ... | ... | | | | | |
| | ... | ... | | | | |
| 1B58 | UserCalc19and20 TxPDOMap | | | | | |
| | UserCalcOutput19 0x7C12 | UserCalcOutput20 0x7C13 | | | | |
| 1B60 | UserCalc21to24 TxPDOMap | | | | | |
| | UserCalcOutput21 0x7C14 | UserCalcOutput22 0x7C15 | UserCalcOutput23 0x7C16 | UserCalcOutput24 0x7C17 | | |
| ... | ... | | | | | |
| | ... | ... | ... | ... | | |
| 1BA8 | UserCalc57to60 TxPDOMap | | | | | |
| | UserCalcOutput57 0x7C38 | UserCalcOutput58 0x7C39 | UserCalcOutput59 0x7C3A | UserCalcOutput60 0x7C3B | | |

Fig. 90 PDO mapping objects

In object 0x1C13 is selected which PDOs are transferred. The PDO mapping objects are selected. The selection process takes place before switching from PreOP to SafeOP mode.

Example 1: Startup procedure to output distance 1 from channel 1 (01DIST1):

- Distance 1 is expressed in 0x6000. In order to transfer 0x6000 in the PDO, the PDO mapping object 0x1A00 must be selected in 0x1C13.

| Object | Value | Description |
|-----------|---------------|------------------------------|
| 0x1C13:00 | 0x00 (0) | clear sm pdos (0x1C13) |
| 0x1C13:01 | 0x1A00 (6656) | download pdo 0x1C13:01 index |
| 0x1C13:00 | 0x01 (1) | download pdo 0x1C13 count |

Example 2: Startup procedure to output distance 1, intensity 1, shutter speed, encoder 1 and encoder 2 from channel 1 (01DIST1, 01INTENSITY1, 01SHUTTER, 01ENCODER1, 01ENCODER2).

- Distance 1 is expressed in 0x6000. In order to transfer 0x6000 in the PDO, the PDO mapping object 0x1A00 must be selected in 0x1C13.
- Intensity 1 is expressed in 0x6010. In order to transfer 0x6010 in the PDO, the PDO mapping object 0x1A30 must be selected in 0x1C13.
- The shutter speed is expressed in 0x6010, encoder 1 in 0x6050 and encoder 2 in 0x6051. The four process data are merged in 0x1A70 and must be selected in 0x1C13 for transfer in the PDO.

| Object | Value | Description |
|-----------|---------------|------------------------------|
| 0x1C13:00 | 0x00 (0) | clear sm pdos (0x1C13) |
| 0x1C13:01 | 0x1A00 (6656) | download pdo 0x1C13:01 index |
| 0x1C13:02 | 0x1A30 (6704) | download pdo 0x1C13:02 index |
| 0x1C13:03 | 0x1A70 (6768) | download pdo 0x1C13:03 index |
| 0x1C13:00 | 0x03 (3) | download pdo 0x1C13 count |

A 4.4.1.8 Object 1C00h: Type of synchronization manager

| | | | | | |
|-------------|--------|-------------------|------|-----------|----|
| 1C00 | RECORD | Sync manager type | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | Sync manager 1 | 0x01 | Unsigned8 | ro |
| 2 | VAR | Sync manager 2 | 0x02 | Unsigned8 | ro |
| 3 | VAR | Sync manager 3 | 0x03 | Unsigned8 | ro |
| 4 | VAR | Sync manager 4 | 0x04 | Unsigned8 | ro |

A 4.4.1.9 Object 1C12h: RxPDO Assign

| | | | | | |
|-------------|-------|-------------------|---|-----------|----|
| 1C12 | ARRAY | RxPDO Assign | | | rw |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 0 | Unsigned8 | ro |

No RxPDOs can be selected because none are present. The object is implemented as a dummy to enable the EtherCAT master to set the RxPDOs to 0.

A 4.4.1.10 Object 1C13h: TxPDO Assign

| | | | | | |
|-------------|-------|-------------------|--------|------------|----|
| 1C13 | ARRAY | TxPDO Assign | | | rw |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | n | Unsigned8 | rw |
| 1 | VAR | Sub-index 001 | 0x1A00 | Unsigned16 | rw |
| 2 | VAR | Sub-index 002 | | Unsigned16 | rw |
| .. | | | | | |
| n | VAR | Sub-index n | - | Unsigned16 | rw |

Object for selecting the PDOs (TxPDO maps), see Chap. [A 4.4.1.7](#).

A 4.4.1.11 Object 1C33h: Synchronization manager input parameters

| | | | | | |
|-------------|--------|---------------------------------|---------|------------|----|
| 1C33 | RECORD | SM input parameter | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 9 | Unsigned8 | ro |
| 1 | VAR | Synchronization type | x | Unsigned16 | ro |
| 2 | VAR | Cycle time | x | Unsigned32 | ro |
| 4 | VAR | Supported synchronization types | 0x4005 | Unsigned16 | ro |
| 5 | VAR | Minimum cycle time | 1000000 | Unsigned32 | ro |
| 6 | VAR | Calc and copy time | x | Unsigned32 | ro |
| 8 | VAR | Get cycle time | x | Unsigned16 | rw |
| 9 | VAR | Delay time | | Unsigned32 | ro |

- Synchronization Type: currently specified synchronization
 - 0: Freerun,
 - 2: Distributed clock Sync0 synchronization, see Chap. [A 4.9.2](#)
- Cycle Time: currently specified cycle time in ns
 - Free run, the cycle time derived from the measuring rate,
 - Sync0 synchronization, the Sync0 cycle time set by the master.

The minimum cycle time is derived from the maximum measuring rate and equals 153.846 μ s.

- Supported synchronization types: Free run and Sync0 synchronization are supported
- Calc and Copy Time, Get Cycle Time: If “Get Cycle Time” is set to 1, the Calc and Copy time is measured and displayed in the entry of the same name (only for Sync0 synchronization)
- Delay time: SYNC0 pulse triggers the sampling; therefore this value is always 0.

A 4.4.2 Manufacturer-specific objects

A 4.4.2.1 Overview

| Index (h) | Name | IFC2421 | IFC2422 | Description |
|-----------|--------------------------|---------|---------|---|
| 2001 | User level | • | • | Login, logout, change password |
| 2005 | Controller information | • | • | Controller info (continued) |
| 2011 | Correction ch 1 | • | • | Dark correction |
| 3011 | Correction ch 2 | | • | |
| 2020 | Basic settings | • | • | Load, save, factory settings |
| 2021 | Preset | • | • | |
| 2022 | Meas. settings | • | • | Measurement setting |
| 203F | Sensor error | • | • | Sensor error for channel 1/2 |
| 2101 | Reset | • | • | Restart controller |
| 2105 | Factory reset | • | • | Reset to factory settings |
| 2107 | Counter reset | • | • | Reset counter |
| 2133 | LED on/off ch 1 | • | • | LED light source channel 1/2 |
| 3133 | LED on/off ch 2 | | • | |
| 2141 | Video signal | • | • | Request video signal |
| 2142 | Video signal enable ch 1 | • | • | Share video signal |
| 3142 | Video signal enable ch 2 | | • | |
| 2150 | Sensor ch 1 | • | • | Sensor information for channel 1/2 |
| 3150 | Sensor ch 2 | | • | |
| 2152 | Select sensor ch 1 | • | • | Select sensor for channel 1/2 |
| 3152 | Select sensor ch 2 | | • | |
| 2156 | Multilayer options ch 1 | • | • | Multilayer options for channel 1/2 |
| 3156 | Multilayer options ch 2 | | • | |
| 2161 | Peak position ch 1 | • | • | Peak selection for channel 1/2 |
| 3161 | Peak position ch 2 | | • | |
| 2162 | Peak options ch 1 | • | • | Peak options for channel 1/2 |
| 3162 | Peak options ch 2 | | • | |
| 2183 | Spike correction ch 1 | • | • | Spike correction for channel 1/2 |
| 3183 | Spike correction ch 2 | | • | |
| 21B0 | Digital interfaces | • | • | Digital interfaces |
| 21B1 | Enable output | • | • | Select interface |
| 21C0 | Ethernet | • | • | Ethernet, IP configuration |
| 21D0 | Analog output | • | • | Analog output, scaling |
| 21F3 | Switching output 1 | • | • | Switching output 1/2 |
| 21F4 | Switching output 2 | | • | |
| 2250 | Shutter mode ch 1 | • | • | Exposure mode for channel 1/2 |
| 3250 | Shutter mode ch 2 | | • | |
| 2251 | Measuring rate | • | • | Measuring rate |
| 24A0 | Keylock | • | • | Locks the multi-function button on the controller |
| 24A2 | Keyfunc | • | • | Functionality of the multi-function button |
| 25A0 | Encoder | • | • | |
| 2711 | Range of interest ch 1 | • | • | Masks the evaluation range for channel 1/2 |
| 3711 | Range of interest ch 2 | | • | |
| 2800 | Material info and edit | • | • | Material information |
| 2802 | Material table edit | • | • | Edit material table |
| 2803 | Material table | • | • | Existing materials in the material table |
| 2804 | Material selection ch 1 | • | • | Select material for channel 1/2 |
| 3804 | Material selection ch 2 | | • | |

| Index (h) | Name | IFC2421 | IFC2422 | Description |
|-----------|-------------|---------|---------|--|
| 2A00-2A09 | Master y | • | • | Master value, mastering |
| 2A10-2A09 | Statistic y | • | • | Statistics |
| 2C00-2C09 | Comp y ch 1 | • | • | Measured value calculation for channel 1/2 |
| 3C00-3C09 | Comp y ch 2 | | • | |
| 2CBF | Sys Signals | • | • | |
| 2CC0-2CC9 | Comp y sys | • | • | |
| 2E00 | User calc | • | • | |

i Invalid entries when reading and writing manufacturer-specific objects can result in errors. These errors are described in the SDO abort codes, see Chap. [A 4.6](#). If an error occurs while writing a value, you may be able to retrieve error details in object 203F.

A 4.4.2.2 Object 2001h: User level

| | | | | | |
|-------------|--------|-------------------|-------|----------------|----|
| 2001 | RECORD | User level | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 7 | Unsigned8 | ro |
| 1 | VAR | Actual user | x | Unsigned8 | ro |
| 2 | VAR | Login | | Visible string | wo |
| 3 | VAR | Logout | FALSE | BOOL | rw |
| 4 | VAR | Default user | x | Unsigned8 | rw |
| 5 | VAR | Old password | | Visible string | wo |
| 6 | VAR | New password | | Visible string | wo |
| 7 | VAR | Repeat password | | Visible string | wo |

For more information, please refer to the Login section, see Chap. 6.6.4, and the User Level section, see Chap. A 3.3.2.1.

Actual user, Default user:

- 0 - Operator
- 1 - Expert

Modifying the user level will change the access rights for objects. Once you `log out`, RW objects change to read-only (= ro), and write-only objects (= wo) are no longer available.

To change the password, you need to complete the three passwords fields (Old, New and Repeat) in this particular order. The maximum password length is 31 characters.

A 4.4.2.3 Object 2005h: Controller info (continued)

| | | | | | |
|-------------|--------|-------------------|---------|----------------|----|
| 2005 | RECORD | Controller Info | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 8 | Unsigned8 | ro |
| 1 | VAR | Name | IFC242x | Visible string | ro |
| 5 | VAR | Serial No | xxxxxxx | Visible string | ro |
| 6 | VAR | Option no | xxx | Visible string | ro |
| 8 | VAR | Article no | xxxxxxx | Visible string | ro |

For more information, please refer to the Controller Information section, see Chap. A 3.3.1.2.

A 4.4.2.4 Object 2011h: Correction, channel 1

| | | | | | |
|-------------|--------|----------------------|-------|------------|----|
| 2010 | RECORD | Correction channel 1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | Dark correction | FALSE | BOOL | wo |
| 3 | VAR | Correction state | x | Unsigned32 | ro |

Setting 1 (True) to sub-index 1 triggers a dark correction. Sub-index 3 displays the state of the correction; valid values include:

- 0: no correction active
- 1: correction active
- 100: error during the correction process

Once correction has been initiated, the status changes from 0 to 1. If no error occurs, the status changes back to 0 when correction is completed. No settings may be changed while a correction is active.

For more information, please refer to the Dark Referencing section, see Chap. 5.5, and the Dark Correction section, see Chap. A 3.3.4.4.

A 4.4.2.5 Object 2020h: Load, save, factory settings

| | | | | | |
|------|--------|----------------|--|--|----|
| 2020 | RECORD | Basic settings | | | ro |
|------|--------|----------------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|-------------------|---|-----------|----|
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | READ | | BOOL | wo |
| 2 | VAR | STORE | | BOOL | wo |
| 3 | VAR | SETDEFAULT | | BOOL | wo |

- READ: Loads the last saved basic settings
- STORE: Stores the current settings
- SETDEFAULT: Resets the basic settings to factory defaults

A 4.4.2.6 Object 2021h: Preset

| | | | | | |
|------|--------|--------|--|--|----|
| 2021 | RECORD | Preset | | | ro |
|------|--------|--------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|-------------------|---|---------------|----|
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | Mode | x | Unsigned8 | rw |
| 2 | VAR | List | | Visual string | ro |
| 3 | VAR | Named read | | Visual string | wo |

Mode:

- 0 – STATIC
- 1 – BALANCED
- 2 – DYNAMIC

For more information, please refer to the Measurement Settings section, see Chap. [A 4.4.2.7](#).

A 4.4.2.7 Object 2022h: Measurement settings

| | | | | | |
|------|--------|----------------|--|--|----|
| 2022 | RECORD | Meas. settings | | | ro |
|------|--------|----------------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|------------------------|---|---------------|----|
| 0 | VAR | Number of entries | 7 | Unsigned8 | |
| 1 | VAR | Current | | Visual string | ro |
| 2 | VAR | Named read | | Visual string | wo |
| 3 | VAR | Named store | | Visual string | wo |
| 4 | VAR | Named delete | | Visual string | wo |
| 5 | VAR | Initial meas. settings | | Visual string | rw |
| 6 | VAR | List | | Visual string | ro |
| 7 | VAR | Set default | | BOOL | wo |

- Current: Current measurement settings (MEASSETTINGS CURRENT)
- Named read: Loads a measurement setting from the `list`/sub-index 6 (MEASSETTINGS READ)
- Named store: Stores the current measurement setting. You can assign a name or number (MEASSETTINGS STORE)
- Named delete: Deletes a measurement setting from the `list`/sub-index 6 (MEASSETTINGS DELETE)
- Initial meas. settings: Measurement setting that is initially loaded during a controller reset (MEASSETTINGS INITIAL)
- List: List with stored measurement settings (MEASSETTINGS LIST)
- Set default: Corresponds to the SETDEFAULT MEASSETTINGS command

For more information, please refer to the Measurement Settings section, see Chap. [A 3.3.8.6](#).

A 4.4.2.8 Object 203Fh: Sensor error

| | | | | | |
|-------------|--------|--------------------------|---|----------------|----|
| 203F | RECORD | Sensor error | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Sensor error number | x | Unsigned16 | ro |
| 2 | VAR | Sensor error description | x | Visible string | ro |

For more information, please refer to the Error Messages section.

- Sensor error number: Outputs the sensor error during communication
- Sensor error description: Sensor error as plain text

A 4.4.2.9 Object 2101h: Reset

| | | | | | |
|------|-----|-------|-------|------|----|
| 2101 | VAR | Reset | FALSE | BOOL | rw |
|------|-----|-------|-------|------|----|

Restarts the controller.

A 4.4.2.10 Object 2105h: Factory settings

| | | | | | |
|------|-----|---------------|--|------|----|
| 2105 | VAR | Factory reset | | BOOL | wo |
|------|-----|---------------|--|------|----|

Reset to factory defaults. Corresponds to the SETDEFAULT ALL command.

A 4.4.2.11 Object 2107h: Reset counter

| | | | | | |
|-------------|--------|-------------------|---|-----------|----|
| 2107 | RECORD | Counter reset | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Reset timestamp | | BOOL | wo |
| 2 | VAR | Reset counter | | BOOL | wo |

Setting sub-index 1 to 1 will reset the time stamp (0x7001). Setting sub-index 2 to 1 will reset the measured value counter (0x7000).

A 4.4.2.12 Object 2133h: LED light source channel 1

| | | | | | |
|------|-----|----------------|--|------|----|
| 2133 | VAR | LED on/off ch1 | | BOOL | rw |
|------|-----|----------------|--|------|----|

Allows you to turn on or off the LED light source. Corresponds to the LED command. Object 3133h includes the LED light source for channel 2.

A 4.4.2.13 Object 2141h: Request video signal

| | | | | | |
|-------------|--------|-------------------|---|-----------|----|
| 2141 | RECORD | Video signal | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 1 | Unsigned8 | ro |
| 2 | VAR | New frame request | | BOOL | wo |

If the video signal output is enabled (either for channel 1 (0x2142:1) and/or channel 2 (0x3142:1)), this entry can be used to trigger a new image.

A 4.4.2.14 Object 2142h: Share video signal

| | | | | | |
|-------------|--------|------------------------------|---|-----------|----|
| 2142 | RECORD | Video signal enable ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 1 | Unsigned8 | ro |
| 1 | VAR | Enable dark corrected signal | | BOOL | rw |

Allows to output the video signal for channel 1 in object 0x8000h. Object 3142h includes the video signal enable mechanism for channel 2.

A 4.4.2.15 Object 2150h: Sensor channel 1

| | | | | | |
|-------------|--------|-------------------|------------|----------------|----|
| 2150 | RECORD | Sensor ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | Sensor info | IFS242x-xx | Visible string | ro |
| 2 | VAR | Sensor range | xx.xxxxxx | FLOAT32 | ro |
| 3 | VAR | Sensor serial no. | xxxxxxx | Visible string | ro |

For more information, please refer to the Sensor section, see Chap. [A 3.3.4](#). Object 3150h includes the sensor information for channel 2.

A 4.4.2.16 Object 2152h: Sensor selection channel 1

| | | | | | |
|-------------|--------|-------------------|---|-----------|----|
| 2152 | RECORD | Select sensor ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 1 | Unsigned8 | ro |
| 1 | VAR | Number of sensor | x | Unsigned8 | rw |

For more information, please refer to the Selecting a Sensor section, see Chap. [A 3.3.4](#) and Sensor Number section, see Chap. [A 3.3.4.2](#). Object 3152h includes the sensor selection information for channel 2.

A 4.4.2.17 Object 2156h: Multilayer options for channel 1

| | | | | | |
|-------------|--------|---------------------------------|-------|-----------|----|
| 2156 | RECORD | Multilayer options ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Peak count | | Unsigned8 | rw |
| 2 | VAR | Disable refractivity correction | FALSE | BOOL | rw |

Includes the options for thickness and multilayer measurements. Sub-index 1 corresponds to the PEAKCOUNT(_CH0x) command. Sub-index 2 corresponds to the REFRACTCORR(_CH0x) command. Object 3156h includes the multilayer options for channel 2.

Disable refractivity correction: Disables the refractive index correction

A 4.4.2.18 Object 2161h: Peak selection for channel 1

| | | | | | |
|------|-----|---------------|---|-----------|----|
| 2161 | VAR | Peak position | 0 | Unsigned8 | rw |
|------|-----|---------------|---|-----------|----|

Use this command to define the peaks that are evaluated in the distance/thickness measurement mode.

Standard: first peak / first and second peak

In order to receive transparent measuring results, the standard setting should only be changed where absolutely required.

| Position for distance measurement | | Position for thickness measurement | |
|-----------------------------------|--------------|------------------------------------|---------------------------------|
| 0 | first peak | 0 | first and last peak |
| 1 | last peak | 1 | second-last and last peak |
| 2 | first peak | 2 | first and second peak |
| 3 | highest peak | 3 | highest and second-highest peak |

Object 3161h includes the peak selection for channel 2.

A 4.4.2.19 Object 2162h: Peak options for channel 1

| | | | | | |
|-------------|--------|-------------------|---|-----------|----|
| 2162 | RECORD | Peak options ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Min threshold | | FLOAT32 | rw |
| 2 | VAR | Peak modulation | | FLOAT32 | rw |

Min threshold: Peak detection threshold, corresponds to the `MIN_THRESHOLD(_CH0x)` command.

Object 3162h includes the peak options for channel 2.

A 4.4.2.20 Object 2183h: Spike correction for channel 1

| | | | | | |
|-------------|--------|----------------------|---|------------|----|
| 2183 | RECORD | Spike correction ch1 | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | Enable | | BOOL | rw |
| 2 | VAR | Evaluation length | | Unsigned32 | rw |
| 3 | VAR | Range | | FLOAT32 | rw |
| 4 | VAR | Count | | Unsigned32 | rw |

For more information, please refer to the `SPIKECORR(_CH0x)` command, see Chap. [A 3.3.11.1](#). When this function is activated via sub-index 1, the default values are specified for sub-indices 2 to 4.

Object 3183h includes the spike correction for channel 2.

A 4.4.2.21 Object 21B0h: Digital interfaces

| | | | | | |
|-------------|--------|--------------------|---|------------|----|
| 21B0 | RECORD | Digital interfaces | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 2 | VAR | RS422 baud rate | x | Unsigned32 | rw |
| 3 | VAR | Ethermode | | Unsigned8 | rw |

Sub-index 2 corresponds to the `BAUDRATE` command. You can only select from the predefined baud rates. Sub-index 3 corresponds to the `ETHERMODE` command.

RS422 baud rate: 9600, 115200, 230400, 460800, 691200, 921600, 1500000, 2000000, 3500000, 4000000

EtherCAT Ethernet: (Change of interface)

0 - Ethernet (effective only after restart; first use `Basicsettings store`)

1 - EtherCAT

A 4.4.2.22 Object 21B1h: Select interface

| | | | | | |
|-------------|--------|-------------------|---|-----------|----|
| 21B1 | RECORD | Enable output | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | RS422 | x | BOOL | rw |
| 3 | VAR | Analog out | | BOOL | rw |
| 4 | VAR | Switching outputs | | BOOL | rw |

Corresponds to the `OUTPUT` command. Parallel output of measured values via the respective interface can be switched on and off.

A 4.4.2.23 Object 21C0h: Ethernet**Object 21C0h: Ethernet**

| | | | | | |
|------|--------|----------|--|--|----|
| 21C0 | RECORD | Ethernet | | | ro |
|------|--------|----------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|-------------------|-----------------|----------------|----|
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | IP address | xxx.xxx.xxx.xxx | Visible string | rw |
| 2 | VAR | Subnet mask | xxx.xxx.xxx.xxx | Visible string | rw |
| 3 | VAR | Gateway | xxx.xxx.xxx.xxx | Visible string | rw |
| 4 | VAR | DHCP | FALSE | BOOL | rw |

For more information, please refer to the Ethernet IP Settings section, see Chap. [A 3.3.7.1](#).

DHCP:

- 0 - Static IP address
- 1 - DHCP

A 4.4.2.24 Object 21D0h: Analog output

| | | | | | |
|------|--------|---------------|--|--|----|
| 21D0 | RECORD | Analog output | | | ro |
|------|--------|---------------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|-------------------------|-----|----------------|----|
| 0 | VAR | Number of entries | 6 | Unsigned8 | ro |
| 1 | VAR | Analog output | x | Unsigned8 | rw |
| 2 | VAR | Signal | x | Visible string | rw |
| 3 | VAR | Available signals | | Visible string | ro |
| 4 | VAR | Type of scaling | x | Unsigned8 | rw |
| 5 | VAR | Two-point-scaling start | x.x | FLOAT32 | rw |
| 6 | VAR | Two-point-scaling end | x.x | FLOAT32 | rw |

For more information, please refer to the Analog Output section, see Chap. [A 3.3.15](#).

Analog output:

- 0 - voltage 0 ... 5 V
- 1 - voltage 0 ... 10 V
- 7 - current 4 ... 20 mA

Signal: Data can only be selected in accordance with the selected measuring program. For distance measurements, only distance 1 can be selected.

You can, for example, select 01DIST1. `Available signals` lists the available signals.

Type of scaling:

- 0 - default scaling
- 1 - two-point scaling

A 4.4.2.25 Object 21F3h: Switching output 1

| | | | | | |
|-------------|--------|-------------------|---|----------------|----|
| 21F3 | RECORD | Analog output | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 7 | Unsigned8 | ro |
| 1 | VAR | Output level | | Unsigned8 | rw |
| 2 | VAR | Error out | | Unsigned8 | rw |
| 3 | VAR | Limit signal | | Visible string | rw |
| 4 | VAR | Available signals | | Visible string | ro |
| 5 | VAR | Lower limit value | | FLOAT32 | rw |
| 6 | VAR | Upper limit value | | FLOAT32 | rw |
| 7 | VAR | Compare to | | Unsigned8 | rw |

For more information, please refer to the Switching Output section, see Chap. [A 3.3.14](#).

Output level:

- 0 - PNP
- 1 - NPN
- 2 - Push-pull
- 3 - Push-pull negated

Error out:

- 1 - 01ER1
- 2 - 01ER2
- 3 - 01ER12
- 4 - 02ER1
- 5 - 02ER2
- 6 - 02ER12
- 7 - 0102ER12
- 8 - ERRORLIMIT

Use `Limit signal` to select a measured value signal that will be used for the comparison.

`Available signals` contains a list of the available signals.

Compare to:

- 1 - Lower
- 2 - Upper
- 3 - Both

Object 21F4h includes the settings for switching output 2.

A 4.4.2.26 Object 2250h: Exposure mode for channel 1

| | | | | | |
|------|--------|------------------|--|--|--|
| 2250 | RECORD | Shutter mode ch1 | | | |
|------|--------|------------------|--|--|--|

Sub-indices

| | | | | | |
|---|-----|-------------------|------|-----------|----|
| 0 | VAR | Number of entries | 3 | Unsigned8 | ro |
| 1 | VAR | Shutter mode | x | Unsigned8 | rw |
| 3 | VAR | Shutter time 1 | x.xx | FLOAT32 | rw |
| 4 | VAR | Shutter time 2 | x.xx | FLOAT32 | rw |

For more information, please refer to the Exposure Mode section, see Chap. 6.2.5, the Exposure Mode section, see Chap. A 3.3.9.4, and the Exposure Time section, see Chap. A 3.3.9.6.

Shutter mode:

- 1 - Measuring mode
- 2 - Manual mode
- 3 - Two-time mode alternating
- 4 - Two-time mode automatic

Object 3250h includes the exposure settings for channel 2.

A 4.4.2.27 Object 2251h: Measuring rate

| | | | | | |
|------|--------|----------------|--|---------|----|
| 2251 | RECORD | Measuring rate | | FLOAT32 | rw |
|------|--------|----------------|--|---------|----|

For more information, please refer to the Measuring rate section, see Chap. A 3.3.9.5.

A 4.4.2.28 Object 24A0h: Keylock

| | | | | | |
|------|--------|---------|--|--|----|
| 24A0 | RECORD | Keylock | | | ro |
|------|--------|---------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|-------------------|---|------------|----|
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Mode | 0 | Unsigned8 | rw |
| 2 | VAR | Delay | 0 | Unsigned16 | rw |

For more information, please refer to the Keylock section, see Chap. A 3.3.16.3.

Mode:

- 0 - Inactive
- 1 - Active
- 2 - Automatic mode / Active after delay

A 4.4.2.29 Object 24A2h: Multi-function button

| | | | | | |
|------|--------|---------|--|--|----|
| 24A2 | RECORD | Keyfunc | | | ro |
|------|--------|---------|--|--|----|

Sub-indices

| | | | | | |
|---|-----|---------------------------|---|----------------|----|
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | Function 1 | 0 | Unsigned8 | rw |
| 2 | VAR | Function 2 | 0 | Unsigned8 | rw |
| 3 | VAR | Signals for key mastering | | Visible string | rw |
| 4 | VAR | Available signals | | Visible string | ro |

Function 1 and 2:

- 0 - Key has no function
- 1 - Triggers dark correction
- 2 - Mastering
- 3 - Turns the light source on/off

Sub-index 2 in the KEYFUNC command corresponds to the “signal”. When mastering via the (Function == 2) button, this entry specifies which signal is to be used for mastering.

A 4.4.2.30 Object 25A0h: Encoder

| | | | | | |
|-------------|--------|----------------------------|-------|------------|----|
| 25A0 | RECORD | Encoder | | | ro |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 10 | Unsigned8 | ro |
| 1 | VAR | Encoder 1 reference signal | x | Unsigned8 | rw |
| 2 | VAR | Encoder 1 interpolation | x | Unsigned8 | rw |
| 3 | VAR | Encoder 1 initial value | x | Unsigned32 | rw |
| 4 | VAR | Encoder 1 maximum value | x | Unsigned32 | rw |
| 5 | VAR | Encoder 1 set value | FALSE | BOOL | wo |
| 6 | VAR | Encoder 2 reference signal | x | Unsigned8 | rw |
| 7 | VAR | Encoder 2 interpolation | x | Unsigned8 | rw |
| 8 | VAR | Encoder 2 initial value | x | Unsigned32 | rw |
| 9 | VAR | Encoder 2 maximum value | x | Unsigned32 | rw |
| 10 | VAR | Encoder 2 set value | FALSE | BOOL | wo |

For more information, please refer to the Encoder Inputs section, see Chap. 6.1.2 and the Encoders section, see Chap. A 3.3.6.

Encoder reference signal:

- 0 - None, the encoder's reference marker has no effect
- 1 - One, specified once
- 3 - Ever, specified for all markers

Encoder interpolation:

- 1 - Single interpolation
- 2 - Dual interpolation
- 3 - Quadruple interpolation

Encoder initial value:

0 ... $2^{32}-1$

Encoder maximum value:

0 ... $2^{32}-1$

A 4.4.2.31 Object 2711h: Masking the evaluation range for channel 1

| | | | | | |
|-------------|--------|-------------------------|---|------------|----|
| 2711 | RECORD | Range of interest ch1 | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Range of interest start | x | Unsigned16 | rw |
| 2 | VAR | Range of interest end | x | Unsigned16 | rw |

For more information, please refer to the section on masking the evaluation range, see Chap. 6.2.4, see Chap. A 3.3.9.7.

Object 3711h includes the evaluation range for channel 2.

A 4.4.2.32 Object 2800h: Material information

| | | | | | |
|-------------|--------|----------------------------|--------|----------------|----|
| 2800 | RECORD | Material info and edit | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 7 | Unsigned8 | ro |
| 1 | VAR | Material name | xxxxx | Visible string | rw |
| 2 | VAR | Material description | xxxxxx | Visible string | rw |
| 3 | VAR | Type of refraction numbers | xx | Uint8 | rw |
| 4 | VAR | nd | x.xxxx | FLOAT32 | rw |
| 5 | VAR | nF | x.xxxx | FLOAT32 | rw |
| 6 | VAR | nC | x.xxxx | FLOAT32 | rw |
| 7 | VAR | Abbe number | x.xxxx | FLOAT32 | rw |

For more information, please refer to the Material Database section, see Chap. 6.2.8, see Chap. A 3.3.10.

Material name: Currently selected material for a thickness measurement

Material description: Description of the currently selected material

nd, nf and nC: Refractive index of the currently selected material at 587 nm, 486 nm and 656 nm

Abbe number: Abbe number for the currently selected material

The current material can be edited in Expert mode. Specified settings are stored immediately.

A 4.4.2.33 Object 2802h: Edit material table

| | | | | | |
|-------------|--------|--------------------------|---|----------------|----|
| 2802 | RECORD | Material table edit | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 4 | Unsigned8 | ro |
| 1 | VAR | Material delete | x | Visible string | wo |
| 2 | VAR | Reset materials | x | BOOL | wo |
| 3 | VAR | New material | x | BOOL | wo |
| 4 | VAR | Select material for edit | | Visible string | wo |

Material delete: Specify the name of a material to be deleted from the material table

Reset materials: Resets the material table to the factory settings

New material: Creates a new material in the material table. The newly created material ("NewMaterial") is edited in object 2800h "Material info".

Sub-index 4 selects the material that is to be edited in object 0x2800.

A 4.4.2.34 Object 2803h: Existing materials

| | | | | | |
|-------------|--------|---------------------|---------------|----------------|----|
| 2803 | RECORD | Material table | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 1 | Unsigned8 | ro |
| 1 | VAR | Material names list | "xx" "xx" ... | Visible string | ro |

Provides a list of all available materials.

A 4.4.2.35 Object 2804h: Select material for channel 1

| | | | | | |
|-------------|--------|------------------------|----|----------------|----|
| 2804 | RECORD | Material selection ch1 | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 5 | Unsigned8 | ro |
| 1 | VAR | Material 1 | xx | Visible string | rw |
| 2 | VAR | Material 2 | xx | Visible string | rw |
| 3 | VAR | Material 3 | xx | Visible string | rw |
| 4 | VAR | Material 4 | xx | Visible string | rw |
| 5 | VAR | Material 5 | xx | Visible string | rw |

Material 1 to 5:

Specifies the material between distances 1 - 2, 2 - 3, 3 - 4, 4 - 5 and 5 - 6. The selected material needs to be available in the material table.

Object 3804h includes the material selection for channel 2.

A 4.4.2.36 Object 2A00h: Mastering

| | | | | | |
|-------------|--------|-------------------|----|----------------|----|
| 2A00 | RECORD | Master 1 | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 5 | Unsigned8 | ro |
| 1 | VAR | Enable | xx | BOOL | rw |
| 2 | VAR | Signal | xx | Visible string | rw |
| 3 | VAR | Available signals | xx | Visible string | ro |
| 4 | VAR | Set/reset | xx | BOOL | rw |
| 5 | VAR | Value | xx | FLOAT32 | rw |

Masters or sets to zero a signal; there are 10 such objects (2A00h to 2A09h). References the MASTERSIGNAL command. The sub-index specifies which signal is to be mastered. Sub-index 3 corresponds to the META_MASTERSIGNAL command. Sub-index 4 corresponds to the MASTER command.

A 4.4.2.37 Object 2A10h: Statistics

| | | | | | |
|-------------|--------|-------------------|---|----------------|----|
| 2A10 | RECORD | Statistic 1 | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 6 | Unsigned8 | ro |
| 1 | VAR | Enable | | BOOL | rw |
| 2 | VAR | Signal | | Visible string | rw |
| 3 | VAR | Available signals | | Visible string | ro |
| 4 | VAR | Infinite | | BOOL | rw |
| 5 | VAR | Depth | | Unsigned32 | rw |
| 6 | VAR | Reset | | BOOL | rw |

The objects 2A10h to 2A19h generate 10 statistics signals.

Sub-index 3 corresponds to the META_STATISTICSIGNAL command.

Sub-index 6 corresponds to the STATISTIC command.

3 signals are generated for each activated statistics object. These signals are listed in object 0x2E00. The statistics function can also be applied to user signals.

Example: You want distance 1 (channel 1) to output the minimum and the maximum measured values using all previous distance values.

- Activating a statistics object
2A10:01(Enable) to TRUE. Distance 1 (01DIST1) is selected as signal by default. If you would like to display statistics for a different signal, you will need to select the required signal in sub-index 2.
- Settings for all previous distance values
2A10:04 (Infinite) to True (STATISTICSIGNAL – INFINITE)

Associating a user-defined signal with the PDO

The newly generated signal names appear in object 0x2E00h:

| | | | | | |
|---------|--------------|----|--------------|--------|---------------------------|
| 2E00:0 | User calc | RO | > 60 < | | |
| 2E00:01 | User calc 01 | RO | 01DIST1_MIN | 7C00:0 | UserCalcOutput01 RO > 1 < |
| 2E00:02 | User calc 02 | RO | 01DIST1_PEAK | 7C01:0 | UserCalcOutput02 RO > 1 < |
| 2E00:03 | User calc 03 | RO | 01DIST1_MAX | 7C02:0 | UserCalcOutput03 RO > 1 < |
| 2E00:04 | User calc 04 | RO | | 7C03:0 | UserCalcOutput04 RO > 1 < |
| 2E00:05 | User calc 05 | RO | | 7C04:0 | UserCalcOutput05 RO > 1 < |
| 2E00:06 | User calc 06 | RO | | 7C05:0 | UserCalcOutput06 RO > 1 < |
| 2E00:07 | User calc 07 | RO | | 7C06:0 | UserCalcOutput07 RO > 1 < |
| 2E00:08 | User calc 08 | RO | | 7C07:0 | UserCalcOutput08 RO > 1 < |
| 2E00:09 | User calc 09 | RO | | 7C08:0 | UserCalcOutput09 RO > 1 < |
| 2E00:0A | User calc 10 | RO | | 7C09:0 | UserCalcOutput10 RO > 1 < |

The minimum distance is output in 0x7C00h and the maximum distance is output in 0x7C02h.

Select PDO

UserCalcOutput01 – 0x7C00h is selected with object 1B00h, and 0x7C02h is output with object 1B10h

| | | |
|------|---------------------|--------|
| 1B00 | UserCalc01 TxPDOMap | |
| | UserCalcOutput01 | 0x7C00 |
| 1B08 | UserCalc02 TxPDOMap | |
| | UserCalcOutput02 | 0x7C01 |
| 1B10 | UserCalc03 TxPDOMap | |
| | UserCalcOutput03 | 0x7C02 |

Extract from TxPDO Mapping

Therefore, the following selections need to be made in 0x1C13h, 0x1B00h and 0x1B10h before PreOp is switched to SafeOp:

| | |
|---------------|------------------------------|
| 0x00 (0)1B00 | clear sm pdos (0x1C13) |
| 0x1B00 (6912) | download pdo 0x1C13:01 index |
| 0x1B10 (6928) | download pdo 0x1C13:02 index |
| 0x02 (2) | download pdo 0x1C13 count |

A 4.4.2.38 Object 2C00h: Measured value calculation for channel 1

| | | | | | |
|-------------|--------|-------------------|---|----------------|----|
| 2C00 | RECORD | Comp y ch1 | | | |
| Sub-indices | | | | | |
| 0 | VAR | Number of entries | 8 | Unsigned8 | ro |
| 1 | VAR | Type | | Unsigned16 | rw |
| 2 | VAR | Name1 | | Visible string | rw |
| 4 | VAR | Signal1 | | Visible string | rw |
| 5 | VAR | Signal2 | | Visible string | rw |
| 12 | VAR | Available signals | | ??? | ro |
| 13 | VAR | Factor1 | | FLOAT32 | rw |
| 14 | VAR | Factor2 | | FLOAT32 | rw |
| 17 | VAR | Offset | | Integer32 | rw |
| 18 | VAR | Param1 | | Unsigned32 | rw |

The Objects 2C00h to 2C09h generate 10 calculation modules for a channel.

The Objects 3C00h to 3C09 contain 10 calculation modules for channel 2.

The Objects 2CC0h to 2CC9 contain 10 calculation modules for computation of signals from both channels (IFC2422 only).

Type:

- 1 - Moving average (MOVING)
- 2 - Recursive average (RECURSIVE)
- 3 - Median (MEDIAN)
- 4 - Calculating two signals (CALC)

As soon as the type is changed, default settings are loaded for the selected type. You can only select signals from the corresponding channel.

Depending on the type, all other object entries have different meanings:

- Moving average (MOVING):

| | | |
|----|---------|--|
| 4 | Signal1 | Signal to which the filter will be applied (default ch x: 0xDIST1) |
| 18 | Param1 | Averaging number (default ch x: 2) |

Value range for Param1: 2|4|8|16|32|64|128|256|512|1024|2048|4096

- Recursive average (RECURSIVE):

| | | |
|----|---------|--|
| 4 | Signal1 | Signal to which the filter will be applied (default ch x: 0xDIST1) |
| 18 | Param1 | Averaging number (default ch x: 2) |

Value range for Param1: 2 ... 32000

- Median (MEDIAN)

| | | |
|----|---------|--|
| 4 | Signal1 | Signal to which the filter will be applied (default ch x: 0xDIST1) |
| 18 | Param1 | Averaging number (default chx/sys: 3) |

Value range for Param1: 3|5|7|9

- Calculating two signals (CALC)

| | | |
|----|---------|---|
| 2 | Name | Name of the generated signal |
| 4 | Signal1 | (default ch x: 0xDIST1, default sys: 01DIST1) |
| 5 | Signal2 | (default ch x: 0xDIST2, default sys: 02DIST1) |
| 13 | Factor1 | (default chx/sys: -1.0) |
| 14 | Factor2 | (default chx/sys: 1.0) |
| 18 | Offset | (default chx/sys: 0.0) |

$(\langle \text{factor1} \rangle * \langle \text{signal1} \rangle) + (\langle \text{factor2} \rangle * \langle \text{signal2} \rangle) + \langle \text{offset} \rangle$

Value range for offset (mm): -2147.0 ... 2147.0

i The object index determines the processing sequence and corresponds to the ID parameter for the ASCII command.

Example: Signal 01DIST1 is to be filtered using a median filter and an average value filter. The sequence is first median filter, then average value filter.

0x2C00:

| | | |
|----|---------|--------------------|
| 1 | Type | 3 (Median) |
| 4 | Signal1 | 01DIST1 |
| 18 | Param1 | <Averaging number> |

0x2C01:

| | | |
|----|---------|-----------------------|
| 1 | Type | 2 (Recursive average) |
| 4 | Signal1 | 01DIST1 |
| 18 | Param1 | <Averaging number> |

Filters can also be applied to user signals.

A 4.4.2.39 Object 2CBFh: Sys Signals

| | | | | | |
|------|--------|-------------|--|--|--|
| 2CBF | RECORD | Sys signals | | | |
|------|--------|-------------|--|--|--|

Sub-indices

| | | | | | |
|---|-----|-------------------|---|-----------|----|
| 0 | VAR | Number of entries | 2 | Unsigned8 | ro |
| 1 | VAR | Range lower | | FLOAT32 | rw |
| 2 | VAR | Range upper | | FLOAT32 | rw |

References the SYSSIGNALRANGE command.

A 4.4.2.40 Object 2E00: User signals

| | | | | | |
|------|--------|-----------|--|--|--|
| 2E00 | RECORD | User calc | | | |
|------|--------|-----------|--|--|--|

Sub-indices

| | | | | | |
|-----|-----|-------------------|----|----------------|----|
| 0 | VAR | Number of entries | 60 | Unsigned8 | ro |
| 1 | VAR | User calc 01 | | Visible string | ro |
| 2 | VAR | User calc 02 | | Visible string | ro |
| ... | | | | | |
| 3C | VAR | User calc 60 | | Visible string | ro |

Names of the user signals that are output in the 0x7C0xh objects. The sequence specifies the order of the PDO data. The PDOs are selected via the 0x1B0xh objects.

A 4.5 Mappable objects – process data

Displays all individually available process data.

The objects 0x600x, 0x680x, 0x700x and 0x7C0x are structured as follows:

| [INDEX] | | [NAME] | | | |
|---------|---|-------------|-------------|------|---------|
| | 0 | Sub-index 0 | Uint8 | READ | 1 (fix) |
| | 1 | Sub-index 1 | [DATA TYPE] | READ | - |

Table 3

Objects 0x6000: Process data for channel 1

Objects 0x6800: Process data for channel 2, only available with IFC2422

Objects 0x7000: System process data (process data that are not available per channel)

Objects 0x7C00: Calculated process data

The names of the objects are based on the names of potential parameters for the OUT_ETH command.

i The process data for the objects are not yet available after switching on. Only a successful state change from PreOP to SafeOP makes the process data available which were selected through object 0x1C13h or the mapping objects for the PDO output. If the state changes from SafeOP to OP, all previously selected process data are still available.

CH0x: Channel/sensor x;
x = {1, 2}

DISTy: Distance y;
y = {1, 2, ..., 6}

| INDEX | NAME | INDEX | NAME | [DATA TYPE] |
|-------|------------------|-------|----------------|-------------|
| 6000 | CH01DIST1 | 6800 | CH02DIST1 | INT32 |
| 6001 | CH01DIST2 | 6801 | CH02DIST2 | INT32 |
| 6002 | CH01DIST3 | 6802 | CH02DIST3 | INT32 |
| 6003 | CH01DIST4 | 6803 | CH02DIST4 | INT32 |
| 6004 | CH01DIST5 | 6804 | CH02DIST5 | INT32 |
| 6005 | CH01DIST6 | 6805 | CH02DIST6 | INT32 |
| 6010 | CH01INTENSITY1 | 6810 | CH02INTENSITY1 | UINT32 |
| 6011 | CH01INTENSITY2 | 6811 | CH02INTENSITY2 | UINT32 |
| 6012 | CH01INTENSITY3 | 6812 | CH02INTENSITY3 | UINT32 |
| 6013 | CH01INTENSITY4 | 6813 | CH02INTENSITY4 | UINT32 |
| 6014 | CH01INTENSITY5 | 6814 | CH02INTENSITY5 | UINT32 |
| 6015 | CH01INTENSITY6 | 6815 | CH02INTENSITY6 | UINT32 |
| 6020 | CH01UNLIN1 | 6820 | CH02UNLIN1 | UINT32 |
| 6021 | CH01UNLIN2 | 6821 | CH02UNLIN2 | UINT32 |
| 6022 | CH01UNLIN3 | 6822 | CH02UNLIN3 | UINT32 |
| 6023 | CH01UNLIN4 | 6823 | CH02UNLIN4 | UINT32 |
| 6024 | CH01UNLIN5 | 6824 | CH02UNLIN5 | UINT32 |
| 6025 | CH01UNLIN6 | 6825 | CH02UNLIN6 | UINT32 |
| 6030 | CH01SHUTTER | 6830 | CH02SHUTTER | UINT32 |
| 6050 | CH01ENCODER1 | 6850 | CH02ENCODER1 | UINT32 |
| 6051 | CH01ENCODER2 | 6851 | CH02ENCODER2 | UINT32 |
| 7000 | COUNTER | | | UINT32 |
| 7001 | TIMESTAMP | | | UINT32 |
| 7002 | FREQUENCY | | | UINT32 |
| 7C00 | UserCalcOutput01 | | | INT32 |
| 7C01 | UserCalcOutput02 | | | INT32 |
| ... | ... | | | ... |
| 7C3B | UserCalcOutput60 | | | INT32 |

Fig. 91 Mappable Objects

A 4.6 Error codes for SDO services

If an SDO requirement is evaluated as negative, a corresponding error code is added to the “Abort SDO Transfer Protocol”.

| Hexadecimal error code | Meaning |
|------------------------|---|
| 0503 0000 | Toggle bit did not change |
| 0504 0000 | SDO protocol timeout expired |
| 0504 0001 | Invalid command entered |
| 0504 0005 | Insufficient memory |
| 0601 0000 | Access to object (parameter) not supported |
| 0601 0001 | Attempt to read a “write-only parameter” |
| 0601 0002 | Attempt to write a “read-only parameter” |
| 0602 0000 | Object (parameter) is not listed in the object directory |
| 0604 0041 | Object (parameter) cannot be mapped to PDO |
| 0604 0042 | Number or length of the transfer objects exceeds the PDO length |
| 0604 0043 | General parameter incompatibility |
| 0604 0047 | General internal device incompatibility |
| 0606 0000 | Access denied due to a hardware error |
| 0607 0010 | Incorrect data type or length of the service parameter does not match |
| 0607 0012 | Incorrect data type or the service parameter is too long |
| 0607 0013 | Incorrect data type or the service parameter is too short |
| 0609 0011 | Sub-index does not exist |
| 0609 0030 | Invalid value for the parameter (only for write access) |
| 0609 0031 | Value of parameter too high |
| 0609 0032 | Value of parameter too low |
| 0609 0036 | Maximum value is below minimum value. |
| 0800 0000 | General error |
| 0800 0020 | Unable to transfer data to the application or unable to store data |
| 0800 0021 | Unable to transfer data to the application or unable to store data. Cause: local control |
| 0800 0022 | Unable to transfer data to the application or unable to store data. Cause: device state |
| 0800 0023 | Dynamic generation of the object directory failed or no object directory available |

A 4.7 Oversampling

In operation without oversampling, the last acquired data record containing measured values is transmitted to the EtherCAT Master with each fieldbus cycle, see Chap. A 4.4.1.7. Therefore, for long fieldbus cycle periods many data records with measured values are not available. Configurable oversampling ensures that all (or selected) measured value data records are gathered and transmitted together to the master during the next fieldbus cycle.

The oversampling factor specifies how many samples per bus cycle are transmitted. For example, an oversampling factor of 2 means that 2 samples are transferred per bus cycle.

With TxPDO Mapping, see Fig. 90, the base index of the PDO mapping objects is included with the oversampling factor 1. Use the following list to determine the index for selecting a different oversampling factor:

- Base index + 1: Oversampling factor 2
- Base index + 2: Oversampling factor 4
- Base index + 3: Oversampling factor 8

You can only select mapping objects with the same oversampling factor in 0x1C13h.

Example:

- The fieldbus/EtherCAT master operates at a cycle time of 1 ms because the higher-level PLC works with a cycle time of 1 ms. This means that every 1 ms, an EtherCAT frame is sent to the IFC242x to pick up process data. If the measuring frequency in the IFC242x is set to 4 kHz, you need to specify an oversampling of 4.
- Startup procedure to output distance 1 for channel 1 (01DIST1) and distance 2 for channel 1 (01DIST2) with an oversampling factor of 4.
 - Set the object peak count 2156:01h to 2 in order to get two distances.
 - Distance 1 for channel 1 is output in object 6000h. In order to transfer this object in the PDO, the PDO mapping object 0x1A00 must be selected in object 0x1C13:01h. However, 0x1A02 (base index 0x1A00 + 2) must be selected for the 4-fold oversampling.

| | | | | |
|---|---------|------------------------|----|---------------|
| + | 1A01:0 | Ch01Dist1 TxPDOMap OV2 | RO | > 2 < |
| - | 1A02:0 | Ch01Dist1 TxPDOMap OV4 | RO | > 4 < |
| | 1A02:01 | Subindex 001 | RO | 0x6000:01, 32 |
| | 1A02:02 | Subindex 002 | RO | 0x6000:01, 32 |
| | 1A02:03 | Subindex 003 | RO | 0x6000:01, 32 |
| | 1A02:04 | Subindex 004 | RO | 0x6000:01, 32 |
| + | 1A03:0 | Ch01Dist1 TxPDOMap OV8 | RO | > 8 < |

- Distance 2 for channel 1 is output in object 6001h. In order to transfer this object in the PDO, the PDO mapping object 0x1A10 must be selected in object 0x1C13:02h. However, 0x1A12 (base index 0x1A10 + 2) must be selected for the 4-fold oversampling.

Sync Manager:

| SM | Size | Type | Flags |
|----|------|---------|-------|
| 0 | 256 | MbxOut | |
| 1 | 256 | MbxIn | |
| 2 | 0 | Outputs | |
| 3 | 32 | Inputs | |

PDO Liste:

| Index | Size | Name |
|--------|------|---------------|
| 0x1A00 | 4.0 | Ch01Dist1 OV1 |
| 0x1A01 | 8.0 | Ch01Dist1 OV2 |
| 0x1A02 | 16.0 | Ch01Dist1 OV4 |
| 0x1A03 | 32.0 | Ch01Dist1 OV8 |
| 0x1A08 | 4.0 | Ch02Dist1 OV1 |
| 0x1A09 | 8.0 | Ch02Dist1 OV2 |
| 0x1A0A | 16.0 | Ch02Dist1 OV4 |
| 0x1A0B | 32.0 | Ch02Dist1 OV8 |
| 0x1A10 | 4.0 | Ch01Dist2 OV1 |
| 0x1A11 | 8.0 | Ch01Dist2 OV2 |
| 0x1A12 | 16.0 | Ch01Dist2 OV4 |
| 0x1A13 | 32.0 | Ch01Dist2 OV8 |
| 0x1A18 | 4.0 | Ch02Dist2 OV1 |

PDO Zuordnung (0x1C13):

- 0x1A00 (excluded by 0x1A02)
- 0x1A01 (excluded by 0x1A02)
- 0x1A02
- 0x1A03 (excluded by 0x1A02)
- 0x1A08
- 0x1A09
- 0x1A0A
- 0x1A0B
- 0x1A10 (excluded by 0x1A12)
- 0x1A11 (excluded by 0x1A12)
- 0x1A12
- 0x1A13 (excluded by 0x1A12)

Download

PDO Zuordnung

PDO Konfiguration

PDO Inhalt (0x1A00):

| Index | Size | Offs | Name |
|-----------|------|------|----------|
| 0x6000:01 | 4.0 | 0.0 | CH01DIST |
| | | 4.0 | |


Predefined PDO Assignment: (keine)

Lade PDO Info aus dem Gerät


Sync Unit Zuordnung...

To ensure that no samples are lost due to the asynchronous nature between the master cycle and slave cycle, the master cycle time should always be less than the time for building a block from n samples.

An entire block with the specified samples is only made available to the EtherCAT side after all specified samples have been written to the block. If the time for filling a block is less than the master cycle time, individual blocks are not transferred. It can indeed happen that the next block is already being filled with samples before the previously filled block is picked up in a master cycle.

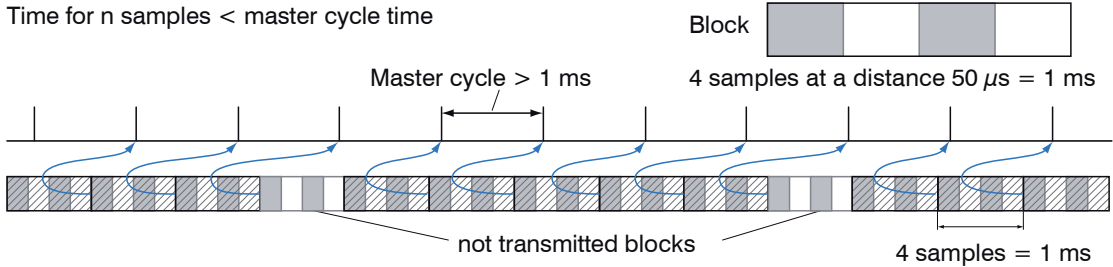

But if you select a number of samples sufficiently large so that the time for filling a block is greater than the master cycle time, each block will be picked up in a master cycle. Individual blocks (and therefore samples), however, will be transferred two or more times. This can be detected on the master side by transferring the timestamp or value counter (see object 0x21B0).

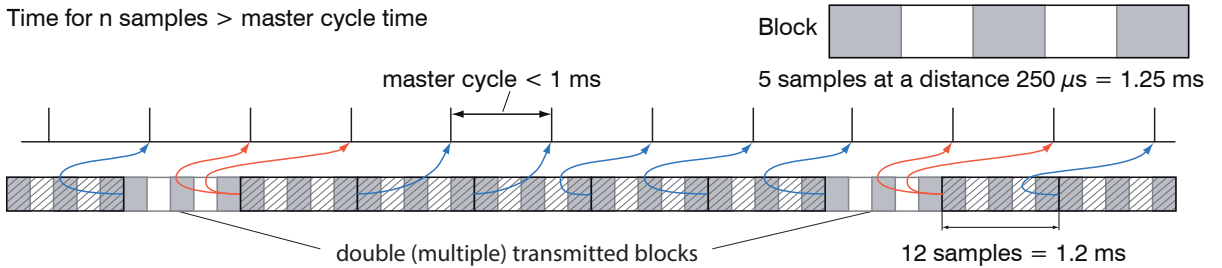

A 4.8 Calculations

A 4.8.1 Setting a filter

The function for an average or median filter has been explained, see Chap. A 4.4.2.38.

A 4.8.2 Thickness calculation

Sequence for outputting a thickness (distance 1 to distance 2) in the PDO:

Steps 1 and 2 are not required when using the `Single side thickness` preset. To activate this preset, `Single side thickness` must be written to object 2012:03h, see Chap. A 4.4.2.6. Please note that this also modifies other settings.

➔ Step 1: Set the number of expected peaks to 2.

| | | | |
|---------|---------------------------------|----|----------|
| 2156:0 | Multilayer options ch 1 | RO | > 2 < |
| 2156:01 | Peak count | RW | 0x02 (2) |
| 2156:02 | Disable refractivity correction | RW | FALSE |

➔ Step 2: Set up the calculation for object 2C00:

Set sub-index 1 to 4h. The name for the generated signal is `THICK12`.
 Formula for the calculation: $THICK12 = -1.0 \times 01DIST1 + 1.0 \times 01DIST2 + 0.0$
 The factors and the offset must be defined accordingly:

| | | | |
|---------|------------|----|----------------------------|
| 2C00:0 | Comp 1 ch1 | RO | > 25 < |
| 2C00:01 | Type | RW | 0x0004 (4) |
| 2C00:02 | Name | RW | THICK12 |
| 2C00:03 | Signal1 | RW | 01DIST1 |
| 2C00:04 | Signal2 | RW | 01DIST2 |
| 2C00:0D | Factor1 | RW | -1.000000 (-1.000000e+000) |
| 2C00:0E | Factor2 | RW | 1.000000 (1.000000e+000) |
| 2C00:17 | Offset | RW | 0.000000 (0.000000e+000) |
| 2C00:18 | Param1 | RW | 0x00000000 (0) |

➔ Step 3: Assigning a user-defined signal to a PDO

2E00h now includes the new signal name (all user-defined signals are displayed starting with sub-index 1).

| | | | | |
|---------|--------------|----|---------|----------------------------------|
| 2E00:0 | User calc | RO | > 40 < | |
| 2E00:01 | User calc 01 | RO | THICK12 | |
| 2E00:02 | User calc 02 | RO | | 7C00:0 UserCalcOutput01 RO > 1 < |
| 2E00:03 | User calc 03 | RO | | 7C01:0 UserCalcOutput02 RO > 1 < |
| 2E00:04 | User calc 04 | RO | | 7C02:0 UserCalcOutput03 RO > 1 < |
| 2E00:05 | User calc 05 | RO | | 7C03:0 UserCalcOutput04 RO > 1 < |
| 2E00:06 | User calc 06 | RO | | 7C04:0 UserCalcOutput05 RO > 1 < |
| 2E00:07 | User calc 07 | RO | | 7C05:0 UserCalcOutput06 RO > 1 < |
| 2E00:08 | User calc 08 | RO | | 7C06:0 UserCalcOutput07 RO > 1 < |
| 2E00:09 | User calc 09 | RO | | 7C07:0 UserCalcOutput08 RO > 1 < |
| 2E00:0A | User calc 10 | RO | | 7C08:0 UserCalcOutput09 RO > 1 < |
| | | | | 7C09:0 UserCalcOutput10 RO > 1 < |

➔ Step 4: Select the PDO.

UserCalcOutput01 – 0x7C00h is selected with 0x1B00h:

| | |
|------|--------------------|
| 1B00 | UserCalc01 TxPDMap |
| | UserCalcOutput01 |
| | 0x7C00 |
| 1B08 | UserCalc02 TxPDMap |

Before PreOp is changed to SafeOp, the following must be selected in 0x1C13h and 0x1B00h:

| | | |
|-----------|---------------|------------------------------|
| 0x1C13:00 | 0x00 (0) | clear sm pdos (0x1C13) |
| 0x1C13:01 | 0x1B00 (6912) | download pdo 0x1C13:01 index |
| 0x1C13:00 | 0x01 (1) | download pdo 0x1C13 count |

A 4.8.3 Channel calculation

A channel calculation can only be performed with controller IFC2422. The thickness calculation principles apply, see Chap. A 4.8.2. The calculation itself, however, is performed in object 0x2CC0h.

A 4.9 Operational modes

A 4.9.1 Free run

There is no synchronization. The PDOs are updated in line with the internal measuring rate. The measuring rate is set using object 0x2251h.

Use the measured value counter in 0x7000h or 0x1AE0h to ensure that no measured values are evaluated twice due to the lack of synchronization.

A 4.9.2 Distributed clocks SYNC0 synchronization

The measuring rate is determined by the SYNC0 cycle time. In this mode, an EtherCAT master can synchronize the measured value acquisition for the EtherCAT cycle time and the measured value acquisition for multiple controllers.

The ESI-XML file includes predefined SYNC0 cycle times. But you can set any cycle time between 153846 ns (measuring rate=6.5 kHz) and 10,000,000 ns (measuring rate=0.1 kHz).


A 4.10 Video signal via SDO

The output of the video signal for channel 1 is activated via object 0x2142:1h and the output of the video signal for channel 2 via object 0x3142:1.

Every time a video image is triggered via object 0x2141:2h, objects 0x8000h (channel 1) and 0x8800 (channel 2) store the new image data. The data are provided as 1024-byte octet strings. On the side of the EtherCAT master, the data need to be interpreted as vector of 16-bit unsigned integers.

The output of the video signal can be parallel to the PDO output of process data. The process data in objects 0x6000h to 0x7FFFh will no longer be updated cyclically once a video signal has been activated. Instead, updates will be triggered by video images. This ensures that each video image can be associated with the distance value that is calculated for this image.

A 4.11 STATUS LEDs in EtherCAT operation

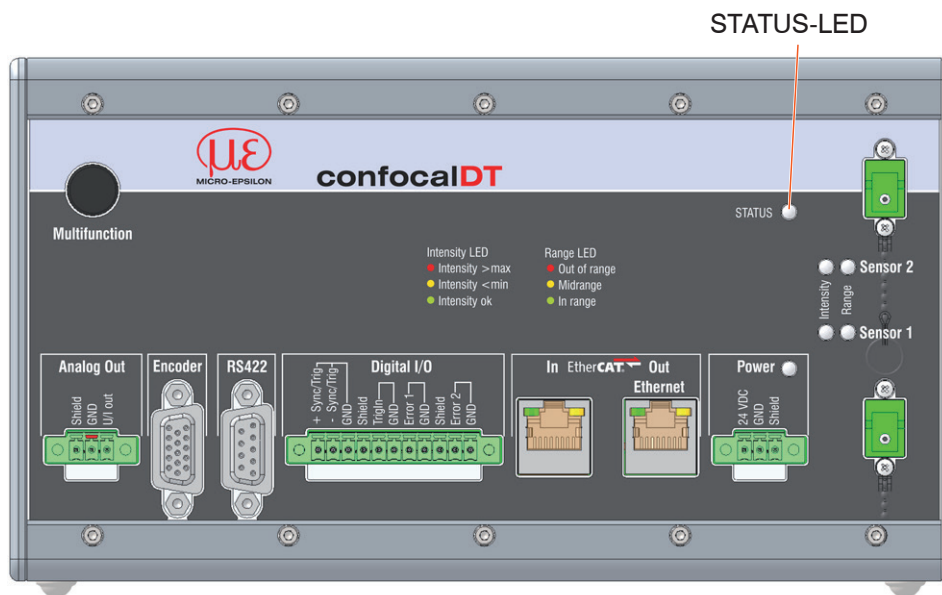

| | | |
|-------------------|--|-----------------------------|
| Status LED | Green state: | |
| | Green off | INIT state |
| | Green flashing 2.5 Hz | PRE-OP state |
| | Green single flash, 200 ms ON / 1000 ms OFF | SAFE-OP state |
| | Green on | OP state |
| | | |
| | Red faults (displayed while green LED pauses): | |
| | Red off | No fault |
| | Red flashing 2.5 Hz | Invalid configuration |
| | Red single flash, 200 ms ON / 1000 ms OFF | Unrequested change of state |
| | Red double flash, 200 ms ON / 200 ms OFF 200 ms ON 400 ms OFF | Watchdog timeout |
| | Red flashing 10 Hz | Error during initialization |

A 4.12 EtherCAT configuration with the Beckhoff TwinCAT® Manager

An example for an EtherCAT master on the PC is the Beckhoff TwinCAT Manager.


- Before you can use EtherCAT for the controller, the controller must be configured for EtherCAT operation, see Chap. A 4.2.
- Before the measuring device can be configured for EtherCAT®, you need to copy the device description file (EtherCAT® slave information) IFC242x.xml from the supplied CD to the directory C:\TwinCAT\3.1\Config\Io\EtherCAT.
- Delete any existing older files.

EtherCAT® slave information files are XML files that specify the properties of the slave device for the EtherCAT® master. They contain information about the supported communication objects.


- Restart the TwinCAT manager after the copy operation.

Searching for a device:


- Select the I/O Devices tab and then select Scan.
- Confirm with OK.

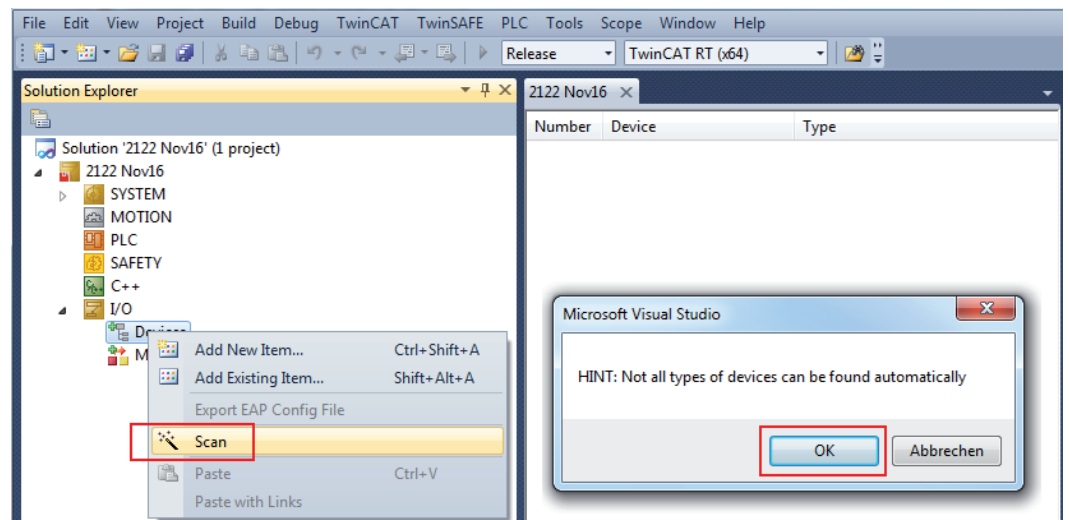

- Select a network card which will be searched for EtherCAT® slaves.

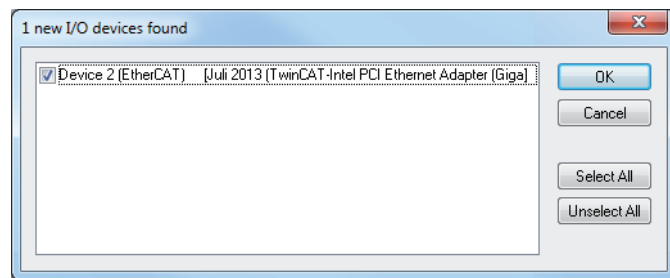

- Confirm with OK.

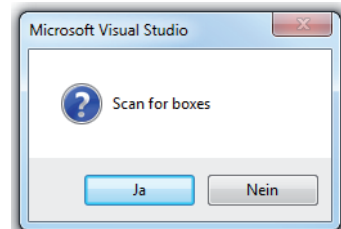


The "Scan for boxes" window appears (EtherCAT® slaves).


- Confirm with Yes.

The confocalDT 242x is now included in a list.

- Acknowledge the Activate Free Run window with Yes.

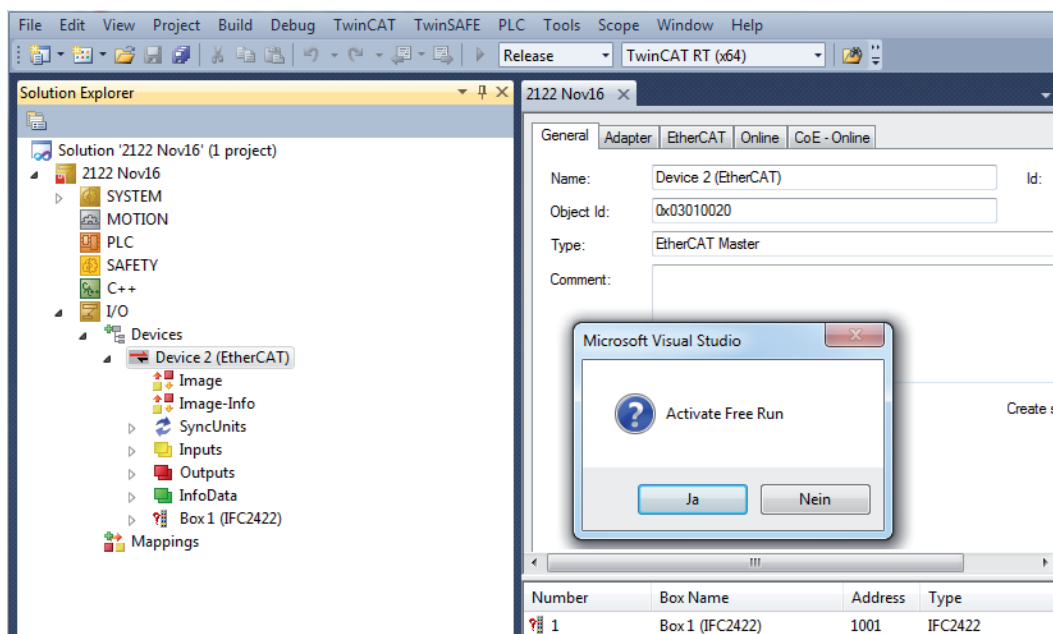


The current status on the online side should at least indicate PREOP, SAFEOP or OP.

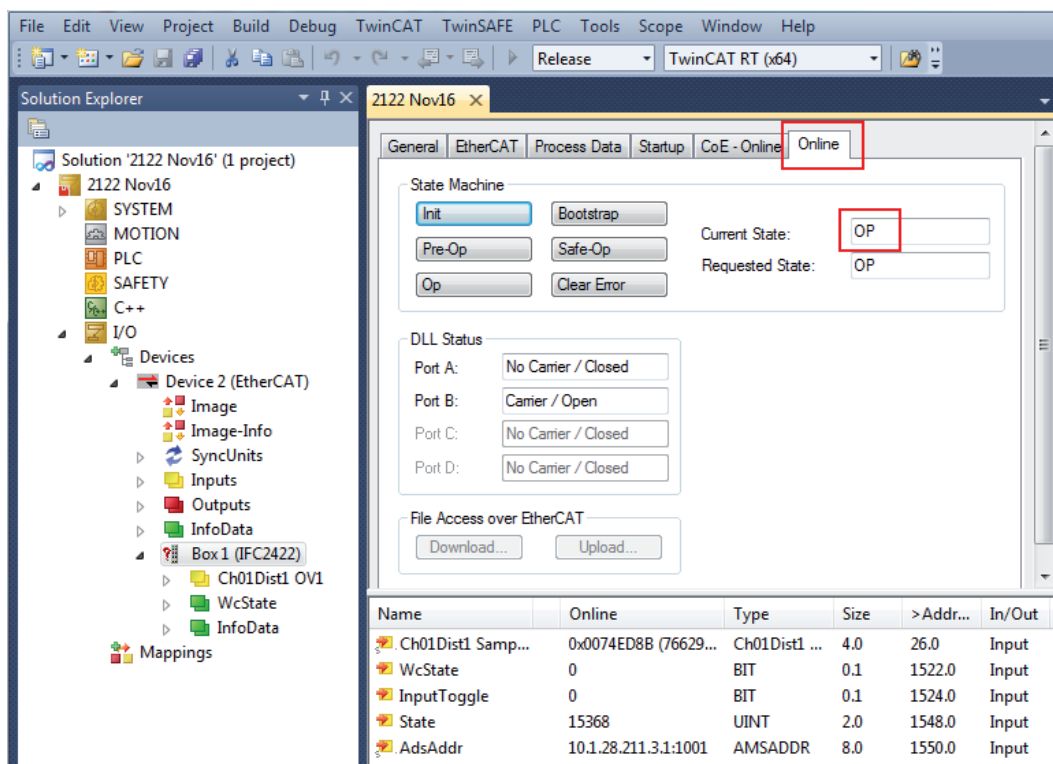

In the event that ERR PREOP appears in Current Status, the cause is reported in the message window. This is the case if the PDO mapping settings in the controller are different from the settings in the ESI file (confocalDT24XX.xml).


The factory settings specify only one measurement (distance 1) as output value (both in the controller and in the ESI file).

You can select additional data on the Process Data tab.

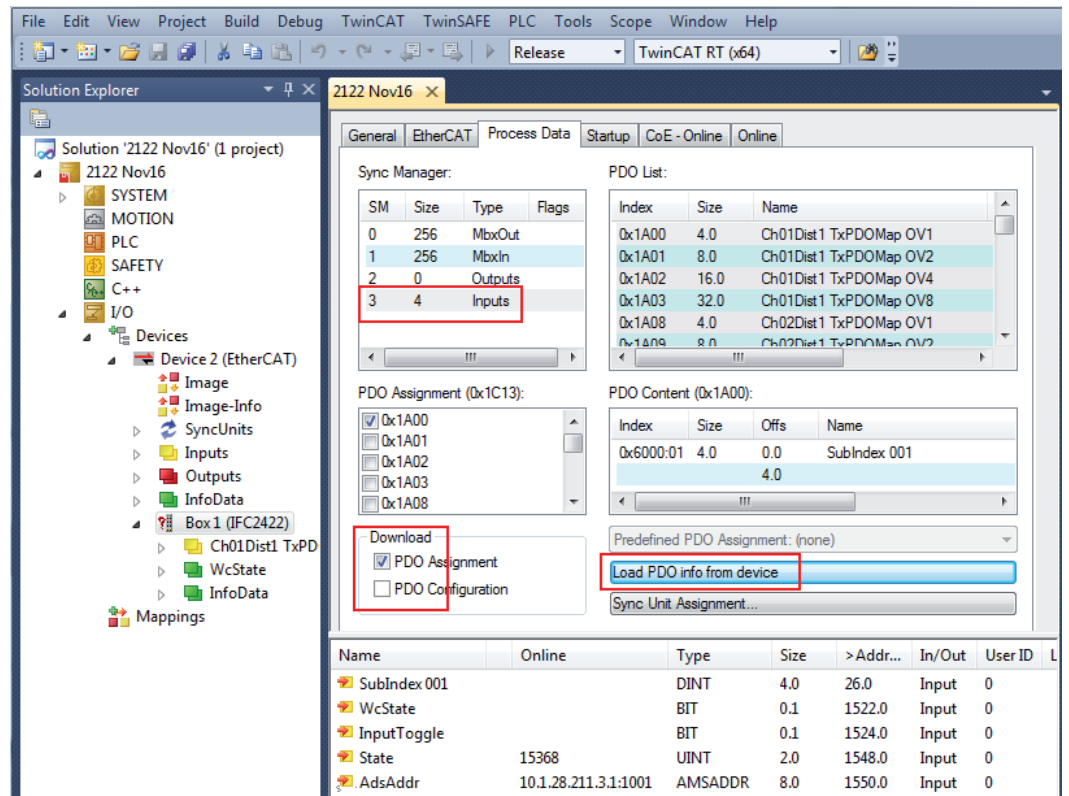


You can now view the scope of available process data and the assignment of sync managers.

➡ From the TwinCAT menu select the Restart TwinCAT (Config Mode) tab.

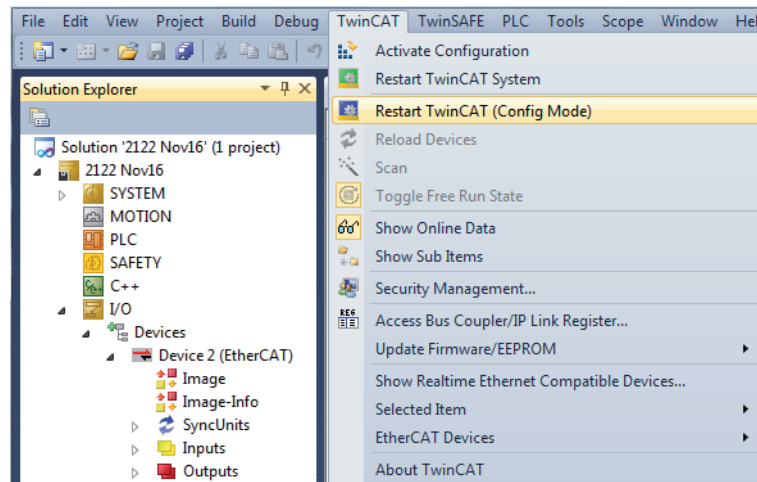

Configuration is now complete.

In the SAFEOP and OP states, the selected measurements are transmitted as process data.

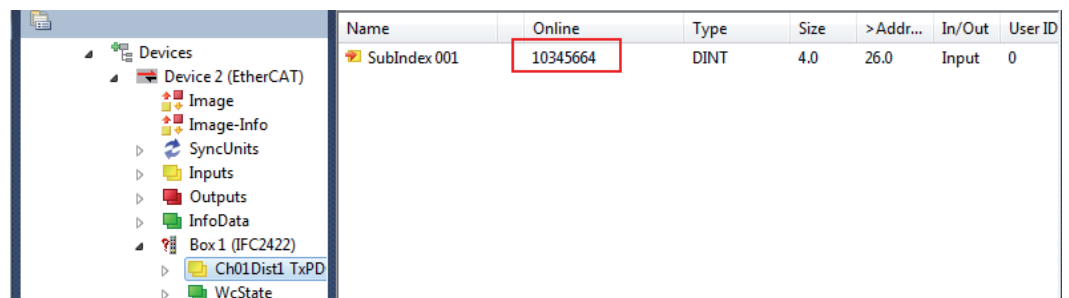



MICRO-EPSILON MESSTECHNIK GmbH & Co. KG
Koenigbacher Str. 15 · 94496 Ortenburg / Germany
Tel. +49 (0) 8542 / 168-0 · Fax +49 (0) 8542 / 168-90
info@micro-epsilon.com · www.micro-epsilon.com
Your local contact: www.micro-epsilon.com/contact/worldwide/

X9751367-A042080SWE
© MICRO-EPSILON MESSTECHNIK

